

HONDA

CRF450RX/R

OWNER'S MANUAL & COMPETITION HANDBOOK

E

MANUEL DU CONDUCTEUR ET DE COMPETITION

F

FAHRERHANDBUCH und WETTBEWERBSANLEITUNG

G

INSTRUCTIEBOEKJE & WEDSTRIJDHANDBOEK

D

MANUAL DEL PROPIETARIO Y GUÍA DE COMPETICIONES

S

MANUALE D'USO E DEGLI ASSETTI DA COMPETIZIONE

I

IMPORTANT NOTICES

THIS MOTORCYCLE IS DESIGNED AND MANUFACTURED FOR COMPETITION USE ONLY AND IS SOLD “AS IS” WITH NO WARRANTY. IT DOES NOT CONFORM TO FEDERAL MOTOR VEHICLE SAFETY STANDARDS AND OPERATION ON PUBLIC STREETS, ROADS, OR HIGHWAYS IS ILLEGAL.

STATE LAWS PROHIBIT OPERATION OF THIS MOTORCYCLE EXCEPT IN AN ORGANIZED RACING OR COMPETITIVE EVENT UPON A CLOSED COURSE WHICH IS CONDUCTED UNDER THE AUSPICES OF A RECOGNIZED SANCTIONING BODY OR BY PERMIT ISSUED BY THE LOCAL GOVERNMENTAL AUTHORITY HAVING JURISDICTION.

FIRST DETERMINE THAT OPERATION IS LEGAL.

OPERATOR ONLY, NO PASSENGERS.

This motorcycle is designed and constructed as an operator-only model.
The motorcycle load limit and seating configuration do not safely permit the carrying of a passenger.


READ THIS MANUAL CAREFULLY.

This manual should be considered a permanent part of the motorcycle and should remain with the motorcycle when it is resold.






All information in this publication is based on the latest product information available at the time of approval for printing. Honda Motor Co., Ltd. reserves the right to make changes at any time without notice and without incurring any obligation.

No part of this publication may be reproduced without written permission.

© Honda Motor Co., Ltd., 2018

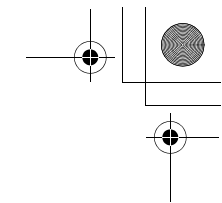

Honda CRF450RX/CRF450R
OWNER'S MANUAL & COMPETITION HANDBOOK

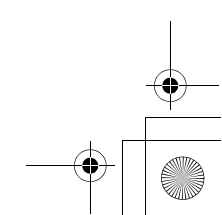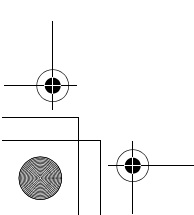

Introduction

Congratulations on choosing your Honda CRF off-road racing (CRF450RX)/motocross (CRF450R), motorcycle.

When you own a Honda, you're part of a worldwide family of satisfied customers – people who appreciate Honda's reputation for building quality into every product.

Your CRF is a high performance racing motorcycle that utilizes the latest off-road racing (CRF450RX)/motocross (CRF450R) technology and is intended for competition use in sanctioned, closed-course events by experienced riders only.

Be aware that off-road racing (CRF450RX)/motocross (CRF450R) is a physically demanding sport that requires more than just a fine motorcycle. To do well, you must be in excellent physical condition and be a skillful rider. For the best results, work diligently on your physical conditioning and practice frequently.

Before riding, take time to get acquainted with your CRF and how it works. To protect your investment, we urge you to take responsibility for keeping your CRF well maintained. Scheduled service is a must, of course. But it's just as important to observe the break-in guidelines, and perform all the pre-ride and other periodic checks detailed in this manual.

You should also read the owner's manual before you ride. It's full of facts, instructions, safety information, and helpful tips. To make it easy to use, the manual contains a table of contents, a detailed list of topics at the beginning of each section, and an index at the back of the book.

As you read this manual, you will find information that is preceded by a **NOTICE** symbol. This information is intended to help you avoid damage to your Honda, other property, or the environment.

Unless you are mechanically qualified and have the proper tools, you should see your dealer for the service and adjustment procedures discussed in this manual.

If you have any questions, or if you ever need a special service or repairs, remember that your Honda dealer knows your CRF best and is dedicated to your complete satisfaction.

Happy riding!

- The following codes in this manual indicate each country.
(CRF450RX)

ED	European direct sales
----	-----------------------

(CRF450R)

ED	European direct sales
U	Australia, New Zealand

- The illustrations and pictures herein are based on the CRF450RX ED type.
- This vehicle pictured in this owner's manual may not match your actual vehicle.

ABBREVIATION

Throughout this manual, the following abbreviations are used to identify the respective parts or system.

Abbrev. term	Full term
CKP sensor	Crankshaft Position sensor
DLC	Data Link Connector
DTC	Diagnostic Trouble Code
ECM	Engine Control Module
ECT sensor	Engine Coolant Temperature sensor
GP sensor	Gear Position sensor
IAT sensor	Intake Air Temperature sensor
MAP sensor	Manifold Absolute Pressure sensor
MIL	Malfunction Indicator Lamp
PGM-FI	Programmed Fuel Injection
TDC	Top Dead Centre
TP sensor	Throttle Position sensor

A Few Words About Safety

Your safety, and the safety of others, is very important. And operating this motorcycle safely is an important responsibility.

To help you make informed decisions about safety, this manual contains a section devoted to *Motorcycle Safety*, as well as a number of Safety Messages throughout the manual.

Safety Messages are preceded by a safety alert symbol  and one of three signal words: **DANGER**, **WARNING**, or **CAUTION**.

These signal words mean:

 **DANGER**

You **WILL** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

 **WARNING**

You **CAN** be **KILLED** or **SERIOUSLY HURT** if you don't follow instructions.

 **CAUTION**

You **CAN** be **HURT** if you don't follow instructions.



Of course, it is not practical or possible to warn you about all hazards associated with operating or maintaining a motorcycle. You must use your own good judgement.


Contents

MOTORCYCLE SAFETY..... 1	Maintenance Schedule (CRF450RX) 29	Cleaning..... 71
Important Safety Information 2	Maintenance Schedule (CRF450R) 30	Crankcase Breather 73
Important Safety Precautions 2	General Competition Maintenance 31	Draining..... 73
Accessories & Modifications 3	Before & After Competition Maintenance 35	
Accessories & Modifications 3	Between Races (CRF450RX)/Heats	Engine
Labels (ED type) 4	(CRF450R) & Practice Maintenance 35	Throttle 74
Safety Labels (U type) 8	After Competition Maintenance 36	Throttle Freeplay 74
		Throttle Inspection 75
INSTRUMENTS & CONTROLS..... 9	<i>Service Preparations</i>	Throttle Cable Lubrication 75
Operation Component Locations 10	Maintenance Component Locations 37	Engine Idle Speed 76
MIL (Malfunction Indicator Lamp) 11	Seat 38	Idle Speed Adjustment 76
MIL Blink Pattern 11	Fuel Tank (CRF450RX) 39	Clutch System 77
Current DTC/Freeze DTC 11	Fuel Tank (CRF450R) 41	Clutch Lever Freeplay 77
Circuit Inspection 12	Subframe 43	Other Inspections..... 78
DTC Index..... 13	<i>Service Procedures</i>	Clutch Operation 78
Engine Mode &	Fluids & Filters	Clutch Cable Lubrication 78
Launch Control System Indicator 14	Fuel System (CRF450RX) 46	Clutch Disc/Plate Removal 79
Engine Mode Indicator 14	Fuel 46	Clutch Disc/Plate/Spring Inspection 80
Launch Control System Indicator 14	Refuelling Procedure 46	Clutch Disc/Plate Installation..... 80
	Fuel Line Inspection 46	Spark Plug 82
BEFORE RIDING..... 15	Fuel Pressure Relieving 47	Spark Plug Recommendation 82
Are You Ready to Ride? 16	Fuel Line Replacement 47	Spark Plug Inspection & Replacement..... 82
Is Your Motorcycle Ready to Ride? 17	Fuel Pump Filter Replacement 50	Valve Clearance 83
Pre-ride Inspection 17	Fuel Pressure Increasing 55	Cylinder Head Cover Removal 83
	Fuel System (CRF450R) 56	Positioning At TDC On The Compression
BASIC OPERATING INSTRUCTIONS 19	Fuel 56	Stroke..... 84
Basic Operating Instructions 20	Refuelling Procedure 56	Valve Clearance Inspection..... 85
Safe Riding Precautions 20	Fuel Line Inspection 56	Camshaft Removal 85
Side Stand (CRF450RX)..... 20	Fuel Pressure Relieving 57	Shim Selection..... 87
Starting & Stopping the Engine 21	Fuel Line Replacement 57	Camshaft Installation..... 88
Fast Idle Knob 21	Fuel Pump Filter Replacement 60	Crankshaft Hole Cap Installation 90
Preparation 21	Fuel Pressure Increasing 65	Cylinder Head Cover Installation..... 91
Starting Procedure 21	Engine Oil 66	Piston/Piston Rings/Piston Pin 92
How to Stop the Engine 22	Oil Recommendation 66	Cylinder Head Removal 92
Parking (CRF450RX) 23	Checking & Adding Oil..... 67	Cylinder Removal..... 94
Break-in Guidelines 24	Changing Engine Oil & Filter..... 67	Piston Removal..... 94
	Coolant 69	Piston Ring Removal..... 94
SERVICING YOUR HONDA..... 25	Coolant Recommendation..... 69	Piston/Piston Pin/Piston Ring Inspection 95
<i>Before You Service Your Honda</i>	Checking & Adding Coolant 69	Piston Ring Installation 95
The Importance of Maintenance 26	Cooling System Inspection 70	Piston Installation..... 96
Maintenance Safety 27	Coolant Replacement..... 70	Cylinder Installation 97
Important Safety Precautions 27	Air Cleaner 71	Cylinder Head Installation..... 98
Maintenance Schedule 28		

Contents

Chassis			
Suspension	101	Exhaust Pipe Removal	133
Front Suspension Inspection	101	Exhaust Pipe Installation	133
Front Suspension Removal	102	Additional Maintenance Procedures	134
Recommended Fork Oil	104	Steering Head Bearing Inspection	134
Fork Outer Tube Disassembly	104	Handlebar Inspection	134
Fork Oil Refilling	105	Control Cables	134
Front Suspension Installation	106	Nuts, Bolts, Fasteners	135
Fork Damper Disassembly	109		
Damper Oil Change	111	Electrical	
Fork Damper Installation	114	Battery	136
Rear Suspension Inspection	117	Battery Storage	136
Brakes	118	Battery Charging	137
Front Brake Lever Adjustment	118	Appearance Care	138
Rear Brake Pedal Height	118	General Recommendations	138
Fluid Level Inspection	119	Washing Your Motorcycle with a Mild	
Brake Pad Wear	121	Detergent	138
Other Inspections	121	After Cleaning Lubrication	139
Wheels	122	Aluminium Frame Maintenance	139
Wheel Rims & Spokes	122	Titanium Fuel Tank Maintenance	
Axles & Wheel Bearings	122	(CRF450R)	139
Tyres & Tubes	123	Exhaust Pipe and Muffler Maintenance	139
Air Pressure	123	Clean the Seat	139
Inspection	123		
Tube Replacement	123	ADJUSTMENTS FOR COMPETITION... 141	
Tyre Replacement	124	Engine Mode Select Button	142
Side Stand (CRF450RX)	125	Current Mode	142
Drive Chain	126	Mode Selection	142
Inspection	126	HRC-Launch Control System	143
Drive Chain Sliders	126	Front Suspension Adjustments	145
Drive Chain Rollers	127	Front Suspension Air Pressure	145
Adjustment	127	Front Suspension Damping	146
Lubrication	127	Fork Springs	146
Removal, Cleaning & Replacement		Fork Oil Adjustment	147
(CRF450RX)	128	Rear Suspension Adjustments	149
Removal, Cleaning & Replacement		Rear Suspension Spring Pre-Load	149
(CRF450R)	129	Rear Suspension Damping	150
More About Drive Chain (CRF450R)	129	Rear Suspension Race Sag	152
Exhaust Pipe/Muffler	130	Suspension Adjustments for Track	
Exhaust Pipe/Muffler Inspection	130	Conditions	154
Muffler Removal	130	Suspension Adjustment Guidelines	155
Muffler Installation	131	Tuning Tips	158
		Spark Plug Reading	158
		Chassis Adjustments	159
		Rear End	159
		Fork Height/Angle	159
		Wheelbase	159
		Gearing	160
		Tyre Selection for Track Conditions	161
		Personal Fit Adjustments	162
		Control Positioning	162
		Handlebar Position, Width & Shape	162
		TIPS	165
		Transporting Your Motorcycle	166
		Storing Your Honda	167
		Preparation for Storage	167
		Removal from Storage	167
		You & the Environment	168
		Troubleshooting	169
		TAKING CARE OF THE UNEXPECTED ... 171	
		If a Fuse Blows	172
		If Your Battery Is Low (or Dead)	173
		TECHNICAL INFORMATION	175
		Vehicle Identification	176
		Serial Numbers	176
		Specifications	177
		Torque Specifications	179
		Nuts, Bolts, Fasteners	179
		Petrol Containing Alcohol	182
		Competition Logbook	183
		Optional Parts List	185
		Spare Parts & Equipment	186
		Spare Parts	186
		General Tools	186
		Honda Special Tools	186
		Chemical Products	186
		Other Products	186
		Wiring Diagram	187
		INDEX	188
		Manufacturer, Authorised Representative and	
		Importer for EU Market.....	191








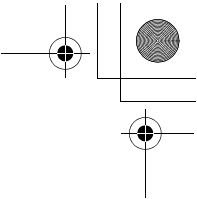

Motorcycle Safety

This section presents some of the most important information and recommendations to help you ride your CRF safely. Please take a few moments to read these pages. This section also includes information about the location of safety labels on your CRF.

Important Safety Information	2
Important Safety Precautions.....	2
Accessories & Modifications	3
Labels (ED type)	4
Safety Labels (U type)	8

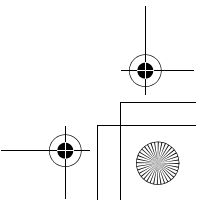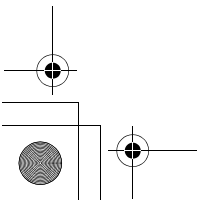

Important Safety Information

Important Safety Precautions

Your CRF can provide many years of pleasure, if you take responsibility for your own safety and understand the challenges you can meet in competitive racing.

As an experienced rider, you know there is much you can do to protect yourself when you ride. The following are a few precautions we consider to be most important.

Never Carry a Passenger.

Your CRF is designed for one operator only. Carrying a passenger can cause a crash in which you and others can be hurt.

Wear Protective Gear.

Whether you're practicing to improve your skills, or riding in competition, always wear an approved helmet, eye protection, and proper protective gear.

Take Time to Get to Know Your CRF.

Because every motorcycle is unique, take time to become thoroughly familiar with how this one operates and responds to your commands before placing your machine, and yourself, in competition.

Learn and Respect Your Limits.

Never ride beyond your personal abilities or faster than conditions warrant. Remember that alcohol, drugs, illness and fatigue can reduce your ability to perform well and ride safety.

Don't Drink and Ride.

Alcohol and riding don't mix. Even one drink can reduce your ability to respond to changing conditions, and your reaction time gets worse with every additional drink. So don't drink and ride, and don't let your friends drink and ride either.

Keep your Honda in Safe Condition.

Maintaining your CRF properly is critical to your safety. A loose bolt, for example, can cause a breakdown in which you can be seriously injured.

Lithium-Ion (Li-Ion) Battery.

If you smell an unusual odor coming from the lithium-ion (li-ion) battery, park your CRF in a safe place outside and away from flammable objects, then stop the engine. Have your CRF inspected by your dealer immediately.

Accessories & Modifications

Accessories & Modifications

Installing non-Honda accessories, removing original equipment, or modifying your CRF in any way that would change its design or operation, could seriously impair your CRF's handling, stability, and braking, making it unsafe to ride.

WARNING

Improper accessories or modifications can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding modifications and accessories.

Labels (ED type)

The following pages show the meanings and locations of the labels on your CRF. Some labels warn you of potential hazards that could cause serious injury. Others provide important safety information. Read this information carefully and don't remove the labels.

If a label comes off or becomes hard to read, contact your Honda dealer for a replacement.

There is a specific symbol on each label. The meanings of each symbol and label are as follows.

	Read instructions contained in Owner's Manual carefully.
	Read instructions contained in Shop Manual carefully. In the interest of safety, take the CRF to be serviced only by a Honda dealer.
	DANGER (with RED background) You WILL be KILLED or SERIOUSLY HURT if you don't follow instructions.
	WARNING (with ORANGE background) You CAN be KILLED or SERIOUSLY HURT if you don't follow instructions.
	CAUTION (with YELLOW background) You CAN be HURT if you don't follow instructions.

Labels (ED type)



RADIATOR CAP LABEL
DANGER
NEVER OPEN WHEN HOT.
Hot coolant will scald you.
Relief pressure valve begins to open at 1.1 kgf/cm².



REAR CUSHION LABEL
GAS FILLED
Do not heat.



DRIVE CHAIN LABEL
Keep chain adjusted and lubricated.
35 – 45 mm (1.4 – 1.8 in) Freeplay



CAUTION LABEL
IMPORTANT INFORMATION

- Operator only. No passengers.
- This Honda CRF is sold as is without warranty, and the entire risk as to quality and performance is with the buyer.
READ OWNER'S MANUAL.
- This vehicle is designed and manufactured for competition use only.
- It does not conform to federal motor vehicle safety standards and operation on public streets, roads, or highways is illegal.
- State laws prohibit operation of this vehicle except in an organized racing or competitive event upon a closed course which is conducted under the auspices of a recognized sanctioning body or by permit issued by the local governmental authority having jurisdiction.
- First determine that operation is legal.

(cont'd)


Labels (ED type)



BATTERY LABEL DANGER

- Do not dismantle, modify or solder the main unit and battery terminals.
Doing so may cause leakage, heat generation, explosion, fire or loss of vision due to leaked electrolyte.
If electrolyte gets into one's eye, immediately wash the eye with plenty of water, and receive treatment from an eye specialist (ophthalmologist) as soon as possible.
- Keep this product away from fires and high temperature heat sources.
Do not bring or cause fires (matches, lighters, cigarettes, sparks at terminals or from welding machines or grinders) close to the battery.
Doing so may cause heat generation, explosion or fire.
- Carefully read this manual.
If this product is handled incorrectly, it may lead to damage to the vehicle, heat generation, explosion, fire, loss of vision or burns.

Labels (ED type)


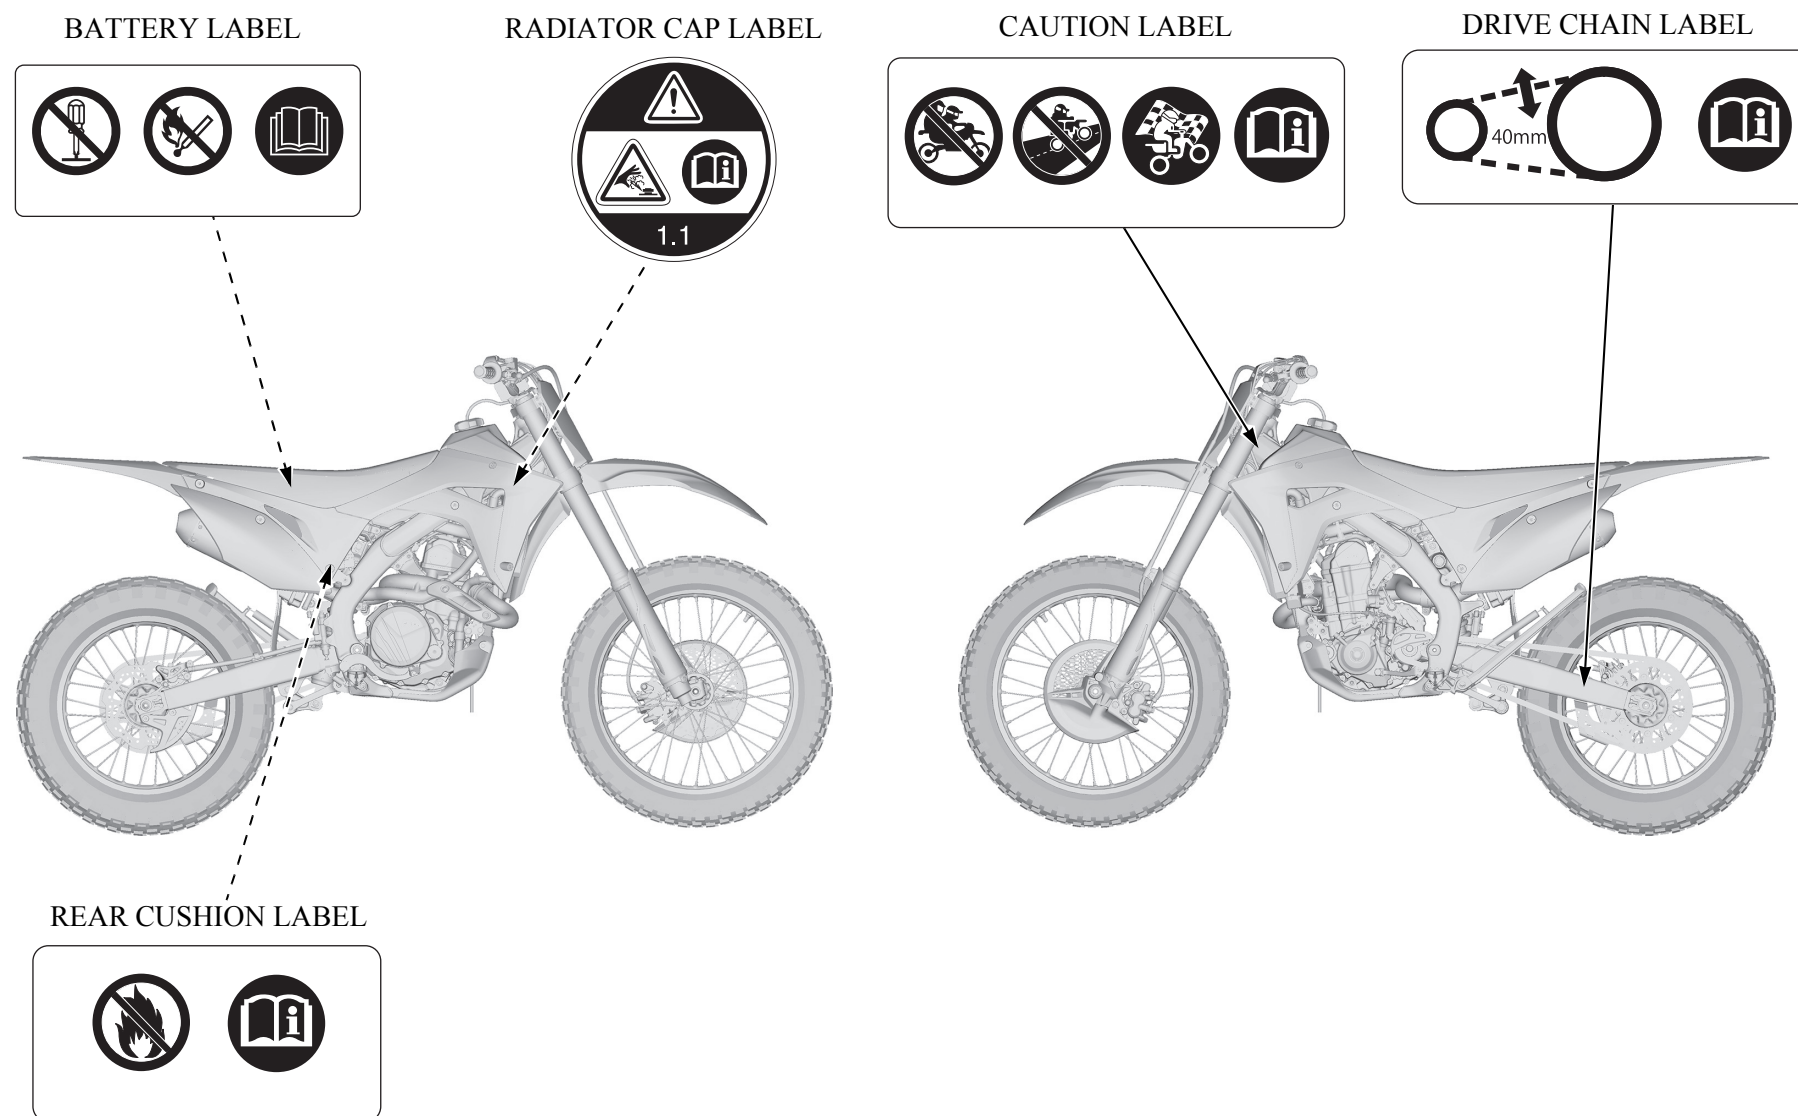


(cont'd)

Safety Labels (U type)

Read these labels carefully and don't remove them.

If a label comes off or becomes hard to read, contact your dealer for replacement.

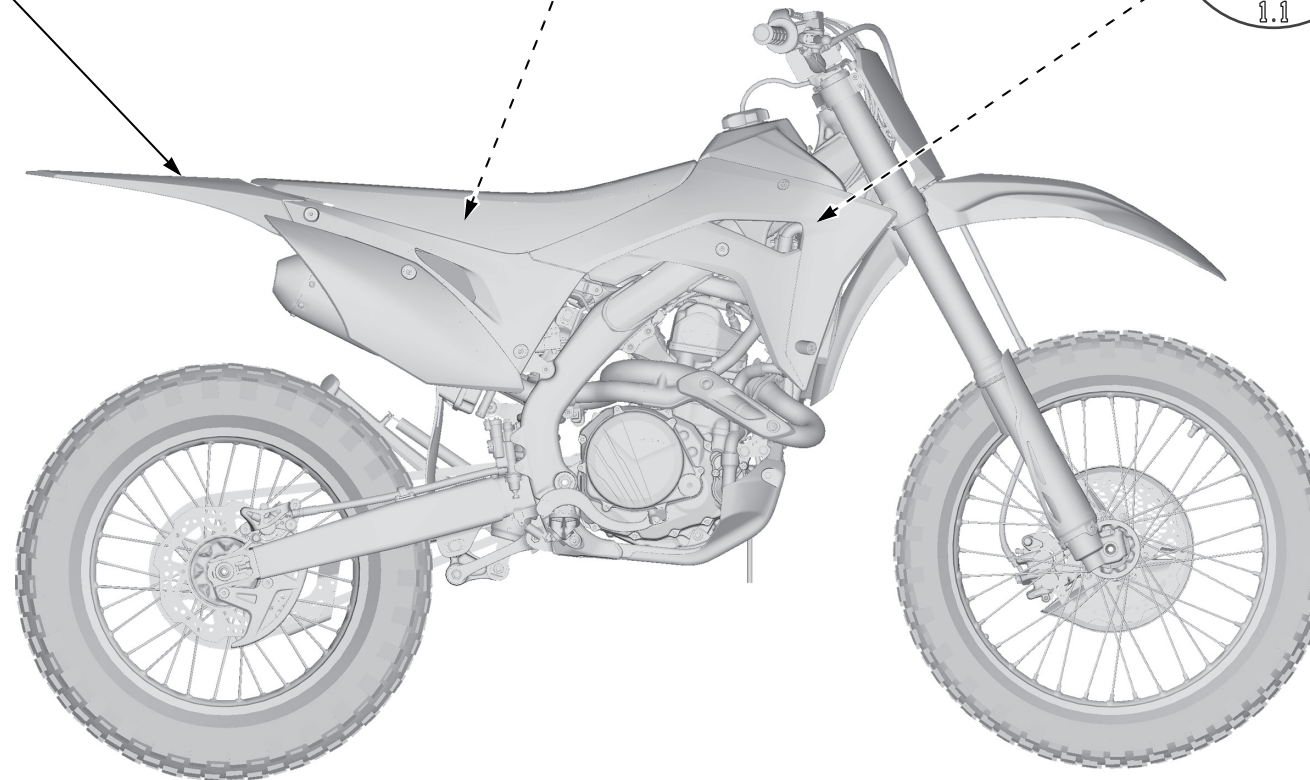
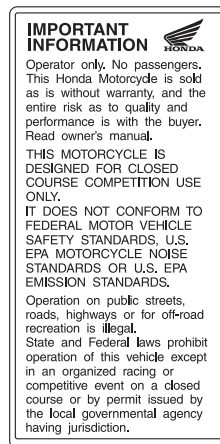


Instruments & Controls

Read this section carefully before you ride. It presents the location of the basic controls on your CRF.


Operation Component Locations	10
MIL (Malfunction Indicator Lamp)	11
MIL Blink Pattern	11
Current DTC/Freeze DTC	11
Circuit Inspection.....	12
DTC Index	13
Engine Mode &	
Launch Control System Indicator	14
Engine Mode Indicator	14
Launch Control System Indicator	14

Operation Component Locations

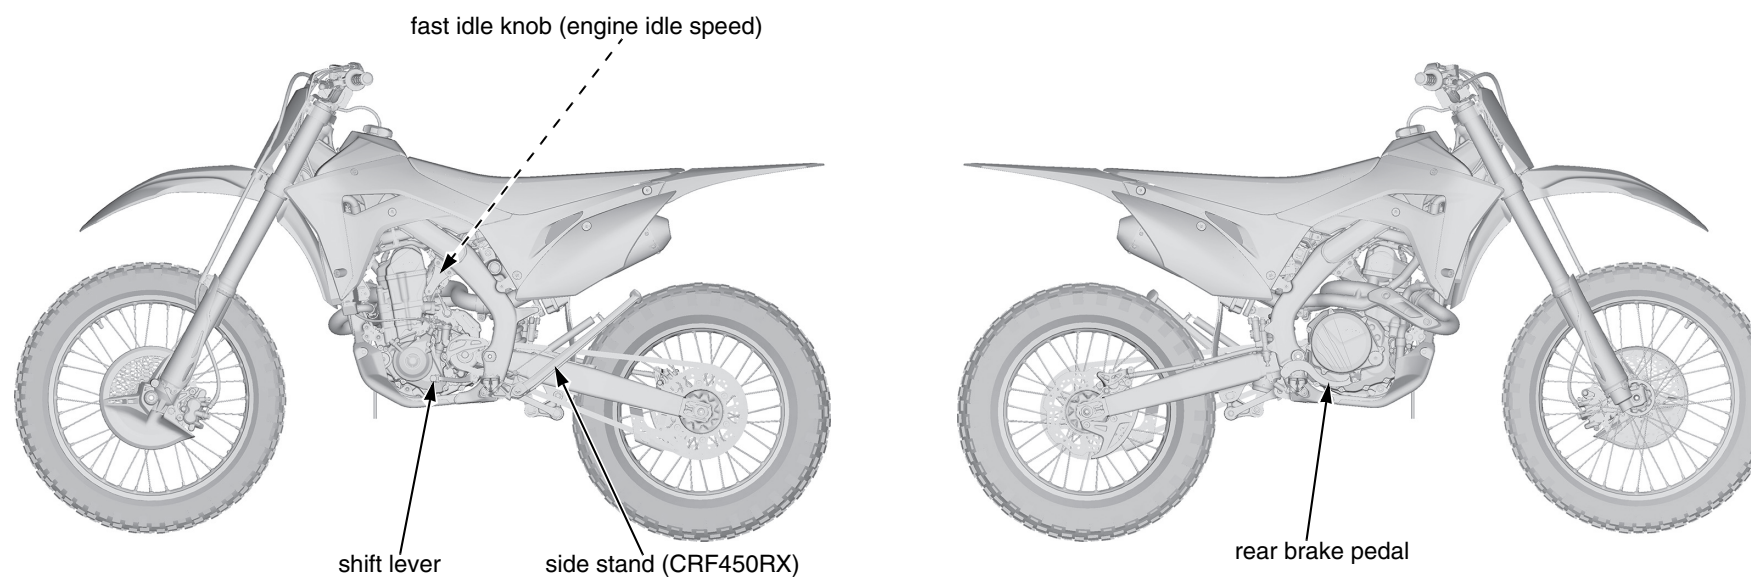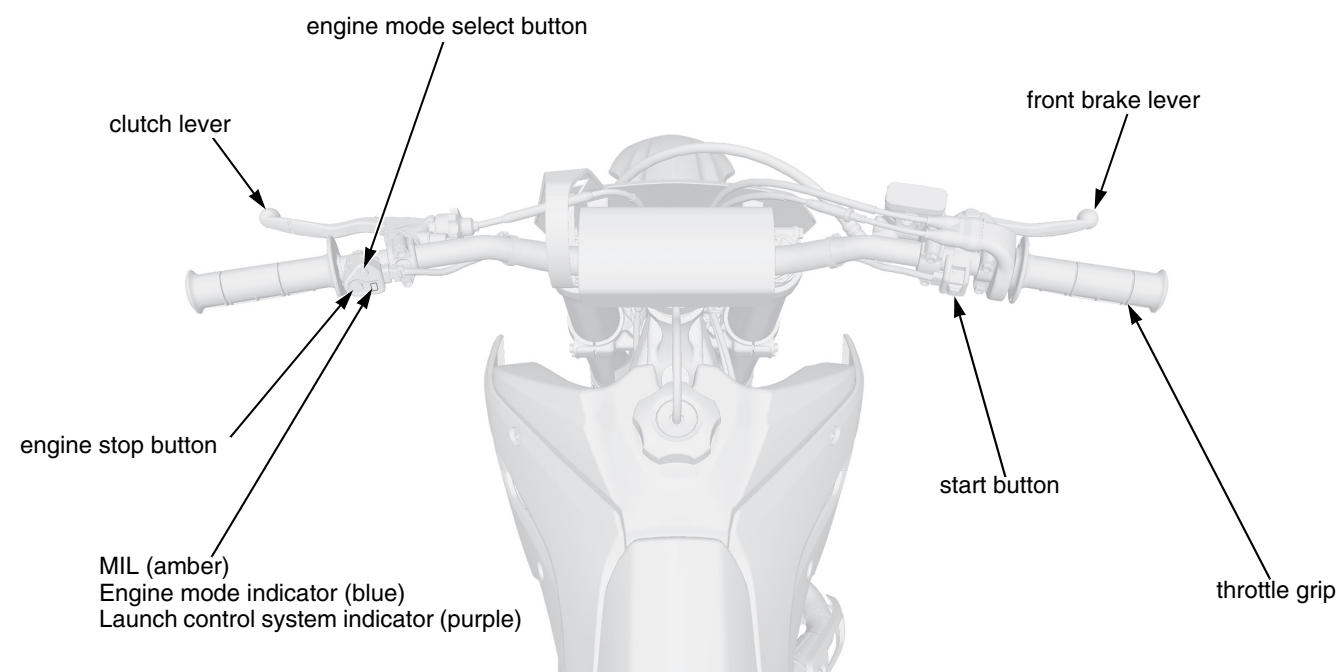

MIL (Malfunction Indicator Lamp)

The MIL (1) on your CRF keeps you informed, alerts you to possible problems, and makes your riding safer and more enjoyable. Refer to the MIL frequently.

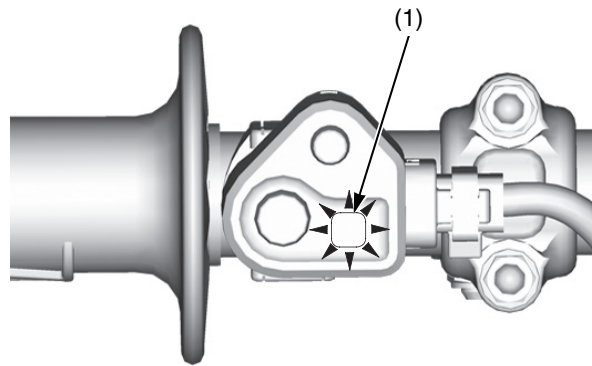

(1) MIL (amber)

When starting the engine, the MIL (amber) will stay on for 2 seconds and then go off. This is normal.

The MIL blinks when there is any abnormality in the PGM-FI system.

If the MIL comes on at any other time, reduce speed and refer to an official Honda Shop Manual available for purchase from your dealer.

If the MIL does not come on when it should, have your dealer check it for problems.

MIL Blink Pattern

The MIL will blink the appropriate DTC number if the ECM detects an active problem while the engine is running at less than 4,000 min⁻¹ (rpm). The MIL will stay on when engine speed is over 4,000 min⁻¹ (rpm).

The MIL has two types of blinks: a long blink and short blink. The long blinking lasts for 1.2 seconds, the short blinking lasts for 0.4 seconds. One long blink is the equivalent of 10 short blinks. For example, when one long blink is followed by two short blinks, the MIL is 12 (one long blink = 10 blinks, plus two short blinks).

When the ECM stores more than one DTC, the MIL will indicate them by blinking in the order from the lowest number to highest number.

Current DTC/Freeze DTC

The DTC is indicated in two ways according to the failure status.

- When the engine starts, the MIL stays on for 2 seconds, then goes off.
If the ECM detects a DTC, the MIL starts blinking (indicating the DTC number by the number of blinks in amber.).
Even when the MIL is blinking, you can change the engine modes. However, you cannot change the engine modes when the indicator is blinking DTC 1, 2 or 8.
After an engine mode is selected, the MIL restarts blinking the current DTC number.
- In the case that the ECM does not detect an active problem but has recorded a previous problem in its memory, the MIL will not come on. If it is necessary to retrieve any past problems stored in the memory, refer to an official Honda Shop Manual.

MIL (Malfunction Indicator Lamp)


Circuit Inspection

Always clean around the ECM and keep debris away from the connectors before disconnecting them.

A faulty PGM-FI system is often related to poorly connected or corroded connections. Check the following connections.

- (1) MAP sensor connector
- (2) ECT sensor connector
- (3) TP sensor connector
- (4) IAT sensor connector
- (5) Injector connector
- (6) CKP sensor connector
- (7) ECM connector
- (8) GP sensor connector

Remember, circuit inspection is not a “cure-all” for other problems in your engine’s PGM-FI system.

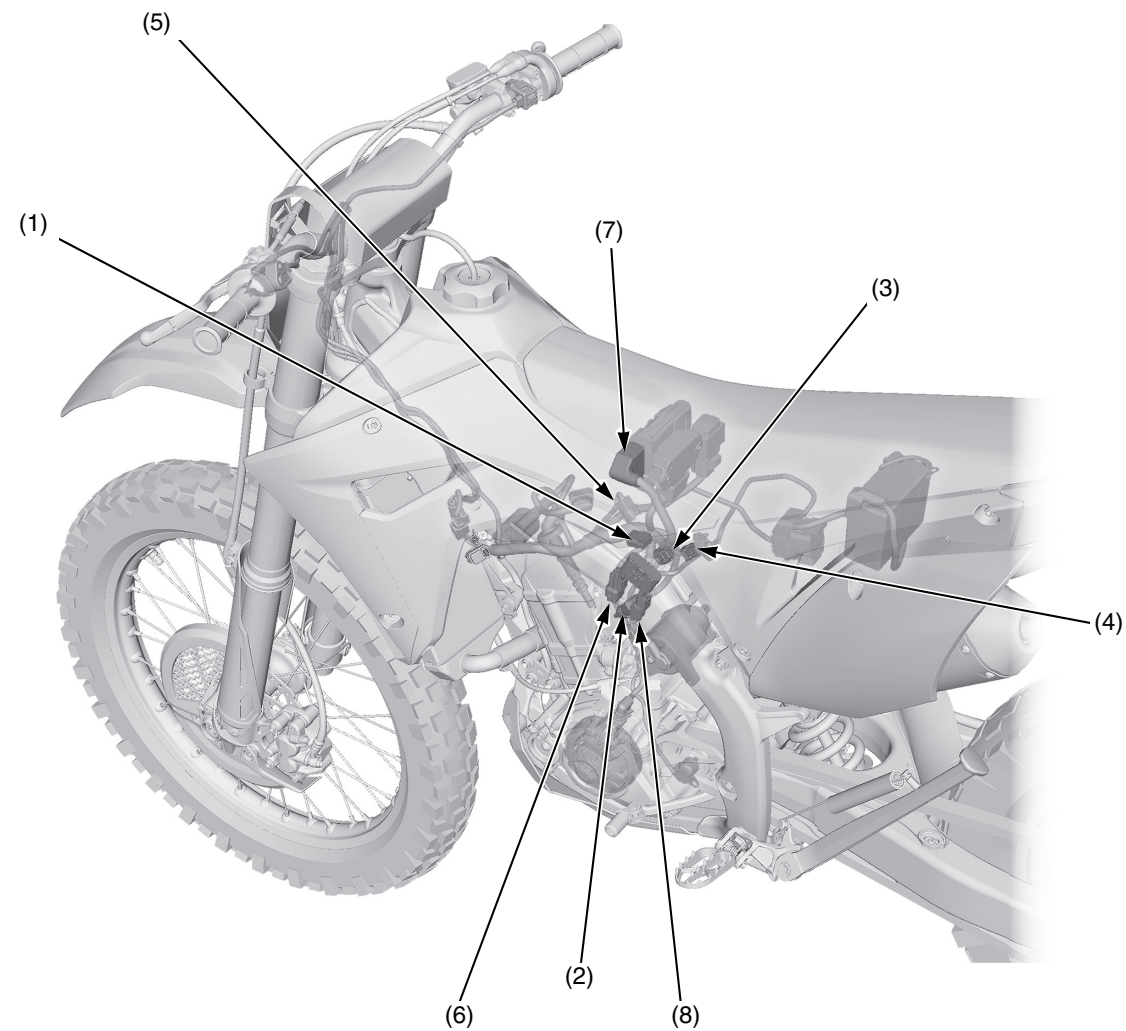

MIL (Malfunction Indicator Lamp)

DTC Index

Refer to *MIL Blink Pattern* on page 11.


MIL blinks	Function Failure	Symptom/Fail-safe function
1	MAP sensor circuit malfunction	Poor performance (driveability)
2	MAP sensor performance problem	Poor performance (driveability)
7	ECT sensor circuit malfunction	Hard start at a low temperature
8	TP sensor circuit malfunction	Poor engine acceleration
9	IAT sensor circuit malfunction	Engine operates normally
12	Injector circuit malfunction	• Engine does not start • Injector, fuel pump and ignition shut down
41	GP sensor circuit malfunction	Engine operates normally

Should be serviced by your dealer, unless the owner has proper tools and is technically qualified.
The MIL blinks of the 12 times can not be checked because the engine can not start at the situation.
If the engine does not start, check all connector connections and/or refer to an official Honda Shop Manual for troubleshooting of the PGM-FI symptom.

Engine Mode & Launch Control System Indicator

Engine Mode Indicator

The engine mode indicator (blue) (1) is located under the engine mode select button (2). The engine mode indicator indicates the currently selected mode by blinking the mode number once when the engine is started.

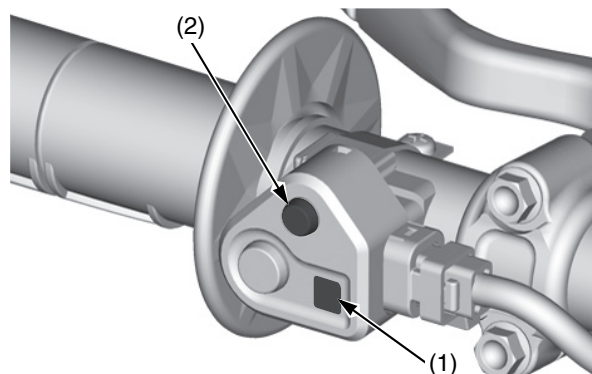


(1) engine mode indicator (blue)
(2) engine mode select button

The engine mode indicator indicates a selected mode when you operate the engine mode select button (page 142).

If the engine mode indicator stays on or does not come on when it should, have your dealer check it for problems.


Launch Control System Indicator

The launch control system indicator (purple) (1) is located under the engine mode select button (2). The launch control system indicator indicates the currently selected level by blinking the level number while launch control system goes into standby. The launch control system indicator comes on (purple) while the system is operating.

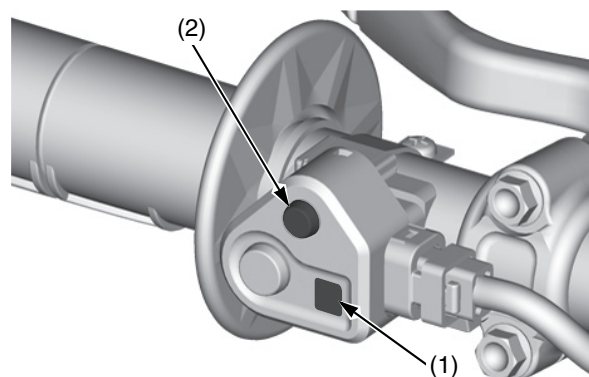

(1) launch control system indicator (purple)
(2) engine mode select button

If the launch control system indicator does not come on when it should, have your dealer check it for problems.



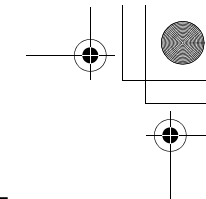


Before Riding

Before each ride, you need to make sure you and your Honda are both ready to ride. To help get you prepared, this section discusses how to evaluate your riding readiness, and what items you should check on your CRF.

For information about suspension and other adjustments, see page 141.

Are You Ready to Ride?	16
Is Your Motorcycle Ready to Ride?	17
Pre-ride Inspection	17

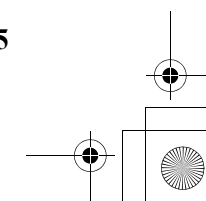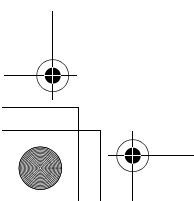

Are You Ready to Ride?

Before riding your CRF for the first time, we strongly recommend that you read this owner's manual, make sure you understand the safety messages, and know how to operate the controls.

Before each ride, it's also important to make sure you and your CRF are both ready to ride.

For information about suspension and other adjustments, see page 141.

Whether you're preparing for competition or for practice, always make sure you are:

- In good physical and mental condition
- Free of alcohol and drugs
- Wearing an approved helmet, eye protection, and other appropriate riding gear

Although complete protection is not possible, wearing the proper gear can reduce the chance or severity of injury when you ride.

WARNING

Not wearing a helmet increases the chance of serious injury or death in a crash.

Be sure you always wear a helmet, eye protection and other protective apparel when you ride.

Is Your Motorcycle Ready to Ride?

Competitive riding can be tough on a motorcycle, so it's important to inspect your CRF and correct any problems you find before each ride. Check the following items (page numbers are at the right):

WARNING







Improperly maintaining this motorcycle or failing to correct a problem before riding can cause a crash in which you can be seriously hurt or killed.


Always perform a pre-ride inspection before every ride and correct any problems.

Pre-ride Inspection

Check the following before each ride:

- Engine oil level 67
- Fuel line for condition 46
- Coolant for proper level 69
- Cooling system and hoses for condition 70
- Spark plug for proper heat range, carbon fouling and spark plug wire terminal for looseness 82
- Air cleaner for condition and contamination 71
- Clutch Lever Freeplay 77
- Breather drain for cleaning 73
- Steering head bearing and related parts for condition 134
- Throttle operation 75
- Tyres for damage or improper inflation pressure 123
- Spokes for looseness 122
- Rim locks for looseness 122
- Front and rear suspension for proper operation 101, 117
- Front and rear brakes, check operation 118
- Drive chain for correct slack and adequate lubrication 126, 127
- Drive chain sliders and drive chain rollers for damage or wear 126, 127
- Exhaust pipe/Muffler for looseness 130
- Every possible part for looseness (such as cylinder head bolts, engine mounting bolts/nuts, axle nuts, handlebar holder bolts/nuts, fork bridge pinch bolts, drive chain adjuster lock nuts, drive chain roller bolt/nut, wire harness connectors) 179 – 181
- MIL operation 11

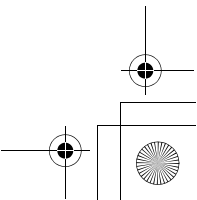
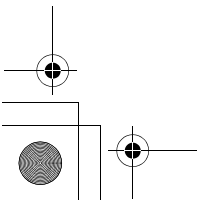


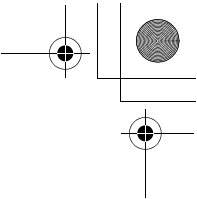


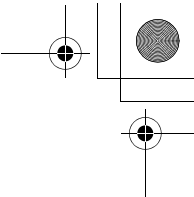

Basic Operating Instructions

This section gives basic information on how to start and stop your engine as well as break-in guidelines.

Safe Riding Precautions.....	20
Side Stand (CRF450RX)	20
Starting & Stopping the Engine	21
Fast Idle Knob.....	21
Preparation	21
Starting Procedure.....	21
How to Stop the Engine	22
Parking (CRF450RX)	23
Break-in Guidelines	24

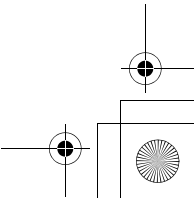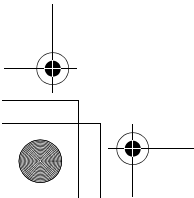

Basic Operating Instructions

Safe Riding Precautions

Before riding your CRF for the first time, please review the *Important Safety Precautions* beginning on page 2 and the previous section, titled *Before Riding*.

For your safety, avoid starting or operating the engine in an enclosed area such as a garage. Your CRF's exhaust contains poisonous carbon monoxide gas which can collect rapidly in an enclosed area and cause illness or death.

⚠ WARNING


Running the engine of your vehicle while in an enclosed or even partially enclosed area can cause a rapid build-up of toxic carbon monoxide gas.

Breathing this colourless, odorless gas can quickly cause unconsciousness and lead to death.

Only run your vehicle's engine when it is located in a well ventilated area outdoors.

Side Stand (CRF450RX)

The side stand (1) is used to support your CRF while parked (page 23). To operate, push the side stand down. Slowly lean your CRF to the left until its weight rests on the side stand. Turn the handlebar fully to the left. Before riding, raise the side stand.

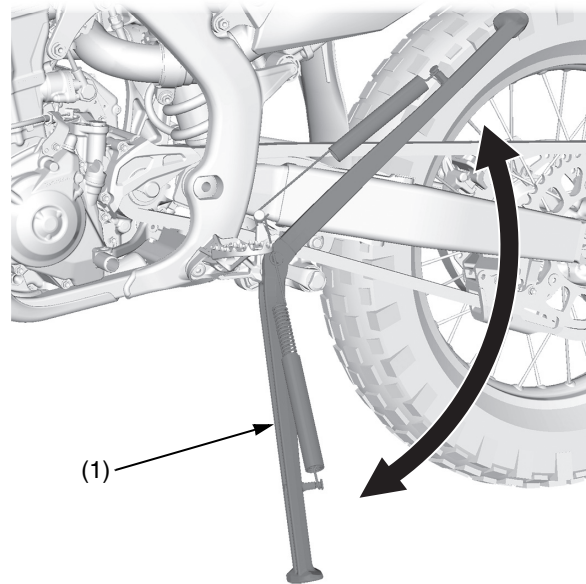

(1) side stand

Starting & Stopping the Engine

Always follow the proper starting procedure described below.

Your CRF can be started with the transmission in gear by pulling in the clutch lever before operating the start button.

Fast Idle Knob

The fast idle knob has two functions:

- When pulled out, the fast idle knob assists in first-time start-up for cold weather starting.
- When pushed in, it acts like an idle adjustment screw. Refer to *Idle Speed Adjustment* on page 76.

Preparation

Make sure that the transmission is in neutral.


Starting Procedure

Always follow the proper starting procedure described as follows.

Check the engine oil and coolant levels before starting the engine (pages 67, 69).


Cold Engine Starting

1. Shift the transmission into neutral.
2. If the temperature is 10°C (50°F) or below, pull the fast idle knob (1) fully up.

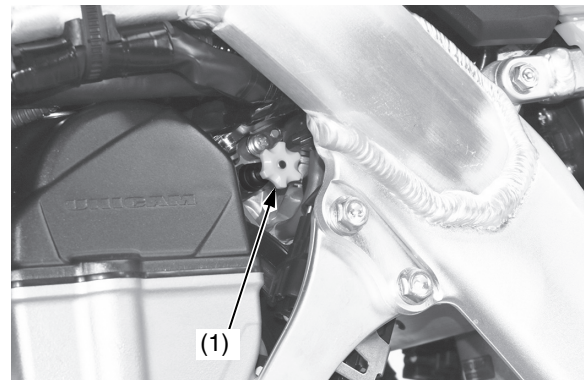

(1) fast idle knob

3. With the throttle closed.
Pull the clutch lever all the way in, and depress the start button (2).

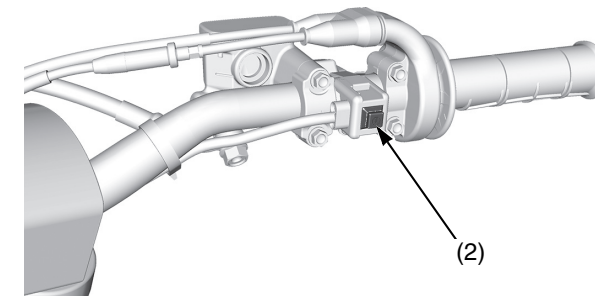

(2) start button

4. About a minute after the engine starts, push the fast idle knob back all the way to fully OFF.
If idling is unstable, open the throttle slightly.

Starting & Stopping the Engine

Warm Engine Starting


1. Shift the transmission into neutral.
2. Pull the clutch lever and depress the start button. (Do not open the throttle.)

Starting the engine excessively charged with fuel by throttle blipping or other reasons

1. Shift the transmission into neutral.
2. With the throttle fully opened, pull the clutch lever and depress the start button for 5 seconds to discharge excessive fuel from the engine.
3. Pull the clutch lever and depress the start button. (Do not open the throttle.)

Snapping the throttle or fast idling for more than about 5 minutes may cause exhaust pipe and muffler discolourations.

When starting the engine, the MIL (amber) will stay on for 2 seconds, then go off. And then the engine mode indicator (blue) indicates the current engine mode for 0.8 seconds, then goes off. If the MIL/engine mode indicator (1) does not come on or go off when it should, have your dealer check it for problems.

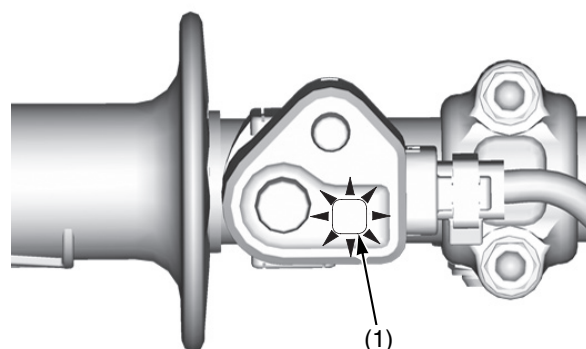


(1) MIL (amber) / engine mode indicator (blue)

How to Stop the Engine

Normal Engine Stop


1. Shift the transmission into neutral.
2. Push and hold the engine stop button (1) until the engine stops completely.

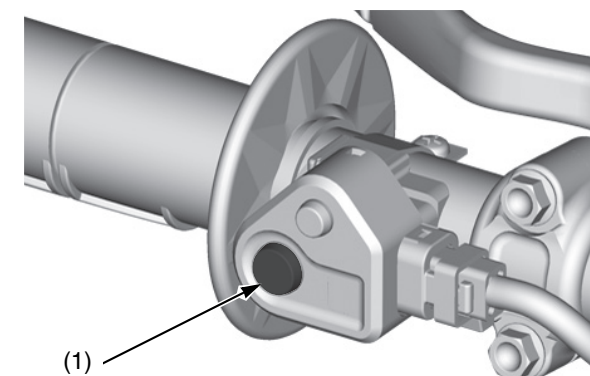

(1) engine stop button






Emergency Engine Stop


To stop the engine in an emergency, push and hold the engine stop button.

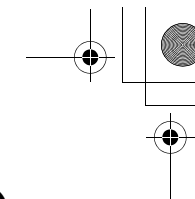

Parking (CRF450RX)

Lower the side stand to support your CRF.
Always choose a level surface to park.

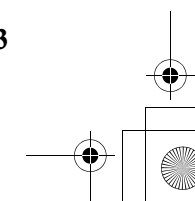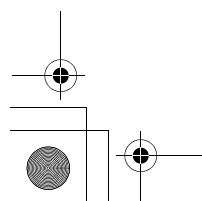





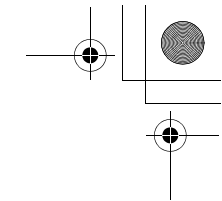


Break-in Guidelines

Help assure your CRF's future reliability and performance by paying extra attention to how you ride during the first operating day or 25 km (15 miles).
During this period, avoid full-throttle starts and rapid acceleration.

This same procedure should be followed each time when:

- piston is replaced
- piston rings are replaced
- cylinder is replaced
- crankshaft or crank bearings are replaced

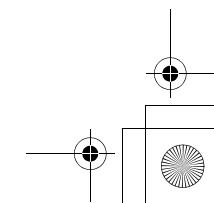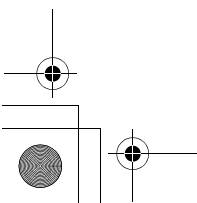

Servicing Your Honda

Keeping your CRF well maintained is absolutely essential to your safety. It's also a good way to protect your investment, get maximum performance, avoid breakdowns, and have more fun.

To help keep your CRF in good shape, this section includes a Maintenance Schedule for required servicing and step-by-step instructions for specific maintenance tasks. You'll also find important safety precautions, information on oils, and tips for keeping your Honda looking good.

An ECM system is used on this motorcycle; consequently, routine ignition timing adjustment is unnecessary. If you want to check the ignition timing, refer to an official Honda Shop Manual.

An optional tool kit may be available. Check with your dealer's parts department.

Before You Service Your Honda

The Importance of Maintenance	26
Maintenance Safety	27
Important Safety Precautions	27
Maintenance Schedule	28
General Competition Maintenance	31
Before & After Competition Maintenance	35
Between Races (CRF450RX)/Heats (CRF450R) & Practice Maintenance	35
After Competition Maintenance	36

Service Preparations

Maintenance Component Locations	37
Seat	38
Fuel Tank (CRF450RX)	39
Fuel Tank (CRF450R)	41
Subframe	43

Service Procedures

Fluids & Filters

Fuel System (CRF450RX)	46
Fuel System (CRF450R)	56
Engine Oil	66
Coolant	69
Air Cleaner	71
Crankcase Breather	73

Engine

Throttle	74
Engine Idle Speed	76
Clutch System	77
Spark Plug	82
Valve Clearance	83
Piston/Piston Rings/Piston Pin	92

Chassis

Suspension	101
Front Suspension Inspection	101
Front Suspension Removal	102
Recommended Fork Oil	104
Fork Outer Tube Disassembly	104
Fork Oil Refilling	105
Front Suspension Installation	106
Fork Damper Disassembly	109
Damper Oil Change	111
Fork Damper Installation	114
Rear Suspension Inspection	117
Brakes	118
Wheels	122
Tyres & Tubes	123
Side Stand (CRF450RX)	125
Drive Chain	126
Exhaust Pipe/Muffler	130
Additional Maintenance Procedures	134

Electrical

Battery	136
---------------	-----

Appearance Care	138
-----------------------	-----

The Importance of Maintenance

Keeping your CRF well-maintained is absolutely essential to your safety. It's also a good way to get maximum performance during each race (CRF450RX)/heat (CRF450R).

Careful pre-ride inspections and good maintenance are especially important because your CRF is designed to be ridden in off-road competition.

Remember, proper maintenance is your responsibility. Be sure to inspect your CRF before each ride and follow the Maintenance Schedule in this section.

WARNING

Improperly maintaining this motorcycle or failing to correct a problem before you ride can cause a crash in which you can be seriously hurt or killed.

Always follow the inspection and maintenance recommendations and schedules in this owner's manual.

Maintenance Safety

This section includes instructions on how to perform some important maintenance tasks. Some of the most important safety precautions follow. However, we cannot warn you of every conceivable hazard that can arise in performing maintenance. Only you can decide whether or not you should perform a given task.

WARNING

Failure to properly follow maintenance instructions and precautions can cause you to be seriously hurt or killed.

Always follow the procedures and precautions in this owner's manual.

Important Safety Precautions

- Make sure the engine is off before you begin any maintenance or repairs. This will help eliminate several potential hazards:

Carbon monoxide poisoning from engine exhaust. Be sure there is adequate ventilation whenever you operate the engine.

Burns from hot motorcycle parts. Let the engine and exhaust system cool before touching.

Injury from moving parts. Do not run the engine unless instructed to do so.

- Read the instructions before you begin, and make sure you have the tools and skills required.
- To help prevent the motorcycle from falling over, park it on a firm, level surface, using the side stand (CRF450RX), an optional workstand or a maintenance stand to provide support.
- To reduce the possibility of a fire or explosion, be careful when working around petrol. Use only a non-flammable (high flash point) solvent such as kerosene—not petrol—to clean parts. Keep cigarettes, sparks, and flames away from all fuel-related parts.

Maintenance Schedule

To maintain the safety and reliability of your CRF, regular inspection and service is required as shown in the Maintenance Schedule that follows.

The Maintenance Schedule lists items that can be performed with basic mechanical skills and hand tools. Procedures for these items are provided in this manual.

The Maintenance Schedule also includes items that involve more extensive procedures and may require special training, tools, and equipment. Therefore, we recommend that you have your dealer perform these tasks unless you have advanced mechanical skills and the required tools. Procedures for items in this schedule are provided in an official Honda Shop Manual available for purchase.

Service intervals in the maintenance schedule are expressed in terms of races (CRF450RX)/heats (CRF450R) and riding hours. To avoid overlooking required service, we urge you to develop a convenient way to record the number of races (CRF450RX)/heats (CRF450R) and/or hours you ride.

If you do not feel capable of performing a given task or need assistance, remember that your Honda dealer knows your CRF best and is fully equipped to maintain and repair it. If you decide to do your own maintenance, use only Honda Genuine Parts or their equivalents for repair or replacement to ensure the best quality and reliability.

Perform the *pre-ride inspection* (page 17) at each scheduled maintenance period.

Summary of Maintenance Schedule Notes and Procedures:

Notes:

1. (CRF450RX)
Clean after every race for dusty riding condition.
(CRF450R)
Clean after every heat for dusty riding condition.
2. Replace every 2 years. Replacement requires mechanical skill.
3. Replace after the first break-in ride.
4. Inspect after the first break-in ride.
5. Replace the engine oil, if the clutch discs and plates are replaced.
6. Replace every year.

Maintenance Procedures:

I : inspect and clean, adjust, lubricate, or replace if necessary
C : clean
A : adjust
L : lubricate
R : replace

Maintenance Schedule (CRF450RX)

Perform the *Pre-ride Inspection* (page 17) at each scheduled maintenance period.

I: Inspect and Clean, Adjust, Lubricate or Replace if necessary. C: Clean. R: Replace. A: Adjust. L: Lubricate.

ITEMS	FREQUENCY	CRF450RX NOTE	Each race or about 3.5 hours	Every 2 races or about 7.5 hours	Every 4 races or about 15.0 hours	Every 6 races or about 22.5 hours	Every 8 races or about 30.0 hours	Ref. Page
FUEL LINE		(NOTE 6)	I				R	46
FUEL PUMP FILTER		(NOTE 6)					R	50 – 54
THROTTLE OPERATION			I					75
AIR FILTER		(NOTE 1)	C					71, 72
CRANKCASE BREATHER			I					73
SPARK PLUG			I					82
VALVE CLEARANCE/DECOMPRESSOR SYSTEM		(NOTE 4)			I			83 – 91
ENGINE OIL		(NOTE 3) (NOTE 5)	I		R			67
ENGINE OIL FILTER		(NOTE 3)			R			67, 68
ENGINE IDLE SPEED			I					76
PISTON AND PISTON RINGS					R			94 – 96
PISTON PIN					R			94 – 96
RADIATOR COOLANT		(NOTE 2)	I					69, 70
COOLING SYSTEM			I					70
DRIVE CHAIN			I, L	R				126
DRIVE CHAIN SLIDER			I					126
DRIVE CHAIN ROLLER			I					127
DRIVE SPROCKET			I					128
DRIVEN SPROCKET			I					128
BRAKE FLUID		(NOTE 2)	I					119, 120
BRAKE PADS WEAR			I					121
BRAKE SYSTEM			I					118
CLUTCH SYSTEM		(NOTE 5)	I					77 – 81
CONTROL CABLES			I, L					134
EXHAUST PIPE/MUFFLER			I					130 – 133
SUSPENSION			I					101, 117
SWINGARM/SHOCK LINKAGE				L				34, 117
FORK OIL		(NOTE 3)				R		104, 105, 109 – 117
NUTS, BOLTS, FASTENERS			I					135, 179 – 181
WHEELS/TYRES			I					122 – 124
STEERING HEAD BEARINGS						I		134
SIDE STAND			I					125

*WE RECOMMEND THESE ITEMS BE SERVICED BY REFERRING TO THE HONDA SHOP MANUAL.

This maintenance schedule is based upon average riding condition. Machine subjected to severe use require more frequent servicing.

- NOTE:
1. Clean after every race for dusty riding condition.
 2. Replace every 2 years. Replacement requires mechanical skill.
 3. Replace after the first break-in ride.
 4. Inspect after the first break-in ride.
 5. Replace the engine oil, if the clutch discs and plates are replaced.
 6. Replace every year.

Maintenance Schedule (CRF450R)

Perform the *Pre-ride Inspection* (page 17) at each scheduled maintenance period.

I: Inspect and Clean, Adjust, Lubricate or Replace if necessary. C: Clean. R: Replace. A: Adjust. L: Lubricate.

ITEMS	FREQUENCY	CRF450R NOTE	Each race or about 2.5 hours	Every 3 races or about 7.5 hours	Every 6 races or about 15.0 hours	Every 9 races or about 22.5 hours	Every 12 races or about 30.0 hours	Ref. Page
FUEL LINE		(NOTE 6)	I				R	56
FUEL PUMP FILTER		(NOTE 6)					R	60 – 64
THROTTLE OPERATION			I					75
AIR FILTER		(NOTE 1)	C					71, 72
CRANKCASE BREATHER			I					73
SPARK PLUG			I					82
VALVE CLEARANCE/DECOMPRESSOR SYSTEM		(NOTE 4)			I			83 – 91
ENGINE OIL		(NOTE 3) (NOTE 5)	I		R			67
ENGINE OIL FILTER		(NOTE 3)			R			67, 68
ENGINE IDLE SPEED			I					76
PISTON AND PISTON RINGS					R			94 – 96
PISTON PIN					R			94 – 96
RADIATOR COOLANT		(NOTE 2)	I					69, 70
COOLING SYSTEM			I					70
DRIVE CHAIN			I, L	R				126
DRIVE CHAIN SLIDER			I					126
DRIVE CHAIN ROLLER			I					127
DRIVE SPROCKET			I					129
DRIVEN SPROCKET			I					129
BRAKE FLUID		(NOTE 2)	I					119, 120
BRAKE PADS WEAR			I					121
BRAKE SYSTEM			I					118
CLUTCH SYSTEM		(NOTE 5)	I					77 – 81
CONTROL CABLES			I, L					134
EXHAUST PIPE/MUFFLER			I					130 – 133
SUSPENSION			I					101, 117
SWINGARM/SHOCK LINKAGE				L				34, 117
FORK OIL		(NOTE 3)				R		104, 105, 109 – 117
NUTS, BOLTS, FASTENERS			I					135, 179 – 181
WHEELS/TYRES			I					122 – 124
STEERING HEAD BEARINGS						I		134

*WE RECOMMEND THESE ITEMS BE SERVICED BY REFERRING TO THE HONDA SHOP MANUAL.

This maintenance schedule is based upon average riding condition. Machine subjected to severe use require more frequent servicing.

- NOTE: 1. Clean after every heat for dusty riding condition.
 2. Replace every 2 years. Replacement requires mechanical skill.
 3. Replace after the first break-in ride.
 4. Inspect after the first break-in ride.
 5. Replace the engine oil, if the clutch discs and plates are replaced.
 6. Replace every year.

General Competition Maintenance

Perform maintenance on firm, level ground using the side stand (CRF450RX), an optional workstand, or equivalent support.

When tightening bolts, nuts or screws, start with the larger diameter or inner fasteners, and tighten them to the specified torque using a crisscross pattern.

Use Honda Genuine Parts or their equivalents when servicing your CRF.

Clean parts in non-flammable (high flash point) cleaning solvent (such as kerosene) when disassembling. Lubricate any sliding surfaces, O-rings, and seals before reassembling. Grease parts by coating or filling where specified.

After any engine disassembly, always install new gaskets, O-rings, cotter pins, piston pin clips, snap rings, etc. when reassembling. After reassembly, check all parts for proper installation and operation.

All Pre-ride Inspection Items

Refer to *Pre-ride Inspection* on page 17.

General Competition Maintenance

Spark Plug

Some non-resistor plugs may cause ignition problems. Refer to the recommendations elsewhere in this manual for specific types so you will be sure to use the proper reach and heat range. Replace periodically as specified in the Maintenance Schedule (pages 29, 30).

Spark Plug Cap

Install a small plastic wire band around the spark plug cap to reduce any possibility of it loosening or of water penetration.




Air Cleaner

Clean and oil your air cleaner regularly because the volume of air able to pass through it has a great effect on performance. Both engine performance and long term durability may be affected by an air cleaner that has deteriorated and allows dirt to pass. Inspect the air cleaner closely each time it's serviced for evidence of small tears or seam separation. Keep a spare air cleaner oiled and ready to install, sealed in a plastic bag. Riding in dusty conditions may require servicing the air cleaner or replacing it with a pre-serviced air cleaner between races (CRF450RX)/heats (CRF450R). Be careful not to over oil the air cleaner. While it is important to oil the air cleaner thoroughly, over oiling will cause an overall rich running condition, probably more noticeable off idle and in low min⁻¹ (rpm) performance. Follow the servicing instructions in the Maintenance section. Use Honda Foam Air Filter Oil or an equivalent. Be sure to grease the air cleaner flange where it contacts the air cleaner housing.

Honda White Lithium Grease or an equivalent is handy for this because any dirt that penetrates this sealing area will show up clearly (page 71).

Use the Honda Genuine air cleaner or an equivalent air cleaner specified for your model.

Using the wrong Honda air cleaner or a non-Honda air cleaner which is not of equivalent quality may cause premature engine wear or performance problems.

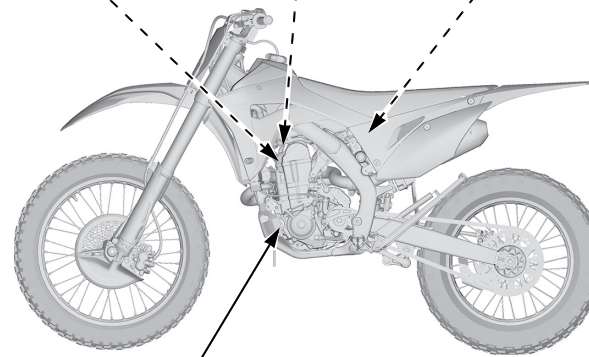

Engine Oil and Filter

Drain and replace engine oil often to ensure the greatest service life of the piston, cylinder, crankshaft, transmission and clutch.

Also replace engine oil filter often to ensure the greatest service life. Frequent changes will also assure consistent performance of power, response, both shifting and clutch action (page 67).


General Competition Maintenance

Handgrips


Always use Hand Grip Cement or an equivalent when replacing handgrips.
Refer to an official Honda Shop Manual for installation instructions.

Throttle Grip/Handlebar Grip

Right throttle grip: Align the index mark on the throttle grip with the index mark of the throttle pipe.
Left handlebar grip: Align the index mark on the left handlebar grip with the paint mark on the handlebar.

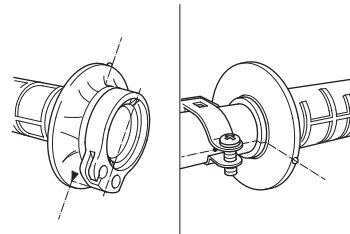

For added security, you may choose to bind the hand grips to the handlebar and throttle pipe with safety wires to prevent the possibility of them loosening. Position the twisted wire ends away from your palms and be sure to bend the wire ends well into the handgrip rubber so they will not snag your glove.

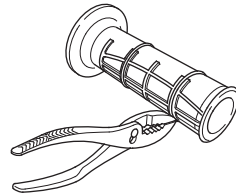

Fork Oil/Performance

Disassemble, clean and inspect the fork and replace the oil regularly. Contamination due to the tiny metal particles produced from the normal action of the fork, as well as normal oil breakdown, will deteriorate the performance of the suspension. Refer to an official Honda Shop Manual. Use only Pro Honda HP Fork Oil, A15-00 or an equivalent which contains special additives to assure maximum performance of your CRF's front suspension.

Gaskets

Always use new gaskets when reassembling components.

Cylinder head/Cylinder

Put a little grease on the dowel pins of the cylinder head and cylinder to prevent corrosion from dissimilar metals. The tolerances are quite tight, so it's important to keep these dowels absolutely clean (pages 92, 94).

Fuel Line

Refer to *Fuel Line Inspection* on pages 46 and 56. Check the fuel line for deterioration, damage, or leakage. Replace the fuel line every year.

Fuse

Check the fuse before looking elsewhere for the cause of an electrical problem.

Battery

The start button uses current from the battery. Limited operation also allows the battery to discharge. If you do not ride frequently, we recommend that you charge the battery frequently (see *Battery Charging* on page 137). If you do not expect to ride your CRF for at least 2 weeks, we recommend you remove the battery – or at least disconnect the battery cables (negative cable first).

Electrical Connectors

Clean electrical connectors and wrap them with electrical tape to reduce the possibility of unwanted disconnections, water shorts or corrosion.

Frame

Because your CRF is a high-performance machine, the frame should not be overlooked as part of your overall competition maintenance program. Periodically inspect the frame closely for possible cracking or other damage. It makes good racing sense.


Engine Mounting Bolts and Nuts

Make sure the engine mounting bolts and nuts are tightened to the proper torque specification.

General Competition Maintenance


Suspension Linkage Lubrication

Disassemble, clean, inspect and lubricate all suspension linkage pivot bearings with molybdenum disulfide grease (containing more than 3% molybdenum disulfide additive) after each 7.5 hours of running time in order to maintain proper suspension performance and minimize component wear.

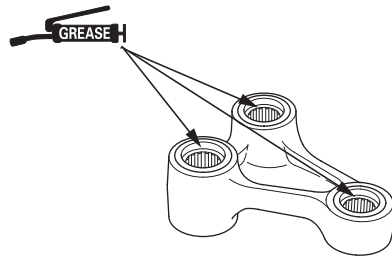

Swingarm Pivot Lubrication

Clean, inspect and lubricate the swingarm and suspension linkage pivots with molybdenum disulfide grease (containing more than 3% molybdenum disulfide additive). Be sure all of the dust seals are in good condition.

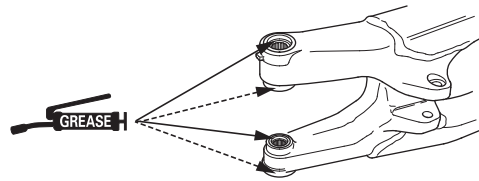


Swingarm

Do not attempt to weld or otherwise repair a damaged swingarm. Welding will weaken the swingarm.

Footpegs

Worn footpeg teeth can be repaired by filing the grooves between the teeth with a triangular shaped file. Be aware that filing them too sharp will reduce boot sole lifespan. Sharpen only the points of the teeth. Filing the grooves deeper will weaken the footpegs. Be sure the pegs are free to pivot freely and that the pivot pin retaining cotter pins are in good condition.

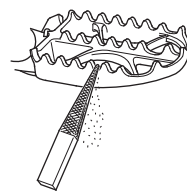

Brake Fluid Replacement

Refer to *Brake Pad Wear* on page 121.

Brake Caliper Inspection: Be sure both the front and rear calipers are able to move freely on the caliper pin and caliper bracket pins. Check pad thickness periodically and replace the pads when minimum thickness is reached. If the brakes fade when they are hot, inspect the pads for glazing or damage, and replace if necessary.

Brake Fluid Replacement: Refer to an official Honda Shop Manual for brake fluid replacement instructions. Replace the fluid in the brake system every 2 years. Replace the fluid more frequently if you subject your brakes to severe use. Heavy braking heats the brake fluid and it may deteriorate sooner than expected. Any type of riding, that requires frequent use of the brakes, such as in tight woods, can shorten the service life of brake fluid.


Throttle Control

Remove the throttle control every few rides, clean the inside of the throttle pipe and handlebar thoroughly. Inspect the cable carefully for kinks or other damage that may restrict throttle control in anyway. Move the handlebar from lock to lock to be sure there is no cable interference. Make certain the throttle operation is perfect after servicing and inspecting.

Steering Head Bearings

Periodically clean, inspect and regrease the steering head bearings — especially if wet, muddy or extremely dusty courses are encountered often.

Use urea based multi-purpose grease designed for high temperature, high pressure performance (example: EXCELITE EP2 manufactured by KYODO YUSHI, Japan or equivalent)

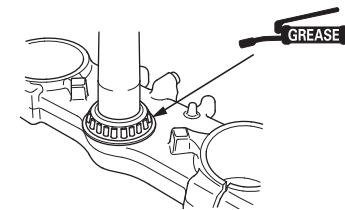

Spokes

Check spoke tension frequently between the first few rides. As the spokes, spoke nuts and rim contact points seat-in, the spokes may need to be retightened. Once past this initial seating-in period, the spokes should hold their tension. Still, be sure your race (CRF450RX)/heat (CRF450R) maintenance program includes checking spoke tension and overall wheel condition on a regular basis (page 122).

Nuts, Bolts, Etc.


Application of a thread locking agent to essential fasteners offers added assurance and security. Remove the nuts, clean the threads of both the nuts and bolts, apply Honda Thread Lock or an equivalent and tighten to the specified torque (pages 179 - 181).

Before & After Competition Maintenance

Between Races (CRF450RX)/Heats (CRF450R) & Practice Maintenance

After practice or between races (CRF450RX)/heats (CRF450R) you have a chance to make additional checks and adjustments.


- Clean accumulated dirt from under the fenders and off the wheels, suspension components, handgrips, controls, and footpegs. A stiff, nylon parts cleaning brush works well.
- Check tyre air pressure.
- Check spoke tension, and make sure the rim locks are secure.

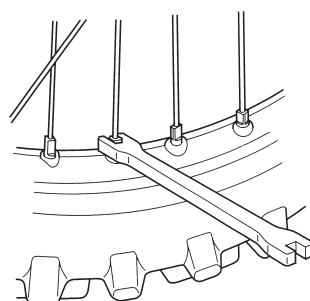

- Check to make sure the sprocket bolts and nuts are secure.
- Clean the sides of the drive chain with a stiff, nylon parts-cleaning brush. Lubricate and adjust the chain as necessary.


Do not perform maintenance while engine is running. Injury to your fingers or hands may result.

- After adjustment, check that the chain adjuster index marks (1) are in the same position on each side. This will ensure that the rear wheel is in proper alignment and allow maximum performance from the rear disc brake. Maintaining proper wheel alignment will also extend brake pad lifespan.

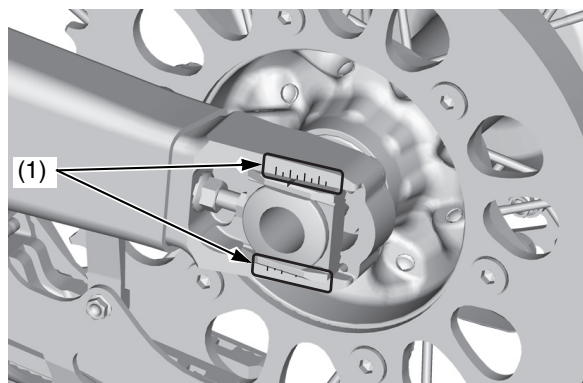

(1) chain adjuster index marks

- Suspend the front wheel above the ground and use the pressure release screws (2) to release the built-up pressure in the forks. This pressure is caused by normal fork action while riding.

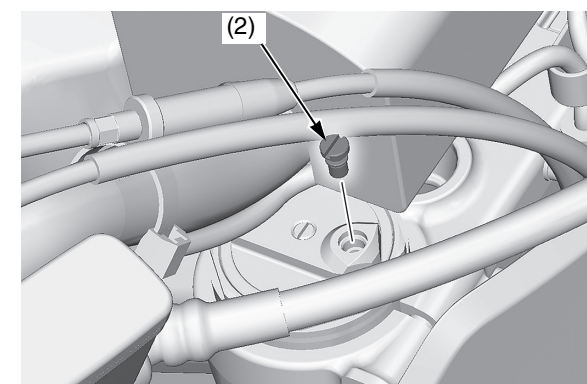

(2) pressure release screw

Before & After Competition Maintenance

After Competition Maintenance

It is important to the long term performance of your CRF to practice a consistent maintenance program. Right after the event is a good time to begin your next maintenance cycle.

After Race (CRF450RX)/Heat (CRF450R) Lubrication


Apply a light coating of rust-inhibiting oil to the drive sprocket and any steel portions of the chassis or engine where the paint has worn away.

This will prevent rusting of the exposed metal.

Apply rust-inhibiting oil more heavily if the event was particularly wet or muddy. Take care to avoid spraying any oil near the brake pads or the brake discs.

Take care to prevent catching your fingers between the chain and sprocket.

Remove the drive chain, clean and lubricate it (pages 127 - 129). Be sure the chain is wiped clean and is dry before lubricating the chain.

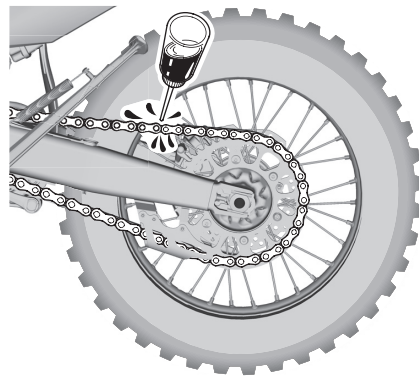

Routine Cleaning

If your CRF is only slightly dirty, it is best to clean it by hand with the aid of a stiff bristled nylon brush and some clean rags.


Take care to prevent catching your fingers between the chain and sprocket.

A variety of reasonably priced cleaning brushes are available from variety, drug, food, and hardware stores. Some of these brushes are extremely useful in removing dirt from the many tight contours of the metal pieces of your CRF. Avoid using stiff, abrasive brushes on the plastic or rubber parts.

If your CRF was exposed to sea air or salt water, rinse it as soon as possible after the event, dry it, and apply a spray lubricant to all metal parts.

If you decide to wash your CRF or use cleaners, refer to *Appearance Care* (page 138).

Maintenance Component Locations

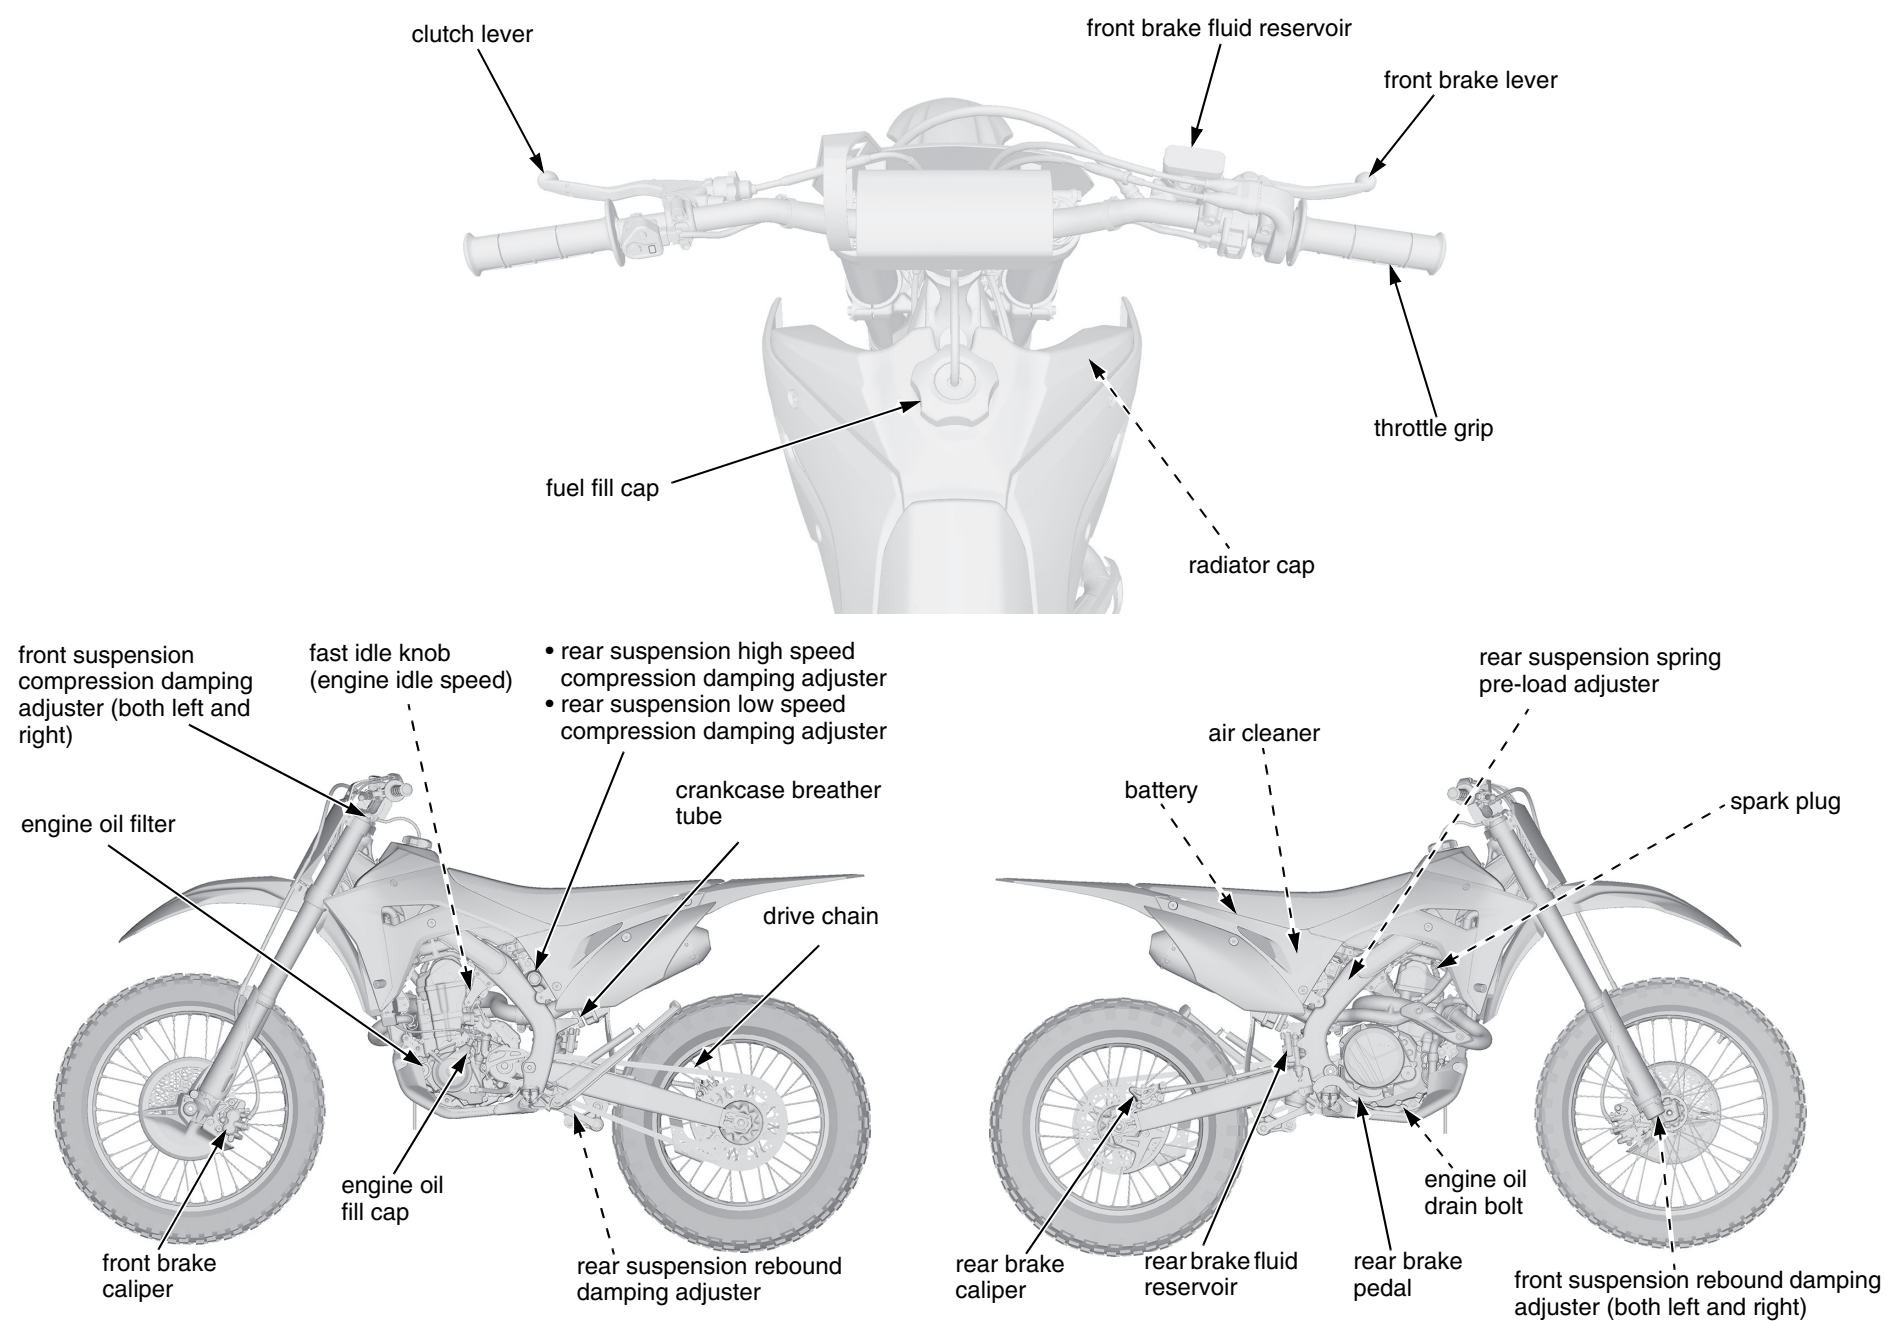


Seat

Refer to *Important Safety Precautions* on page 27.

Removal


1. Remove the seat mounting bolts (1) and collars (2).
2. Remove the seat (3) by pulling it backward.

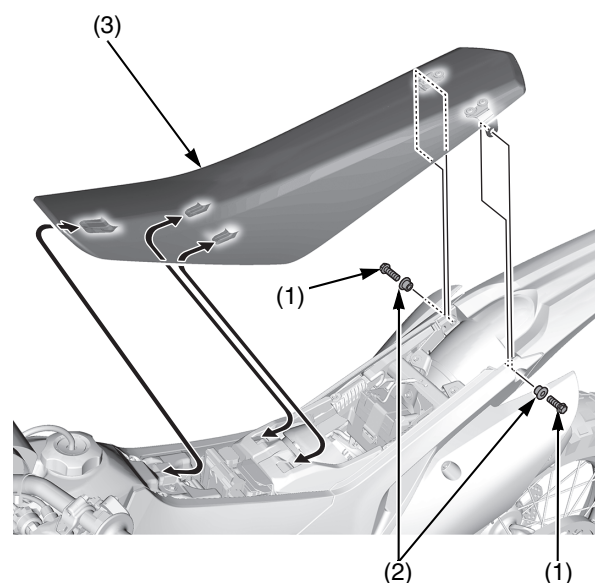

(1) seat mounting bolts
(2) collars
(3) seat

Installation

1. Install the seat while aligning the seat front prong (1) with the slot (2) of the fuel tank and seat centre prongs (3) with the seat support base slots (4).
2. Install and tighten the collars (5) and seat mounting bolts (6) to the specified torque: 26 N·m (2.7 kgf·m, 19 lbf·ft)

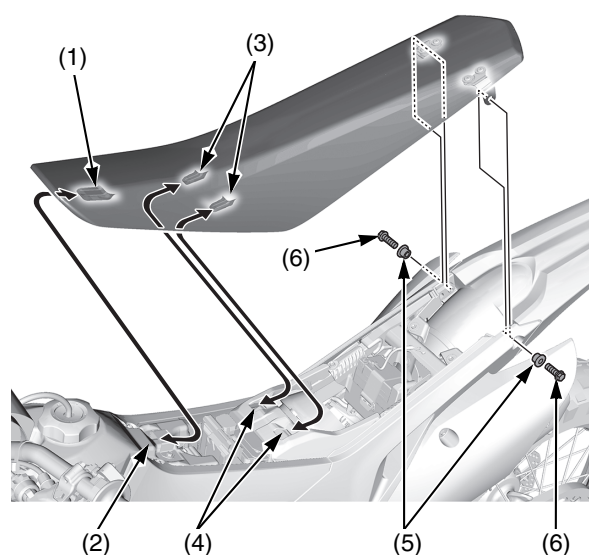

(1) seat front prong
(2) slot
(3) seat centre prongs
(4) seat support base slots
(5) collars
(6) seat mounting bolts


Fuel Tank (CRF450RX)

Refer to *Important Safety Precautions* on page 27.

Removal


1. Remove the seat (page 38).
2. Remove the shroud A bolt (1), shroud B bolt (2), shroud C bolt (3) and shroud D bolt (4).
3. Slide the shroud (5) toward the up to separate them from the air cleaner housing cover (6), and then remove the shroud.

The right and left shrouds can be removed in the same manner.

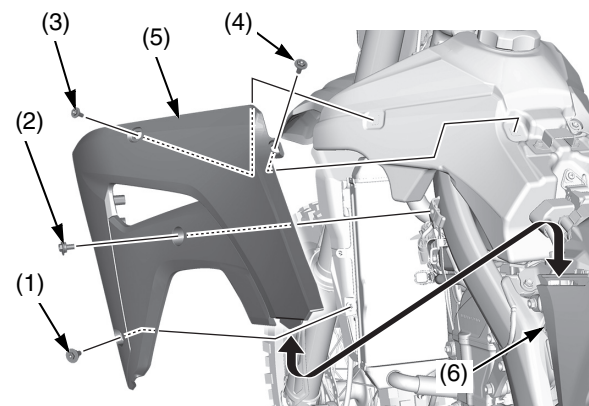


- (1) shroud A bolt
(2) shroud B bolt
(3) shroud C bolt
(4) shroud D bolt
(5) shroud
(6) air cleaner housing cover

4. Install a hose clamp (7) to the breather tube (8) and set the hose clamp securely.
5. Pull the breather tube out of steering stem nut (9).

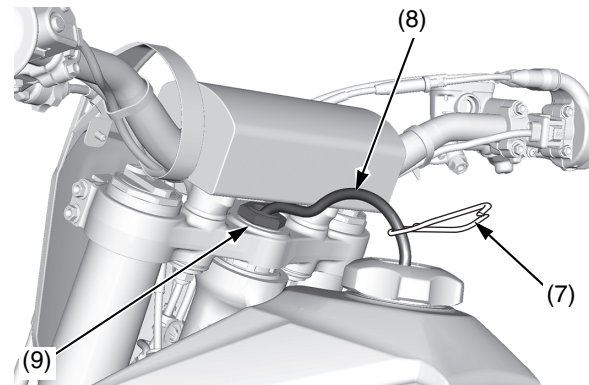

- (7) hose clamp
(8) breather tube
(9) steering stem nut

6. Remove the fuel tank bolt (10) and collar (11).
7. Unhook the fuel tank band (12).

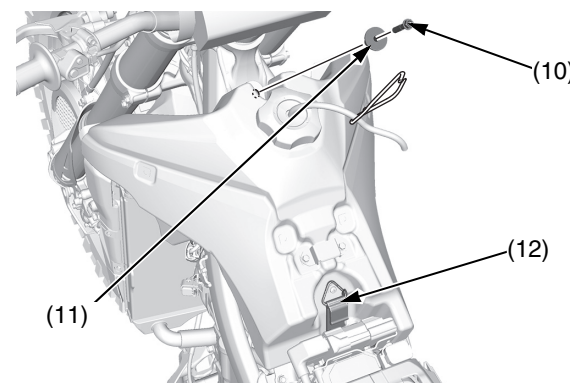

- (10) fuel tank bolt
(11) collar
(12) fuel tank band


8. Lift the fuel tank (13) out of the frame and hang it to the left of the frame. Check the fuel tank stopper cable (14) for deterioration, kinks or other damage.

Do not support the fuel tank by the fuel feed hose (15).

⚠ WARNING

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

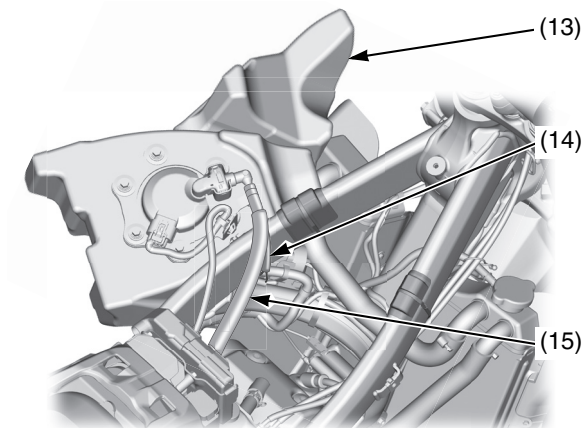


- (13) fuel tank
(14) fuel tank stopper cable
(15) fuel feed hose

(cont'd)

Fuel Tank (CRF450RX)


9. Check for interference between the frame and tank, and adjust the cushion rubbers (16) on both sides of the frame if necessary.

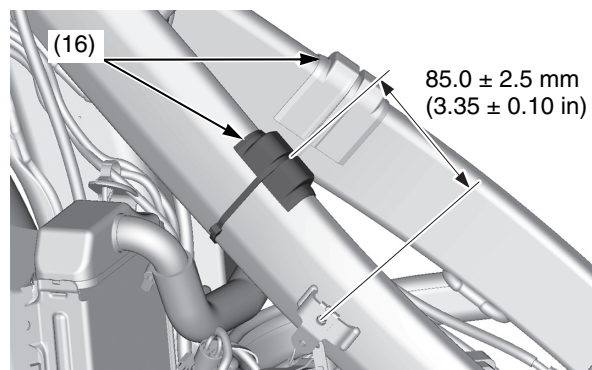

(16) cushion rubbers

Installation


1. Install the fuel tank (1) on the frame.
2. Install and tighten the collar (2) and fuel tank bolt (3) to the specified torque:
10 N·m (1.0 kgf·m, 7 lbf·ft)
3. Hook the fuel tank band (4).

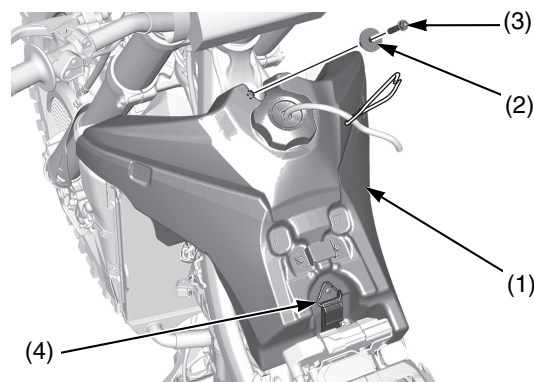

(1) fuel tank
(2) collar

(3) fuel tank bolt
(4) fuel tank band

4. Put the breather tube (5) in the steering stem nut (6).
5. Remove the hose clamp (7) from the breather tube.

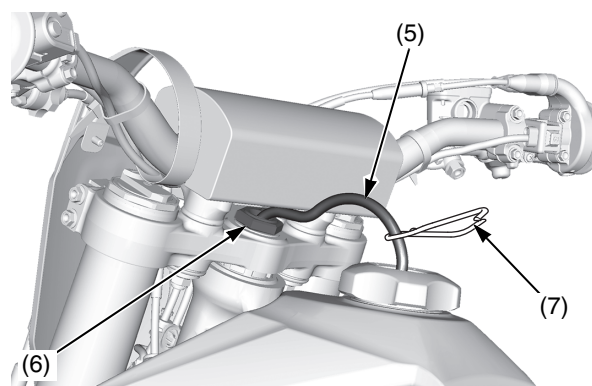


(5) breather tube
(6) steering stem nut

(7) hose clamp

6. Slide the shroud (8) toward the down so that the shroud tab (9) and the slot (10) on the air cleaner housing cover (11) is aligned.
7. Install the shroud D bolt (12), shroud C bolt (13), shroud B bolt (14) and shroud A bolt (15). Tighten the shroud A and B bolts to the specified torque:
10 N·m (1.0 kgf·m, 7 lbf·ft)
Tighten the shroud C and D bolt to the specified torque:
5.2 N·m (0.5 kgf·m, 3.8 lbf·ft)

The right and left shrouds can be installed in the same manner.

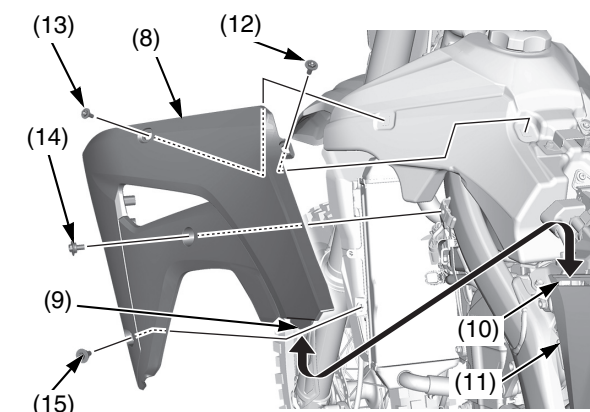

(8) shroud

(9) tab

(10) slot

(11) air cleaner housing cover

(12) shroud D bolt

(13) shroud C bolt

(14) shroud B bolt

(15) shroud A bolt

8. Install the seat (page 38).


Fuel Tank (CRF450R)

Refer to *Important Safety Precautions* on page 27.

Removal


1. Remove the seat (page 38).
2. Remove the shroud A bolt (1), shroud B bolt (2) and shroud C bolt (3).
3. Slide the shroud (4) toward the up to separate them from the air cleaner housing cover (5), and then remove the shroud.

The right and left shrouds can be removed in the same manner.

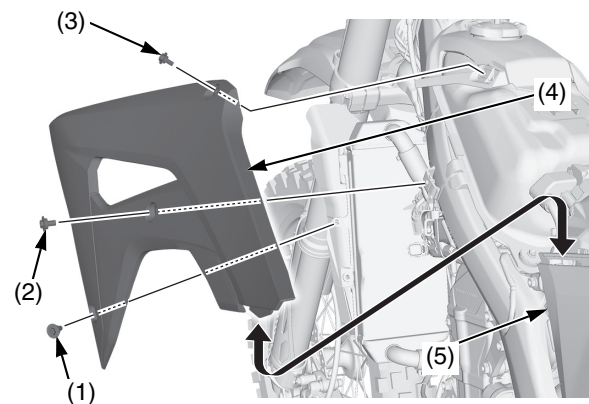

- (1) shroud A bolt
(2) shroud B bolt
(3) shroud C bolt
(4) shroud
(5) air cleaner housing cover


4. Install a hose clamp (6) to the breather tube (7) and set the hose clamp securely.
5. Pull the breather tube out of steering stem nut (8).

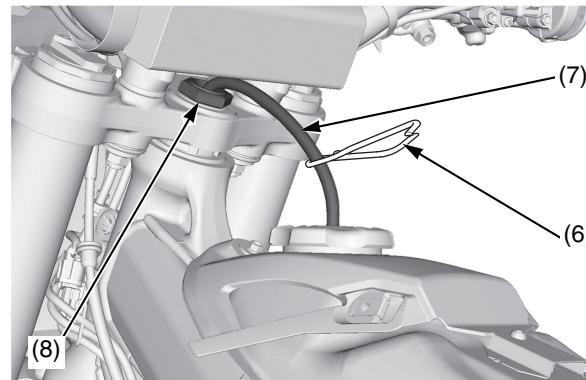

- (6) hose clamp
(7) breather tube

(8) steering stem nut

6. Remove the fuel tank bolts (9) and washers (10).

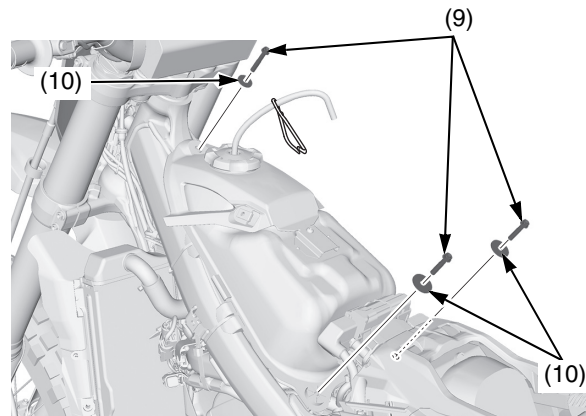

- (9) fuel tank bolts
(10) washers

7. Lift the fuel tank (11) out of the frame and hang it to the left of the frame. Check the fuel tank stopper cable (12) for deterioration, kinks or other damage.

Do not support the fuel tank by the fuel feed hose (13).


NOTICE

The fuel tank is made of titanium material. Since the fuel tank has not been painted, it might be discoloured with mud and dust. To remove mud or dust, use a sponge or soft cloth and a stainless steel kitchen detergent, then rinse well clean water. After washing, rinse with plenty of water and dry with a clean cloth.

⚠ WARNING

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

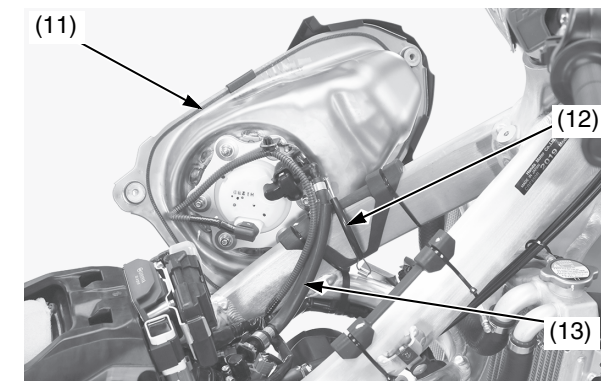


- (11) fuel tank
(12) fuel tank stopper cable
(13) fuel feed hose

(cont'd)

Fuel Tank (CRF450R)

8. Check for interference between the frame and tank, and check the cushion rubbers (14) on both sides of the frame for hardening or cracks.

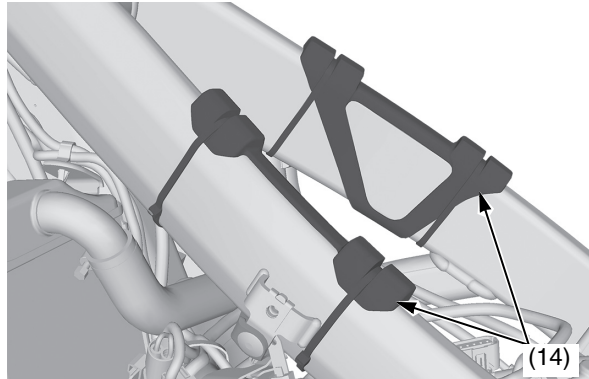


(14) cushion rubbers

NOTICE

*Do not ride your CRF if the cushion rubbers have been removed.
It may cause fuel tank cracking.*


Installation

1. Install the fuel tank (1) on the frame.
2. Install and tighten the washers (2) and fuel tank bolts (3) to the specified torque:
10 N·m (1.0 kgf·m, 7 lbf·ft)

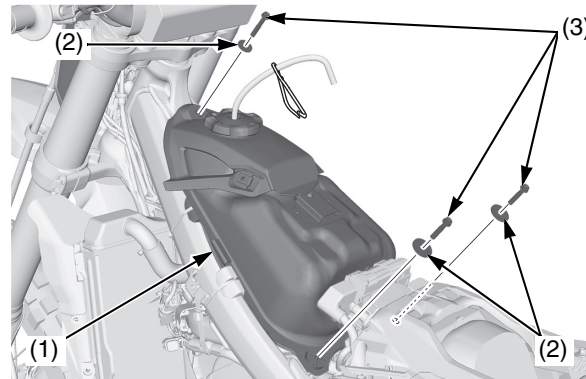

(1) fuel tank
(2) washers
(3) fuel tank bolts


3. Put the breather tube (4) in the steering stem nut (5).
4. Remove the hose clamp (6) from the breather tube.

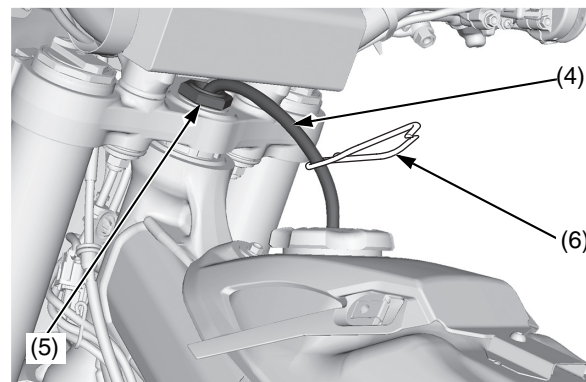

(4) breather tube
(5) steering stem nut
(6) hose clamp

5. Slide the shroud (7) toward the down so that the shroud tab (8) and the slot (9) on the air cleaner housing cover (10) is aligned.
6. Install the shroud C bolt (11), B bolt (12) and shroud A bolt (13).
Tighten the shroud A and B bolts to the specified torque:
10 N·m (1.0 kgf·m, 7 lbf·ft)
Tighten the shroud C bolt to the specified torque:
5.2 N·m (0.5 kgf·m, 3.8 lbf·ft)

The right and left shrouds can be installed in the same manner.

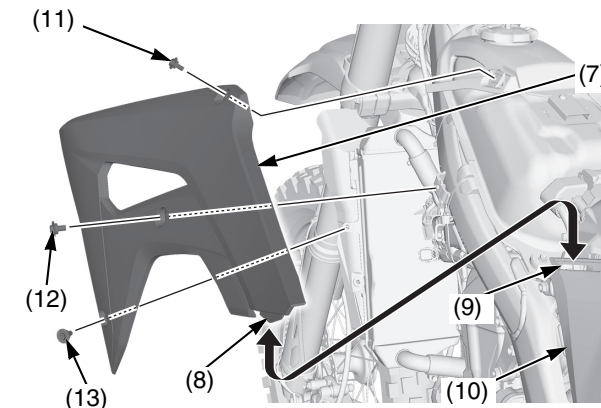

(7) shroud
(8) tab
(9) slot
(10) air cleaner housing cover
(11) shroud C bolt
(12) shroud B bolt
(13) shroud A bolt


7. Install the seat (page 38).

Subframe

Refer to *Important Safety Precautions* on page 27.


Removal

1. Remove the seat (page 38).
2. Remove the right and left shrouds (page 39, 41).
3. Remove the right and left mufflers (page 130).
4. Remove the seat support base mounting bolts (1) and collars (2).

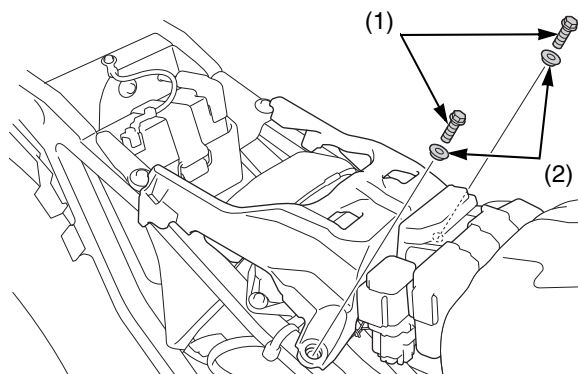


(1) seat support base mounting bolts
(2) collars

5. Disconnect the starter/ignition relay connector (3), lift the seat support base (4), and hang it to the left of the subframe (5).

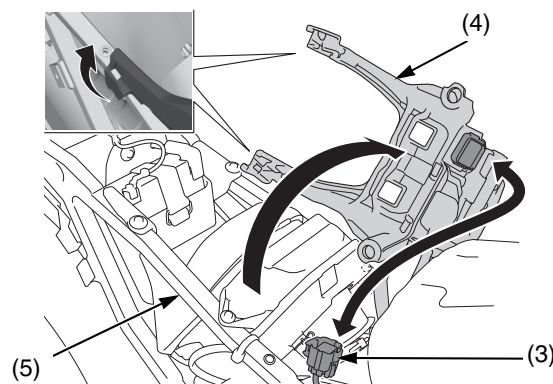


(3) starter/ignition relay connector
(4) seat support base
(5) subframe

6. Disconnect the breather tube (6) and IAT sensor connector (7).
7. Loosen the air cleaner connecting tube clamp screw (8).

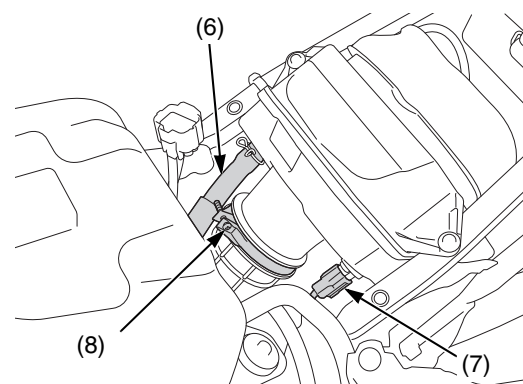


(6) breather tube
(7) IAT sensor connector
(8) air cleaner connecting tube clamp screw

8. Disconnect the negative (–) terminal (9) from the battery (10).

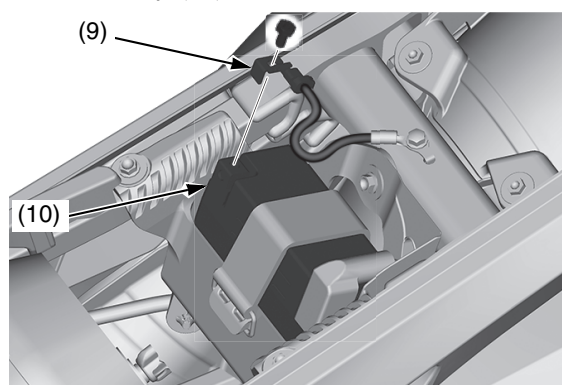

(9) negative (–) terminal
(10) battery

9. Remove the start magnetic switch stay bolt (11) and plastic wire band (12). Pull out the start magnetic switch (13). Remove the start magnetic switch cover (14). Remove the battery cable terminal bolt (15) and disconnect the battery cable terminal (16) from the start magnetic switch.

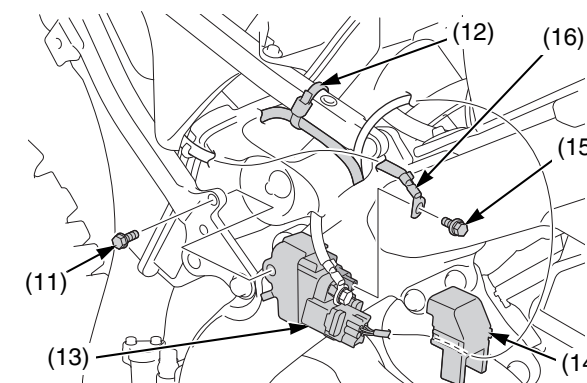


(11) start magnetic switch stay bolt
(12) wire band
(13) start magnetic switch
(14) start magnetic switch cover
(15) battery cable terminal bolt
(16) battery cable terminal

(cont'd)

Subframe


10. Remove the subframe lower bolts (17) and upper bolts (18).
Remove the subframe (5) while disconnecting the air cleaner connecting tube (19).

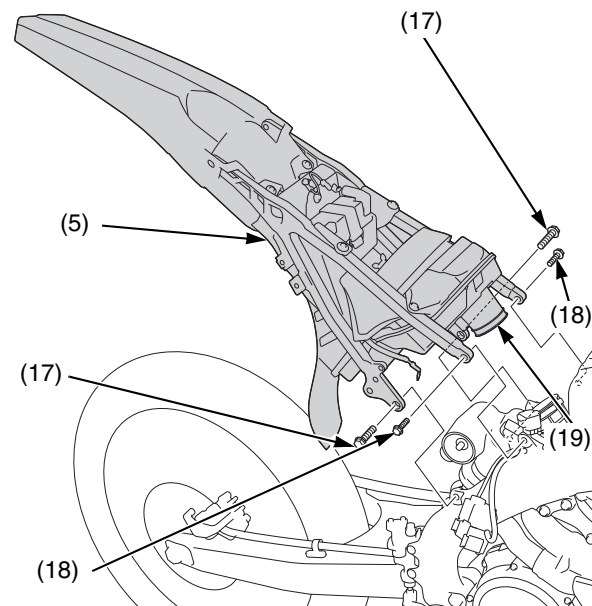

(5) subframe
(17) subframe lower bolts
(18) subframe upper bolts
(19) air cleaner connecting tube

Installation


1. Align the upper and lower ends of the subframe to the main frame while connecting the air cleaner box (1) to the air cleaner connecting tube (2), and loosely install all subframe bolts.

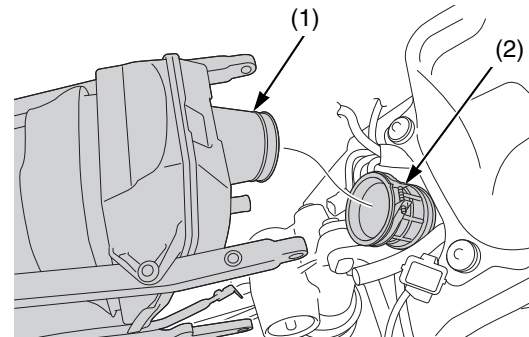


(1) air cleaner box
(2) air cleaner connecting tube

2. Tighten the subframe upper bolts (3) first and then tighten the lower bolts (4) to the specified torque:
subframe upper bolts:
32 N·m (3.3 kgf·m, 24 lbf·ft)
subframe lower bolts:
49 N·m (5.0 kgf·m, 36 lbf·ft)

Left side:

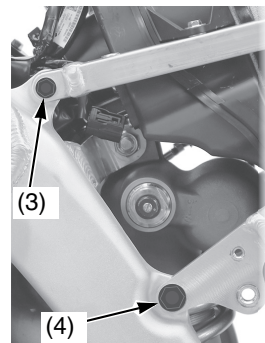


Right side:

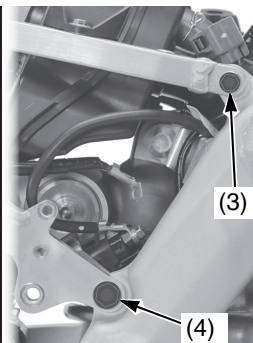

(3) subframe upper bolts
(4) subframe lower bolts


3. Connect the battery cable terminal (5) to the start magnetic switch (6).
Install and tighten the battery cable terminal bolt (7) to the specified torque:
7 N·m (0.7 kgf·m, 5.2 lbf·ft)
Install the start magnetic switch cover (8).
Install the start magnetic switch (6).
Install and tighten the start magnetic switch stay bolt (9) to the specified torque:
12 N·m (1.2 kgf·m, 9 lbf·ft)
Install the plastic wire band (10).

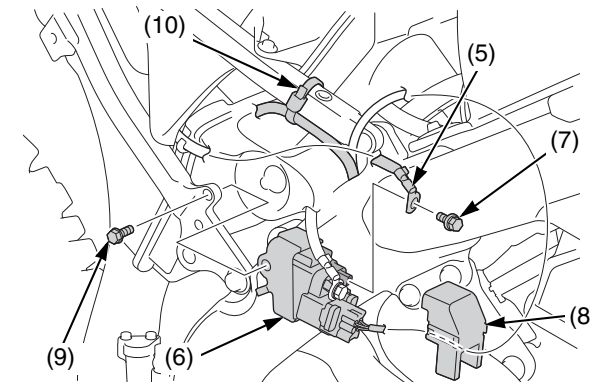

(5) battery cable terminal
(6) start magnetic switch
(7) battery cable terminal bolt
(8) start magnetic switch cover
(9) start magnetic switch stay bolt
(10) wire band


Subframe

4. Connect the negative (–) terminal (11) to the battery (12).
Tighten the negative (–) terminal bolt (13) to the specified torque:
2.0 N·m (0.2 kgf·m, 1.5 lbf·ft)

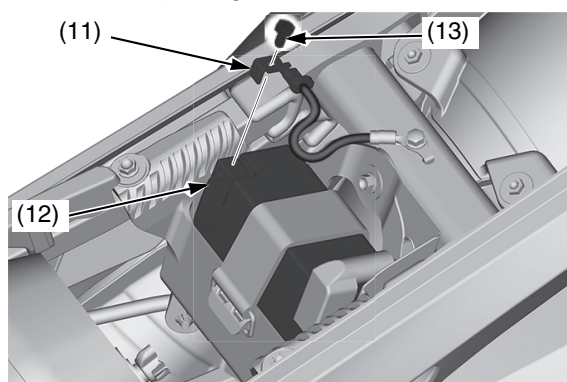


(11) negative (–) terminal
(12) battery
(13) negative (–) terminal bolt

5. Make sure that the air cleaner box and the air cleaner connecting tube are correctly connected and tighten the air cleaner connecting tube clamp screw (14) so the distance between the clamp ends is 6 - 9 mm (0.24 - 0.35 in).
6. Connect the breather tube (15) and IAT sensor connector (16).

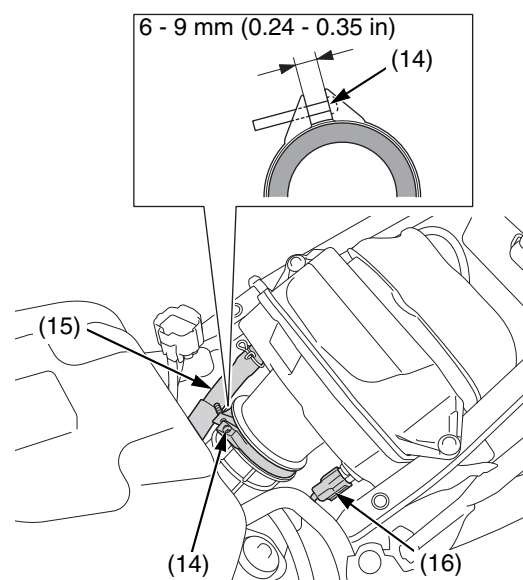

(14) air cleaner connecting tube clamp screw
(15) breather tube
(16) IAT sensor connector

7. Connect the starter/ignition relay connector (17) and install the seat support base (18).
8. Install and tighten the collars (19) and seat support base mounting bolts (20) to the specified torque:
10 N·m (1.0 kgf·m, 7 lbf·ft)

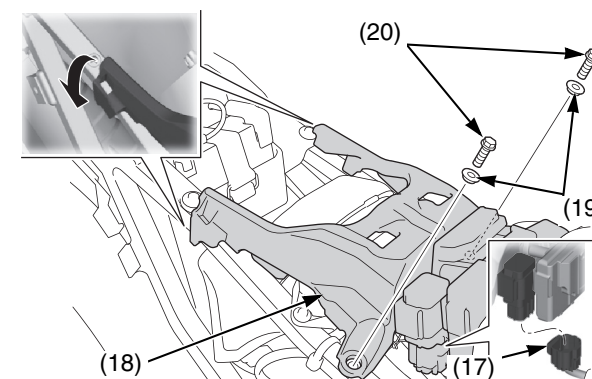

(17) starter/ignition relay connector
(18) seat support base
(19) collars
(20) seat support base mounting bolts

9. Install the left and right mufflers (page 131).
10. Install the right and left shrouds (page 40, 42).
11. Install the seat (page 38).

Fuel System (CRF450RX)

Refer to *Important Safety Precautions* on page 27.

Fuel

Type	Unleaded
Research Octane Number	95 (or higher)

Use only unleaded fuel in your CRF. If you ride your CRF in a country where leaded fuel might be available, take precautions to use only unleaded fuel.

Your engine is designed to use any unleaded petrol that has a pump octane number (R + M)/2 of 91 or higher, or a research octane number of 95 or higher. Petrol pumps at service stations normally display the pump octane number. For information on the use of *Petrol Containing Alcohol*, see page 182.

Use of lower octane petrol can cause persistent “pinging” or “spark knock” (a louder rapping noise) which, if severe, can lead to engine damage. (Light pinging experienced while operating under a heavy load, such as climbing a hill, is no cause for concern.)


If pinging or spark knock occurs at a steady engine speed under normal load, change brands of petrol. If pinging or spark knock persists, consult your dealer.

Never use stale or contaminated petrol. Avoid getting dirt, dust or water in the fuel tank.

Refuelling Procedure

- To open the fuel fill cap (1), pull the breather tube (2) out of the steering stem nut (3). Turn the fuel fill cap counterclockwise and remove it.
- Add fuel until the level reaches the bottom of the filler neck (4).
Fuel Tank Capacity:
8.5 ℓ (2.25 US gal, 1.87 Imp gal)

- Be careful not to damage the fuel pump while filling the fuel tank.
- Avoid overfilling the tank. There should be no fuel in the filler neck.

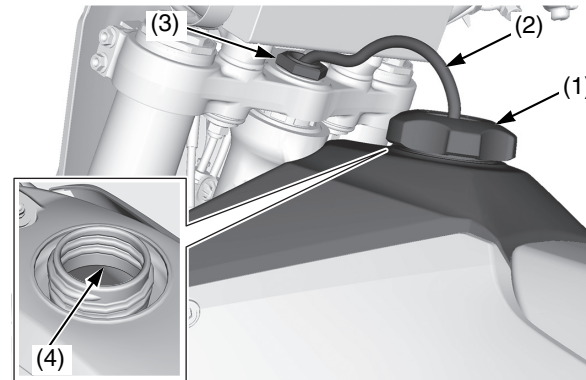

(1) fuel fill cap
(2) breather tube
(3) steering stem nut
(4) filler neck bottom

⚠ WARNING


Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

- Close the fuel fill cap and insert the breather tube into the steering stem nut.

Fuel Line Inspection

- Hang the fuel tank to the left side of the frame (page 39).
- Remove the fuel quick connect fitting cover (1).
- Check the fuel line (2) for cracks, deterioration, damage or leakage. Replace the fuel line, if necessary.

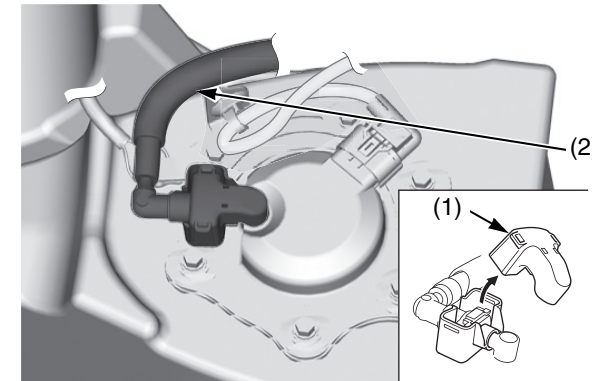


(1) fuel quick connect fitting cover
(2) fuel line

- Install the fuel quick connect fitting cover.
- Install the fuel tank (page 40).

Fuel System (CRF450RX)

Fuel Pressure Relieving

1. Hang the fuel tank to the left side of the frame (page 39).
2. Disconnect the fuel pump connector (1).

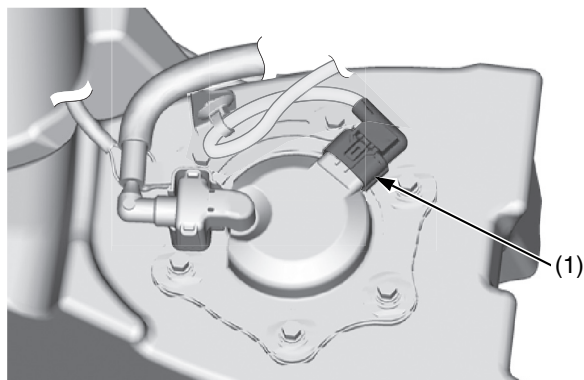

(1) fuel pump connector

3. Reposition the fuel tank and start the engine and let it idle until the engine stalls.


Fuel Line Replacement

Disconnection

1. Relieve the fuel pressure (this page).
2. Hang the fuel tank to the left side of the frame.
3. Remove the fuel quick connect fitting cover (1) from the fuel pump (2).
4. Check the fuel quick connect fitting (3) for dirt, and clean if necessary.


Injector side:

Fuel pump side:

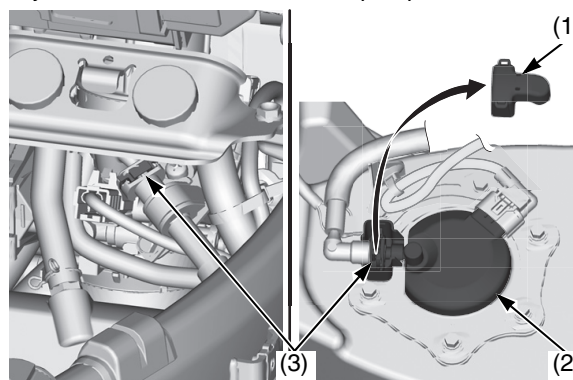

- (1) fuel quick connect fitting cover
- (2) fuel pump
- (3) fuel quick connect fitting

5. Remove the bolt (4), clamp and setting rubber (5).

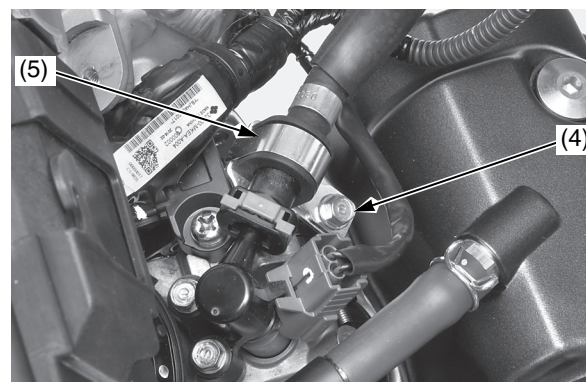


(4) bolt

(5) clamp and setting rubber

6. Place a shop towel (6) over the fuel quick connect fitting.

Injector side:

Fuel pump side:

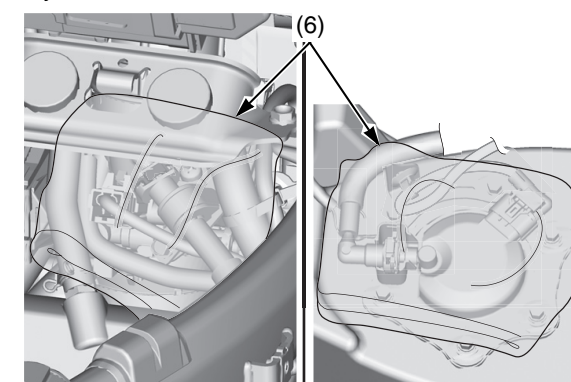

(6) shop towel

(cont'd)

Fuel System (CRF450RX)


7. Unlock the slide retainer (7) of the quick connect fitting by completely pulling it up. Release the fuel quick connect fitting from the fuel joint (8) while holding the connector housing (9).
- Use a shop towel to absorb the remaining fuel in the fuel feed hose.
 - Be careful not to damage the hose or other parts.
 - Do not use tools.
 - Dirt intruding into the connector housing may cause slide retainer sticking.

⚠ WARNING

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.


- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

Injector side:

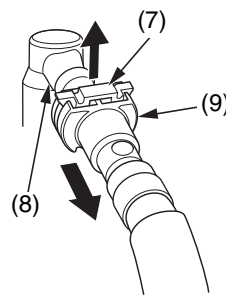


(7) slide retainer
(8) fuel joint
(9) connector housing

Fuel pump side:

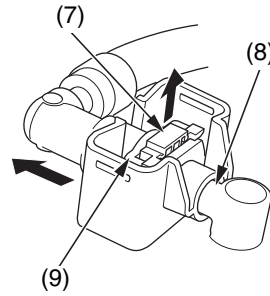


8. Remove the rubber cover (10) from the fuel joint of the fuel pump.

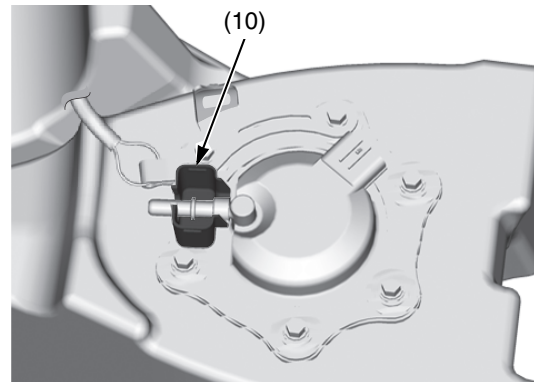

(10) rubber cover


9. To prevent damage and keep foreign matter out, cover the disconnected connector (11) and fuel joint (8) with plastic bags (12).

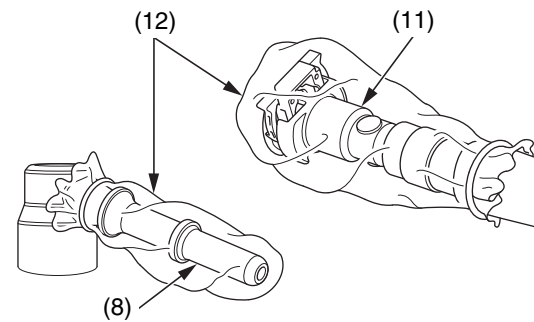

(8) fuel joint
(11) disconnected connector
(12) plastic bags


Connection

1. Install the rubber cover (1) onto the fuel joint (2) of the fuel pump as shown.

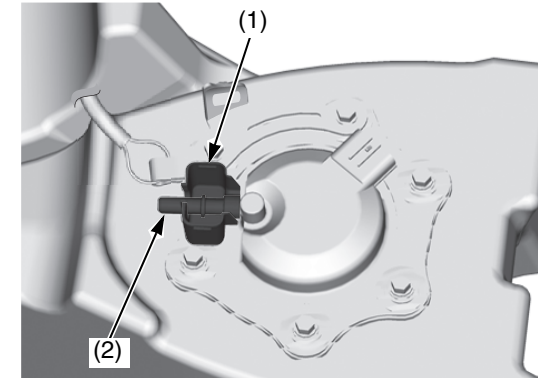

(1) rubber cover
(2) fuel joint

2. Be sure that the slide retainer (3) is completely pulled up before connecting the quick connect fitting.
- Do not bend or twist the fuel feed hose.
 - Do not reuse the kinked or damaged fuel hose.
 - Do not use gloves or a shop towel while installing the quick connect fitting.

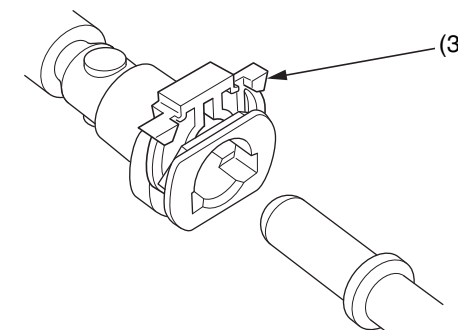


(3) slide retainer

Fuel System (CRF450RX)


- Connect the quick connect fitting to the fuel joint (2) until you hear the “click” while holding the connector housing (4). Lock the slide retainer (3) by pushing it until you hear the “click”.

If it is hard to connect, put a small amount of engine oil on the pipe end of the fuel joint.

Injector side:

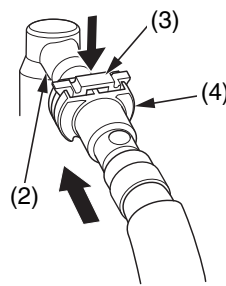


Fuel pump side:

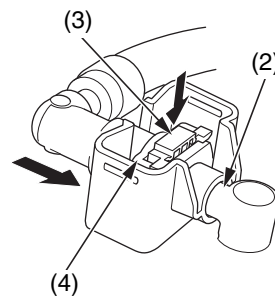

- (2) fuel joint
- (3) slide retainer
- (4) connector housing

- Make sure the connection is secure and that the slide retainer is firmly locked into place; check visually and by pulling the connector housing.


- Install the setting rubber (5), clamp (6) and bolt (7) by aligning the clamp tab (8) with the groove (9) of the stay. Tighten the bolt securely.

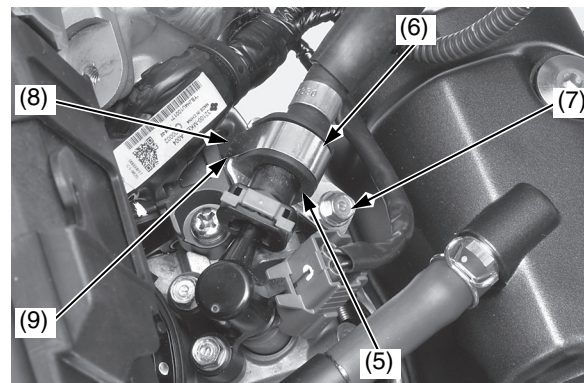

- (5) setting rubber
- (6) clamp
- (7) bolt
- (8) clamp tab
- (9) groove

- Install the fuel quick connect fitting cover (10).

Be sure the rubber cover (1) is properly installed between the fuel quick connect fitting cover and fuel pump.

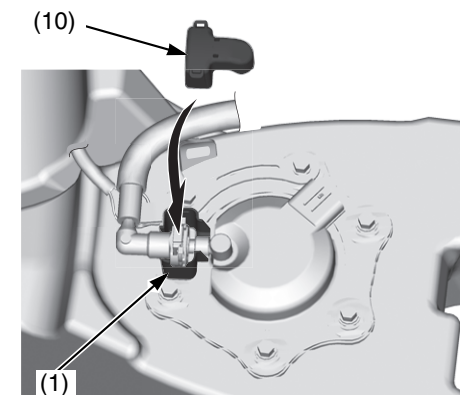

- (1) rubber cover
- (10) fuel quick connect fitting cover

- Increase the fuel pressure (page 55).

Fuel System (CRF450RX)

Fuel Pump Filter Replacement

Empty the fuel tank by transferring fuel into an approved petrol container using a commercially available hand siphon or an equivalent method. Be careful not to damage the fuel pump while draining the fuel in the fuel tank.


⚠ WARNING

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.


- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

Removal

1. Relieve the fuel pressure (page 47).
2. Disconnect the fuel line from the fuel pump (page 47).
3. Remove the fuel tank (1) by releasing the stopper cable (2) from the hook (3) of the frame.
4. Pull the harness band clip (4) while pressing both side of the anchor and disconnect it.

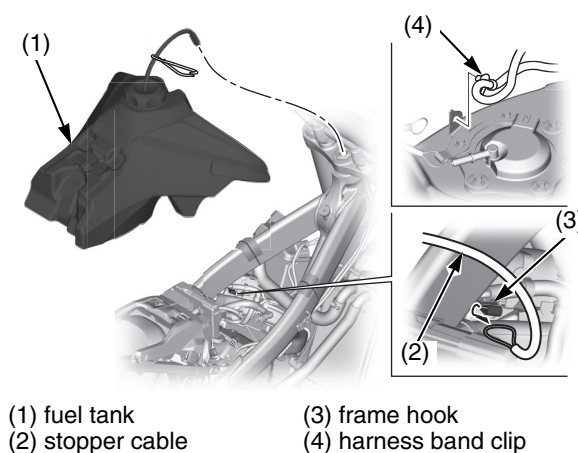


5. Remove the fuel pump mounting bolts (5), stopper cable guide (6), stopper cable (2), washers (7), collars (8), conical spring washers (9) and fuel pump plate (10) while holding the fuel tank.

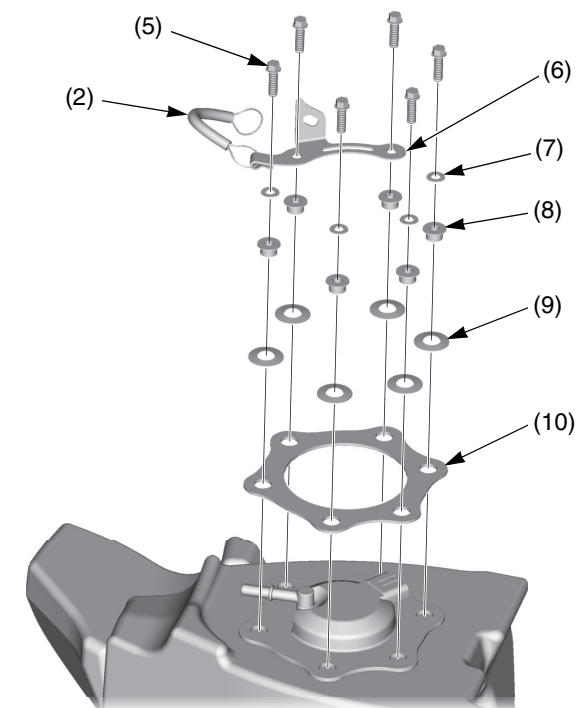

Fuel System (CRF450RX)

6. Remove the fuel pump unit (11) and O-rings (12).


Be careful not to damage the fuel pump unit.

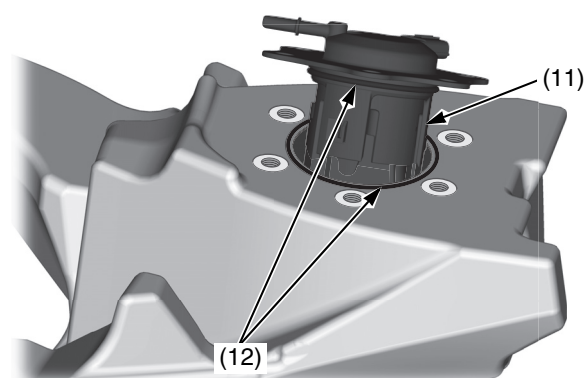

(11) fuel pump unit
(12) O-rings

7. Disconnect the fuel pump wire terminals (13) from the fuel pump base (14).

Be careful not to damage the wires when disconnecting the fuel pump wire terminals.

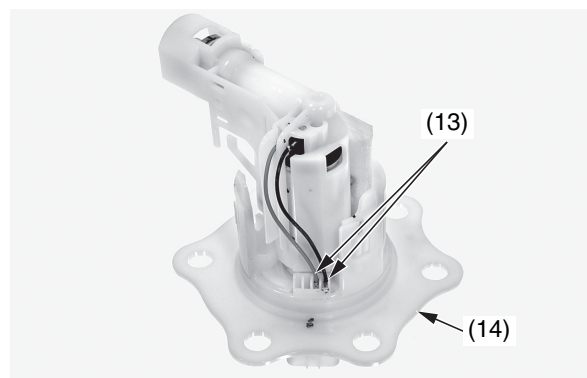


(13) fuel pump wire terminals
(14) fuel pump base

8. Check the hooks (15) of the fuel pump unit holder and tabs (16) on the fuel pump base for damage or discolouration. If the hooks and tabs are damaged or discoloured, replace the fuel pump unit as an assembly.

9. Release the hooks of the fuel pump unit holder from the grooves (17) in the fuel pump base tabs while pushing the holder against the base and slightly spreading the base tabs.

Be careful not to damage the hooks and tabs.

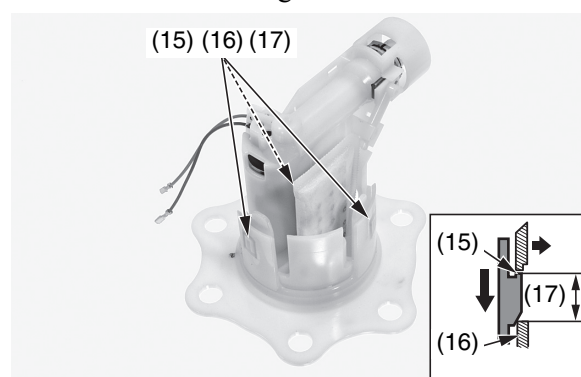


(15) hooks
(16) tabs

(17) grooves


10. Remove the fuel pump unit holder assembly (18) from the fuel pump base (14) and remove the O-ring (19).

Wipe the spilled out fuel immediately.

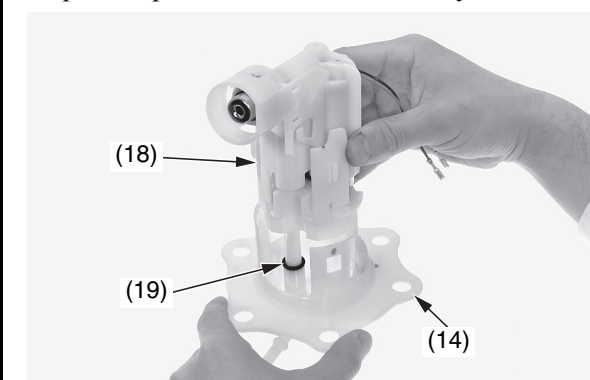

(14) fuel pump base
(18) fuel pump unit holder assembly
(19) O-ring

11. Remove the fuel pump stopper (20) and damper rubber (21).

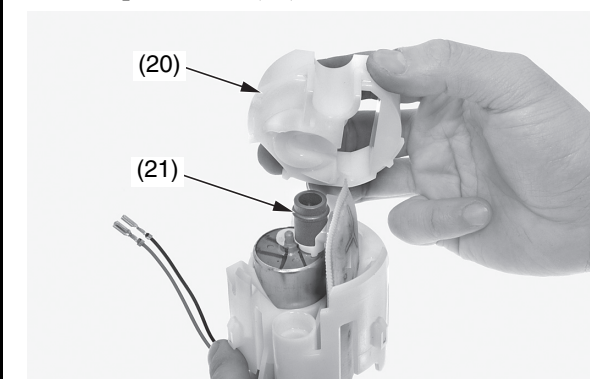


(20) fuel pump stopper
(21) damper rubber

(cont'd)

Fuel System (CRF450RX)


12. Remove the fuel pump assembly (22) with fuel pump filter (23), O-ring (24) from the fuel pump unit holder (25).

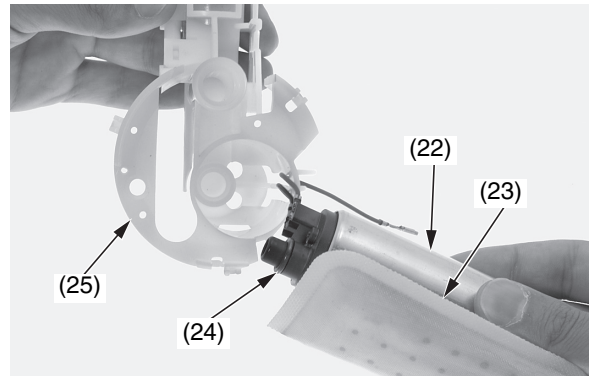

(22) fuel pump assembly
(23) fuel pump filter
(24) O-ring
(25) fuel pump unit holder

13. Check the fuel pump filter (23) for clog, damage or deterioration and replace it if necessary.

14. Remove the fuel pump filter from the fuel pump assembly (22).

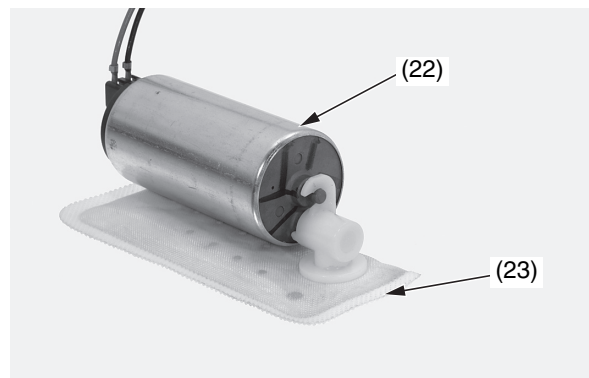


(22) fuel pump assembly
(23) fuel pump filter

Installation


1. Install the fuel pump filter (1) onto the fuel pump assembly (2) aligning its hook (3) with the joint boss (4) completely.

Be careful not to damage the hook.

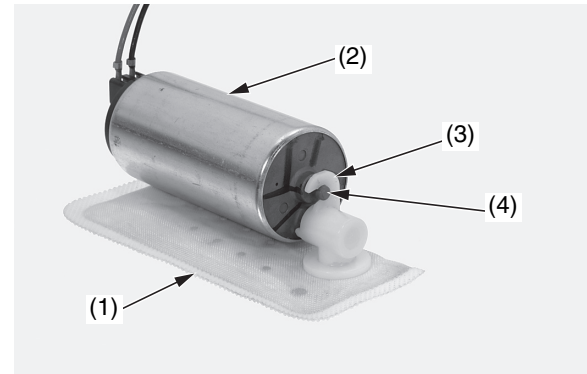


(1) fuel pump filter (3) hook
(2) fuel pump assembly (4) joint boss

2. Apply small amount of engine oil to a new O-ring (5).
Install a new O-ring to the fuel pump assembly (2).
3. Install the fuel pump assembly with fuel pump filter into the fuel pump unit holder (6) while routing the fuel pump red (7) and black (8) wires through the holder grooves (9) as shown.

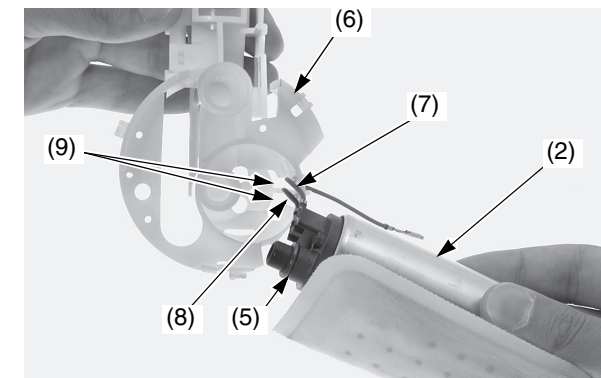

(2) fuel pump assembly (7) red wire
(5) O-ring (new) (8) black wire
(6) fuel pump unit holder (9) grooves

4. Install a new damper rubber (10) to the fuel pump assembly as shown.
Install fuel pump stopper (11).

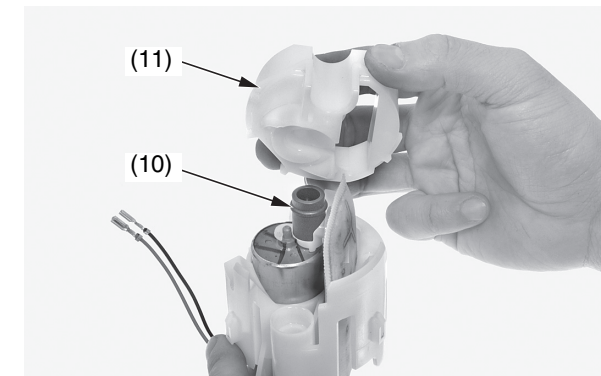


(10) damper rubber (new) (11) fuel pump stopper

Fuel System (CRF450RX)

5. Apply small amount of engine oil to a new O-ring (12).
Install a new O-ring to the fuel pump base (13).
6. Install the fuel pump unit holder assembly (14) into the fuel pump base while aligning its hooks (15) with the grooves (16) in the fuel pump base tabs (17).
If the gap between the hooks and tabs is more than 1.0 mm (0.04 in), replace the fuel pump unit.

Be sure that the hooks are completely seated.

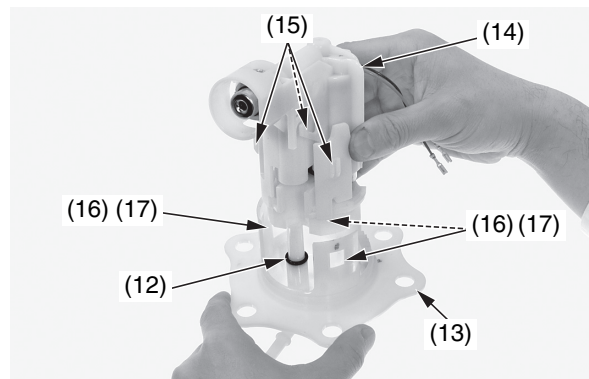


(12) O-ring (new) (15) hooks
(13) fuel pump base (16) grooves
(14) fuel pump unit holder assembly (17) tabs

7. Connect the fuel pump red (18) and black (19) wire terminals to the fuel pump base terminals (20). Push the wire terminals until they stop as shown.

Be careful not to damage the wires.


8. Apply 0.5 g (0.02 oz) maximum of engine oil to a new O-ring (21).
Install a new O-ring onto the fuel pump unit (22).

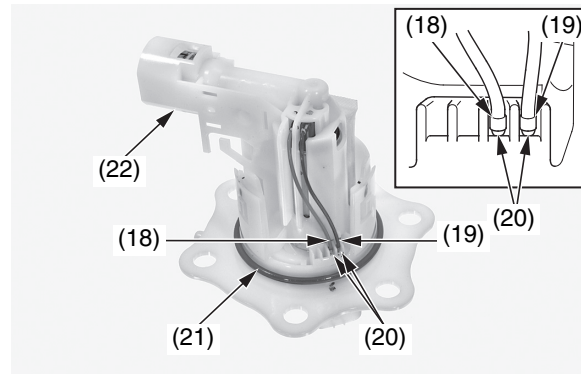

(18) red wire terminal (21) O-ring (new)
(19) black wire terminal (22) fuel pump unit
(20) fuel pump base terminals


9. Apply small amount of engine oil to a new O-ring (23).
Install a new O-ring into the fuel tank groove.
10. Install the fuel pump unit (22) into the fuel tank (24) with its hose joint facing forward.

Be careful not to damage the fuel pump unit.

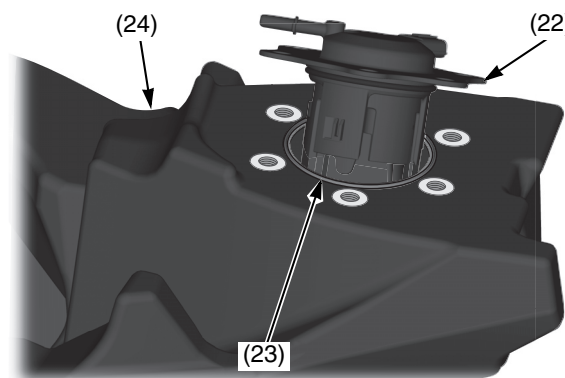

(22) fuel pump unit
(23) O-ring (new)
(24) fuel tank

11. Install the fuel pump plate (25) with its identification mark (26) facing forward the front side and facing up.

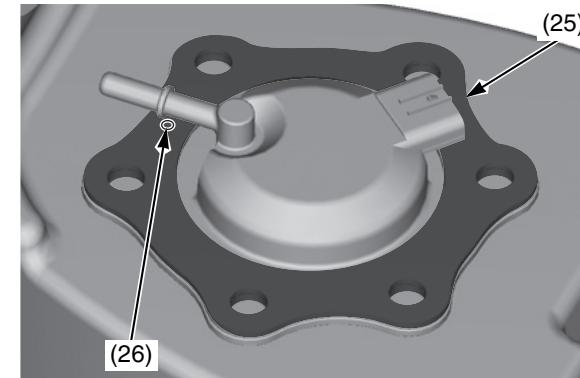


(25) fuel pump plate
(26) identification mark

(cont'd)

Fuel System (CRF450RX)


12. Install the conical spring washers (27), collars (28), washers (29), stopper cable (30), stopper cable guide (31) and fuel pump mounting bolts (32).

Make sure that the convex surfaces of the conical spring washers are upside.

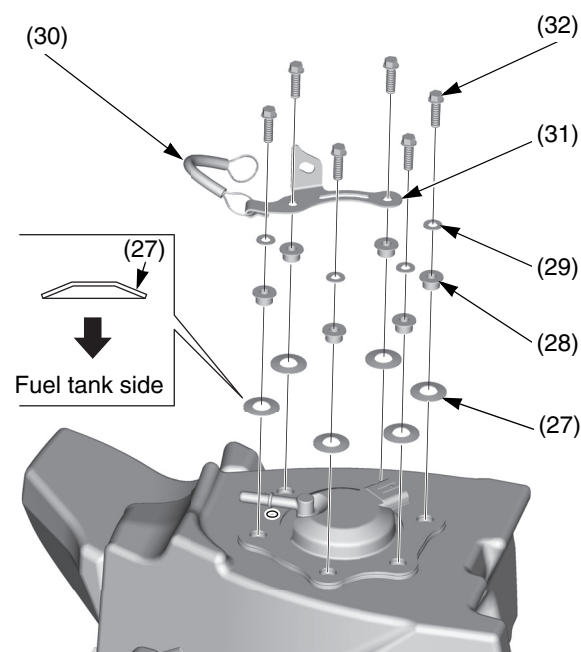


- (27) conical spring washers
(28) collars
(29) washers
(30) stopper cable
(31) stopper cable guide
(32) fuel pump mounting bolts

13. Tighten the fuel pump mounting bolts (32) to the specified torque in the specified sequence as shown:
11 N·m (1.1 kgf·m, 8 lbf·ft)

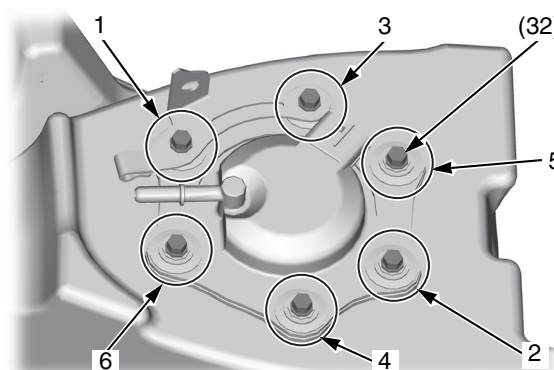

(32) fuel pump mounting bolts

14. Install the harness band clip (33) to the stopper cable guide (31).
15. Install the stopper cable (30) to the hook (34) of the frame while holding the fuel tank (24).

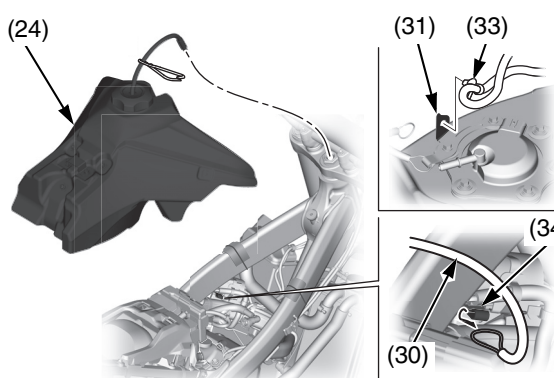

- (24) fuel tank
(30) stopper cable
(31) stopper cable guide
(33) harness band clip
(34) hook

16. Connect the fuel line (page 48).
17. Increase the fuel pressure (page 55).

Fuel System (CRF450RX)

Fuel Pressure Increasing

Make sure enough fuel remains (1.0 ℓ (0.3 US gal, 0.2 Imp gal) minimum) in the fuel tank and add fuel if necessary before increasing fuel pressure.

With the throttle closed.
Pull the clutch lever all the way in, and depress the start button.

The engine will start up with increasing the fuel pressure.

If the engine does not start, check all connector connections and/or refer to an official Honda Shop Manual for troubleshooting of the PGM-FI symptom.

Fuel System (CRF450R)

Refer to *Important Safety Precautions* on page 27.

Fuel

Type	Unleaded
Research Octane Number	95 (or higher)

Use only unleaded fuel in your CRF. If you ride your CRF in a country where leaded fuel might be available, take precautions to use only unleaded fuel.

Your engine is designed to use any unleaded petrol that has a pump octane number $(R + M)/2$ of 91 or higher, or a research octane number of 95 or higher. Petrol pumps at service stations normally display the pump octane number. For information on the use of *Petrol Containing Alcohol*, see page 182.

Use of lower octane petrol can cause persistent “pinging” or “spark knock” (a louder rapping noise) which, if severe, can lead to engine damage. (Light pinging experienced while operating under a heavy load, such as climbing a hill, is no cause for concern.)


If pinging or spark knock occurs at a steady engine speed under normal load, change brands of petrol. If pinging or spark knock persists, consult your dealer.

Never use stale or contaminated petrol. Avoid getting dirt, dust or water in the fuel tank.

Refuelling Procedure

1. To open the fuel fill cap (1), pull the breather tube (2) out of the steering stem nut (3). Turn the fuel fill cap counterclockwise and remove it.
2. Add fuel until the level reaches the bottom of the filler neck (4).
Fuel Tank Capacity:
6.3 ℓ (1.66 US gal, 1.39 Imp gal)

- Be careful not to damage the fuel pump while filling the fuel tank.
- Avoid overfilling the tank. There should be no fuel in the filler neck.

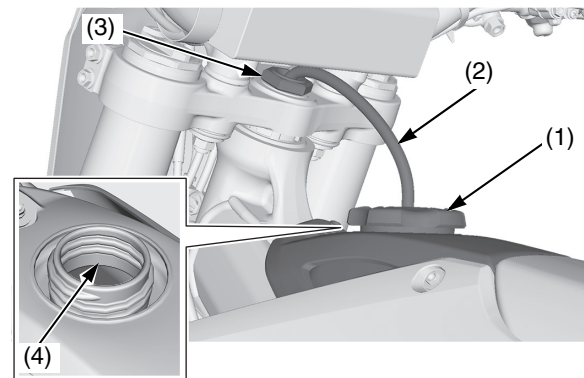

(1) fuel fill cap
(2) breather tube

(3) steering stem nut
(4) filler neck bottom

⚠ WARNING


Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

3. Close the fuel fill cap and insert the breather tube into the steering stem nut.

Fuel Line Inspection

1. Hang the fuel tank to the left side of the frame (page 39).
2. Remove the fuel quick connect fitting cover (1).
3. Check the fuel line (2) for cracks, deterioration, damage or leakage. Replace the fuel line, if necessary.

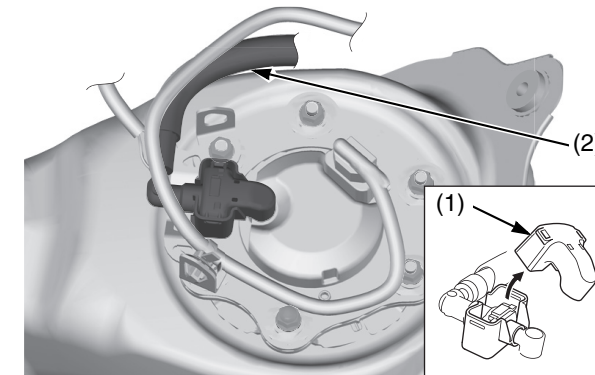


(1) fuel quick connect fitting cover
(2) fuel line

4. Install the fuel quick connect fitting cover.
5. Install the fuel tank (page 40).

Fuel System (CRF450R)

Fuel Pressure Relieving

1. Hang the fuel tank to the left side of the frame (page 41).
2. Disconnect the fuel pump connector (1).

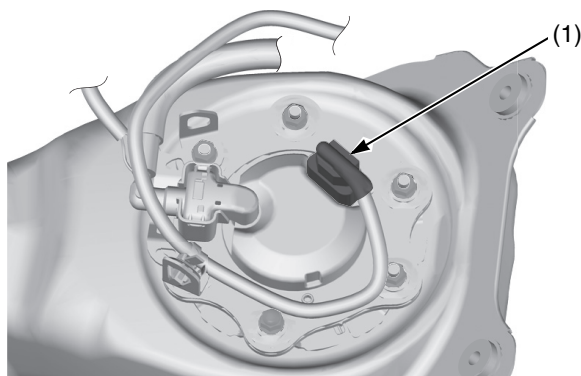

(1) fuel pump connector

3. Reposition the fuel tank and start the engine and let it idle until the engine stalls.


Fuel Line Replacement

Disconnection

1. Relieve the fuel pressure (this page).
2. Hang the fuel tank to the left side of the frame.
3. Remove the fuel quick connect fitting cover (1) from the fuel pump (2).
4. Check the fuel quick connect fitting (3) for dirt, and clean if necessary.


Injector side:

Fuel pump side:

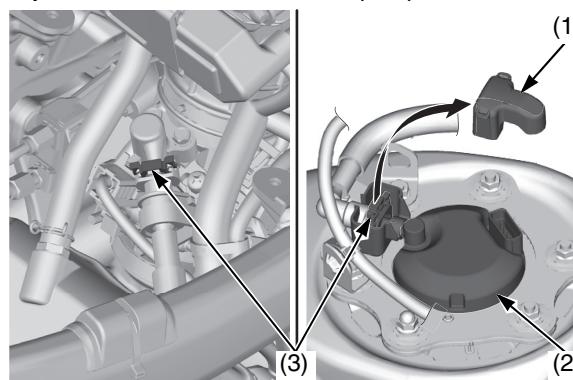

- (1) fuel quick connect fitting cover
- (2) fuel pump
- (3) fuel quick connect fitting

5. Remove the bolt (4), clamp and setting rubber (5).

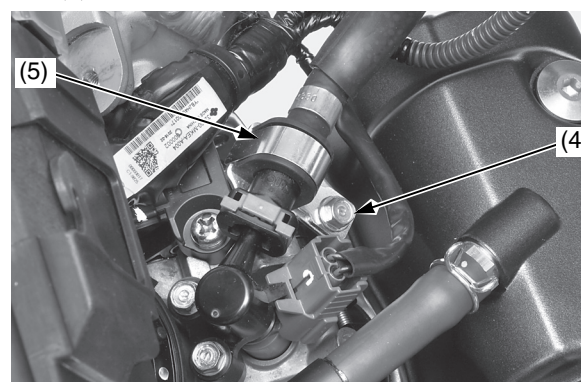


(4) bolt

(5) clamp and setting rubber

6. Place a shop towel (6) over the fuel quick connect fitting.

Injector side:

Fuel pump side:

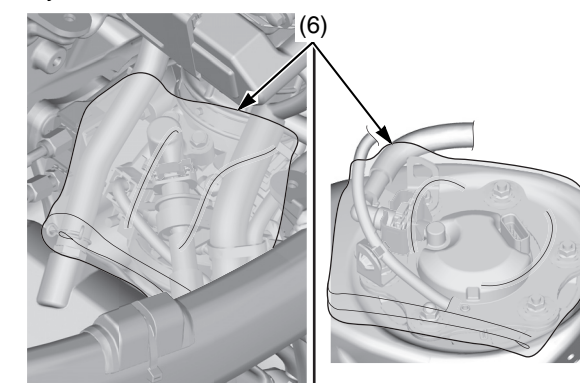

(6) shop towel

(cont'd)

Fuel System (CRF450R)


7. Unlock the slide retainer (7) of the quick connect fitting by completely pulling it up. Release the fuel quick connect fitting from the fuel joint (8) while holding the connector housing (9).
- Use a shop towel to absorb the remaining fuel in the fuel feed hose.
 - Be careful not to damage the hose or other parts.
 - Do not use tools.
 - Dirt intruding into the connector housing may cause slide retainer sticking.

⚠ WARNING

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.


- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.

Injector side:

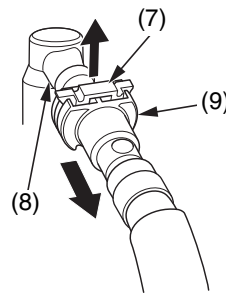


(7) slide retainer
(8) fuel joint
(9) connector housing

Fuel pump side:

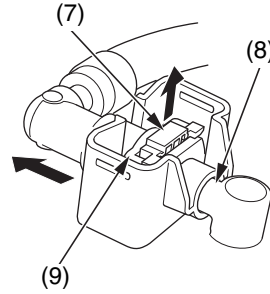


8. Remove the rubber cover (10) from the fuel joint of the fuel pump.

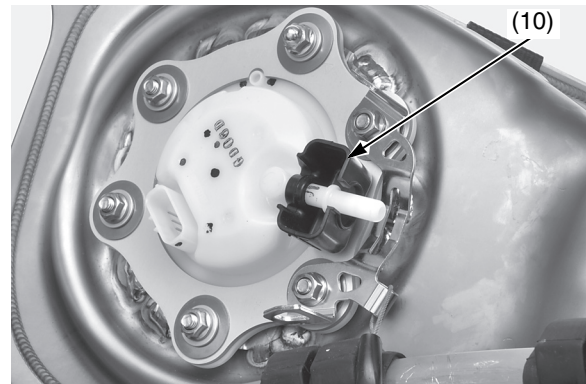

(10) rubber cover


9. To prevent damage and keep foreign matter out, cover the disconnected connector (11) and fuel joint (8) with plastic bags (12).

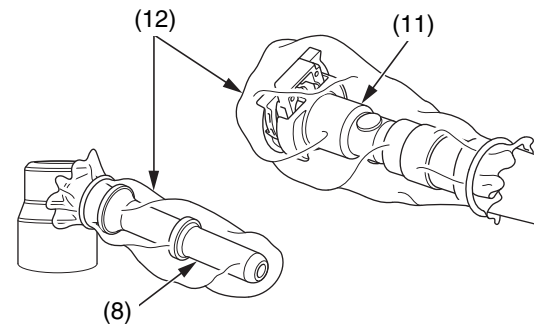

(8) fuel joint
(11) disconnected connector
(12) plastic bags


Connection

1. Install the rubber cover (1) onto the fuel joint (2) of the fuel pump as shown.

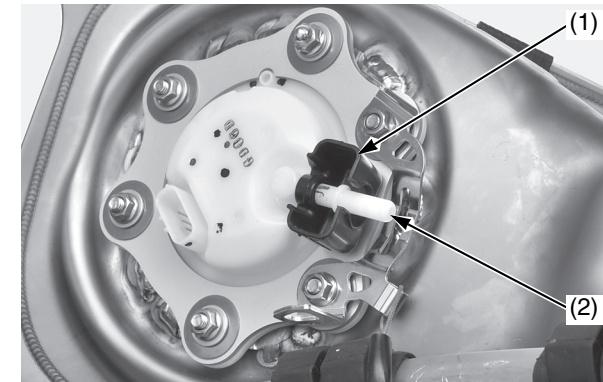

(1) rubber cover
(2) fuel joint

2. Be sure that the slide retainer (3) is completely pulled up before connecting the quick connect fitting.
- Do not bend or twist the fuel feed hose.
 - Do not reuse the kinked or damaged fuel hose.
 - Do not use gloves or a shop towel while installing the quick connect fitting.

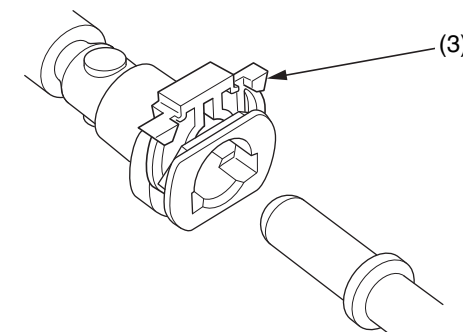


(3) slide retainer

Fuel System (CRF450R)


- Connect the quick connect fitting to the fuel joint (2) until you hear the “click” while holding the connector housing (4). Lock the slide retainer (3) by pushing it until you hear the “click”.

If it is hard to connect, put a small amount of engine oil on the pipe end of the fuel joint.

Injector side:

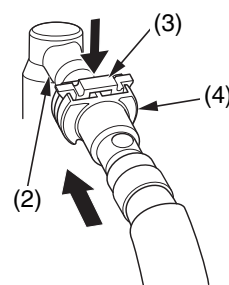


Fuel pump side:

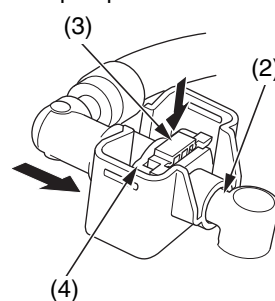

- (2) fuel joint
- (3) slide retainer
- (4) connector housing

- Make sure the connection is secure and that the slide retainer is firmly locked into place; check visually and by pulling the connector housing.

- Install the setting rubber (5), clamp (6) and bolt (7) by aligning the clamp tab (8) with the groove (9) of the stay. Tighten the bolt securely.

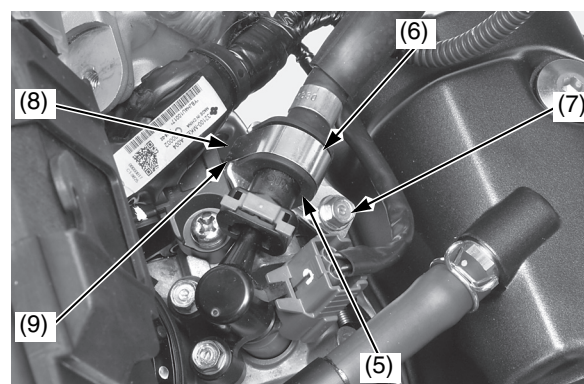


- (5) setting rubber
- (6) clamp
- (7) bolt

- (8) clamp tab
- (9) groove

- Install the fuel quick connect fitting cover (10).

Be sure the rubber cover (1) is properly installed between the fuel quick connect fitting cover and fuel pump.

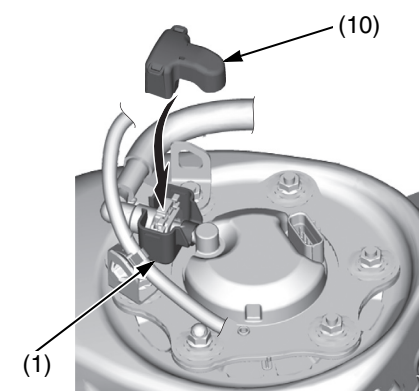

- (1) rubber cover
- (10) fuel quick connect fitting cover

- Increase the fuel pressure (page 65).

Fuel System (CRF450R)

Fuel Pump Filter Replacement

Empty the fuel tank by transferring fuel into an approved petrol container using a commercially available hand siphon or an equivalent method. Be careful not to damage the fuel pump while draining the fuel in the fuel tank.


⚠ WARNING

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.


Removal

1. Relieve the fuel pressure (page 57).
2. Disconnect the fuel line from the fuel pump (page 57).
3. Remove the fuel tank (1) by releasing the stopper cable (2) from the hook (3) of the frame.
4. Pull the harness band clip (4) while pressing both side of the anchor and disconnect it.

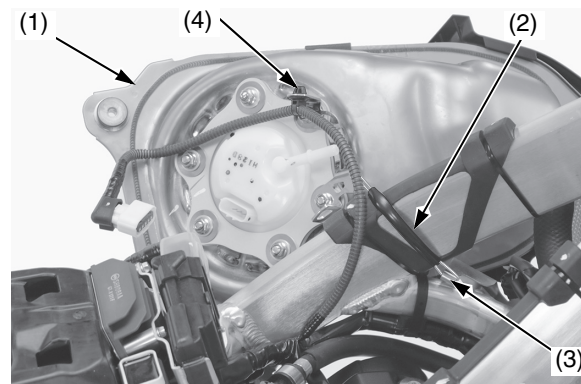

(1) fuel tank
(2) stopper cable
(3) frame hook
(4) harness band clip

5. Remove the fuel pump mounting nuts (5), fuel pump mounting cap nut (6), stopper cable guide (7), stopper cable (2), washer (8), collars (9), conical spring washers (10) and fuel pump plate (11) while holding the fuel tank.

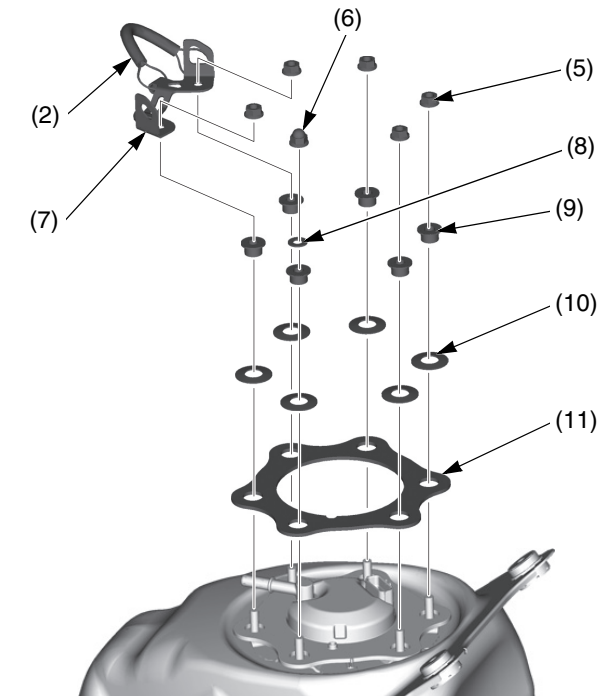


(2) stopper cable
(5) fuel pump mounting nuts
(6) fuel pump mounting cap nut
(7) stopper cable guide
(8) washer
(9) collars
(10) conical spring washers
(11) fuel pump plate

Fuel System (CRF450R)

6. Remove the fuel pump unit (12), dust seal (13) and O-ring (14).


Be careful not to damage the fuel pump unit.

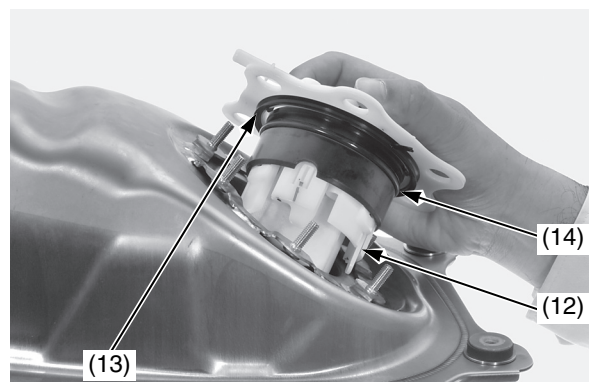

(12) fuel pump unit
(13) dust seal
(14) O-ring

7. Disconnect the fuel pump wire terminals (15) from the fuel pump base (16).

Be careful not to damage the wires when disconnecting the fuel pump wire terminals.

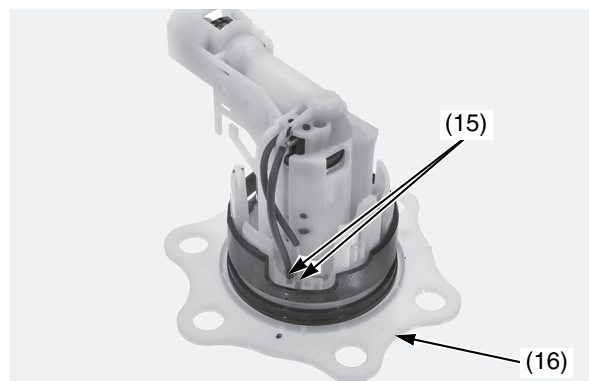


(15) fuel pump wire terminals
(16) fuel pump base

8. Check the hooks (17) of the fuel pump unit holder and tabs (18) on the fuel pump base for damage or discolouration.

If the hooks and tabs are damaged or discoloured, replace the fuel pump unit as an assembly.

9. Release the hooks of the fuel pump unit holder from the grooves (19) in the fuel pump base tabs while pushing the holder against the base and slightly spreading the base tabs.

Be careful not to damage the hooks and tabs.

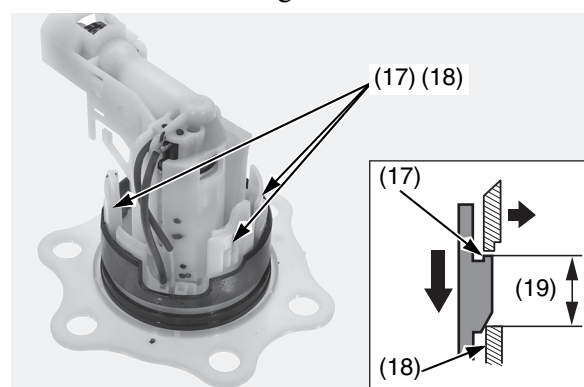


(17) hooks
(18) tabs

(19) grooves


10. Remove the fuel pump unit holder assembly (20) from the fuel pump base (16) and remove the O-ring (21).

Wipe the spilled out fuel immediately.

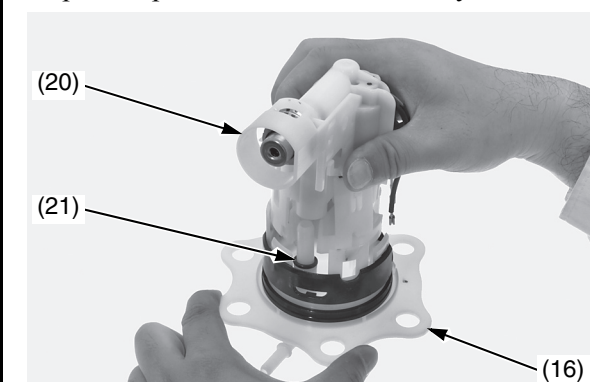

(16) fuel pump base
(20) fuel pump unit holder assembly
(21) O-ring

11. Remove the fuel pump stopper (22) and damper rubber (23).

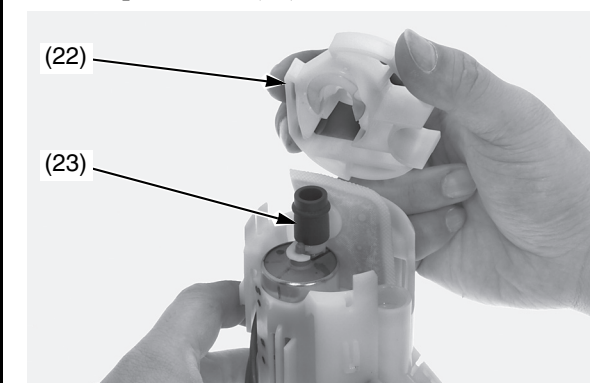


(22) fuel pump stopper
(23) damper rubber

(cont'd)


Fuel System (CRF450R)

12. Remove the fuel pump assembly (24) from the fuel pump unit holder (25).
13. Remove the O-ring (26) from the fuel pump assembly (24).

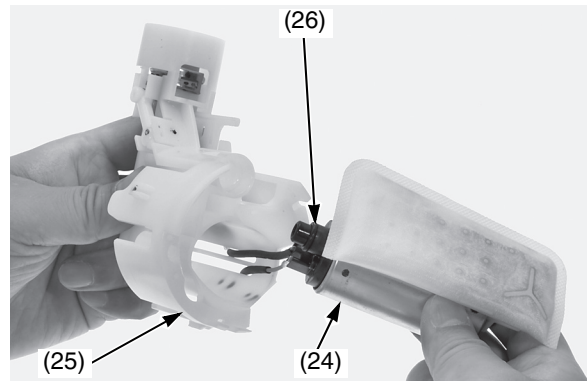

(24) fuel pump assembly
(25) fuel pump unit holder
(26) O-ring

14. Remove the fuel pump filter (27) from the fuel pump assembly (24).
15. Check the fuel pump filter for clog, damage or deterioration and replace it if necessary.

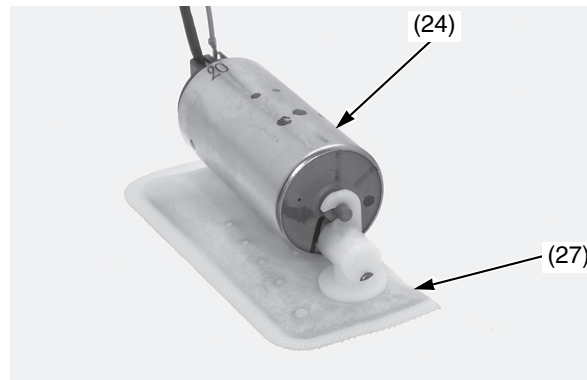


(24) fuel pump assembly
(27) fuel pump filter

Installation


1. Install the fuel pump filter (1) onto the fuel pump assembly (2) aligning its hook (3) with the joint boss (4) completely.

Be careful not to damage the hook.

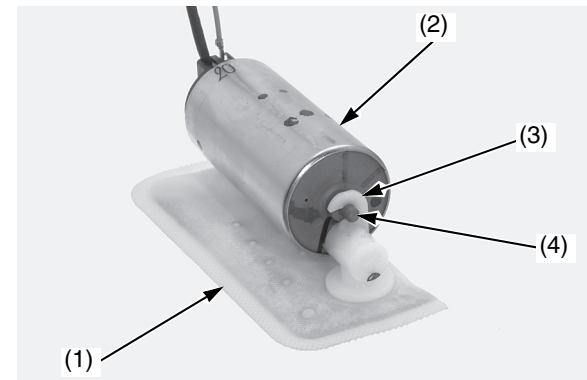


(1) fuel pump filter (3) hook
(2) fuel pump assembly (4) joint boss

2. Apply small amount of engine oil to a new O-ring (5).
Install a new O-ring to the fuel pump assembly (2).
3. Install the fuel pump assembly with fuel pump filter into the fuel pump unit holder (6) while routing the fuel pump yellow (7) and green (8) wires through the holder grooves (9) as shown.

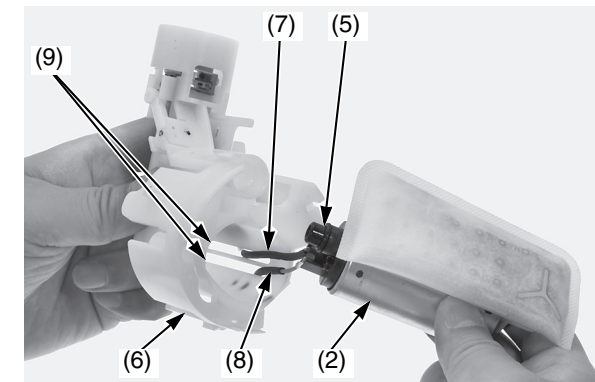

(2) fuel pump assembly (7) yellow wire
(5) O-ring (new) (8) green wire
(6) fuel pump unit holder (9) grooves

4. Install a new damper rubber (10) to the fuel pump assembly as shown.
Install fuel pump stopper (11).

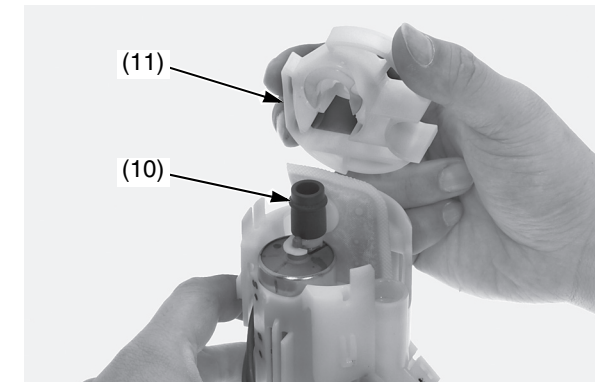


(10) damper rubber (new)
(11) fuel pump stopper

Fuel System (CRF450R)

5. Apply small amount of engine oil to a new O-ring (12).
Install a new O-ring to the fuel pump base (13).
6. Install the fuel pump unit holder assembly (14) into the fuel pump base while aligning its hooks (15) with the grooves (16) in the fuel pump base tabs (17).
If the gap between the hooks and tabs is more than 1.0 mm (0.04 in), replace the fuel pump unit.


Be sure that the hooks are completely seated.

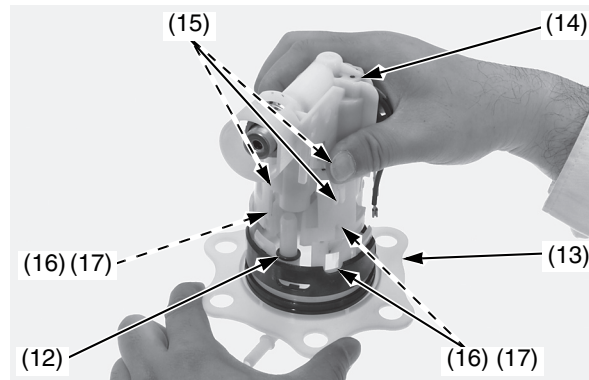

- (12) O-ring (new)
(13) fuel pump base
(14) fuel pump unit holder assembly
(15) hooks
(16) grooves
(17) tabs

7. Connect the fuel pump yellow (18) and green (19) wire terminals to the fuel pump base terminals (20). Push the wire terminals until they stop as shown.


Be careful not to damage the wires.

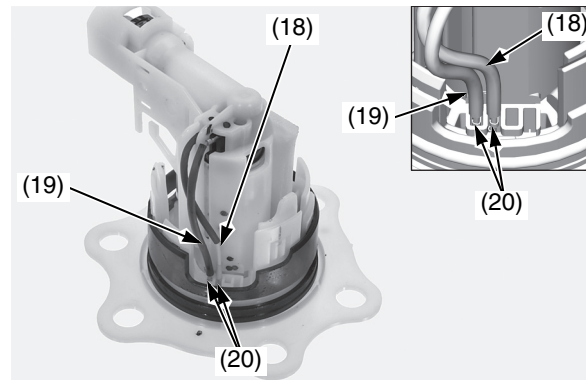

- (18) yellow wire terminal
(19) green wire terminal
(20) fuel pump base terminals


8. Install a new dust seal (21) by aligning its tabs (22) with the fuel pump unit grooves (23).

Check the dust seal lug (24) which is located the index mark (25) of the fuel pump base (13).

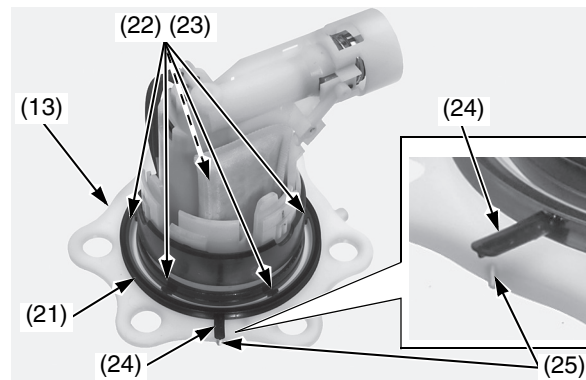

- (13) fuel pump base
(21) dust seal (new)
(22) tabs
(23) grooves
(24) dust seal lug
(25) index mark


9. Apply small amount of engine oil to a new O-ring (26).
Install a new O-ring into the between the collar A (27) and collar B (28) of the fuel pump unit (29).

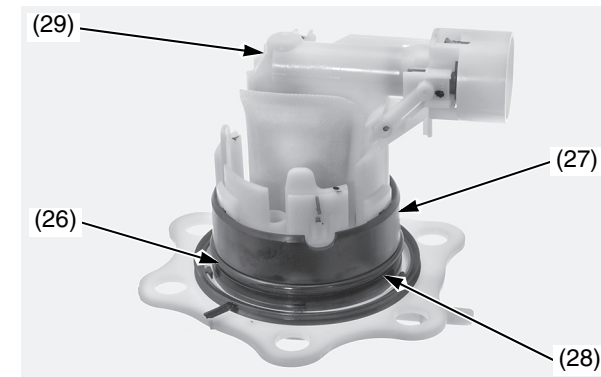

- (26) O-ring (new)
(27) collar A
(28) collar B
(29) fuel pump unit

10. Install the fuel pump unit (29) into the fuel tank (30) with its hose joint facing forward.

Be careful not to damage the fuel pump unit.

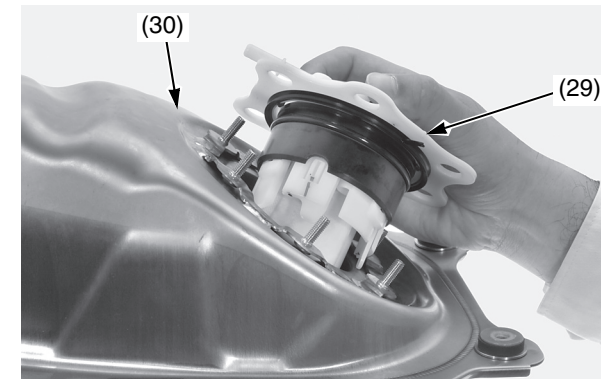


- (29) fuel pump unit
(30) fuel tank

(cont'd)

Fuel System (CRF450R)

11. Install the fuel pump plate (31) by aligning with its groove (32) with fuel pump unit lug (33).

Check the dust seal lug (24) is in position as shown.

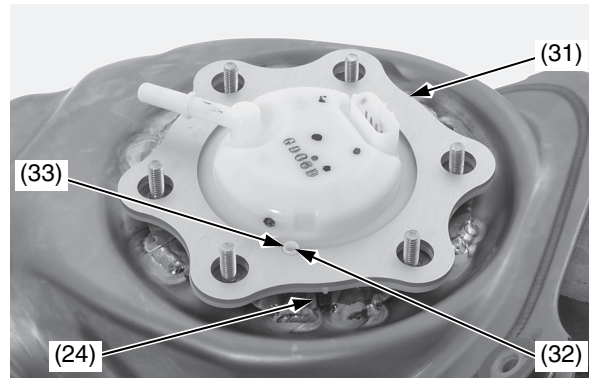


(24) dust seal lug
(31) fuel pump plate
(32) fuel pump plate groove
(33) fuel pump unit lug

12. Install the conical spring washers (34), collars (35), washer (36), stopper cable (37), stopper cable guide (38), fuel pump mounting nuts (39) and fuel pump mounting cap nut (40).


Make sure that the convex surfaces of the conical spring washers are upside.

Make sure that the cap nut is in position of the identification mark (41) on the fuel pump plate (31).

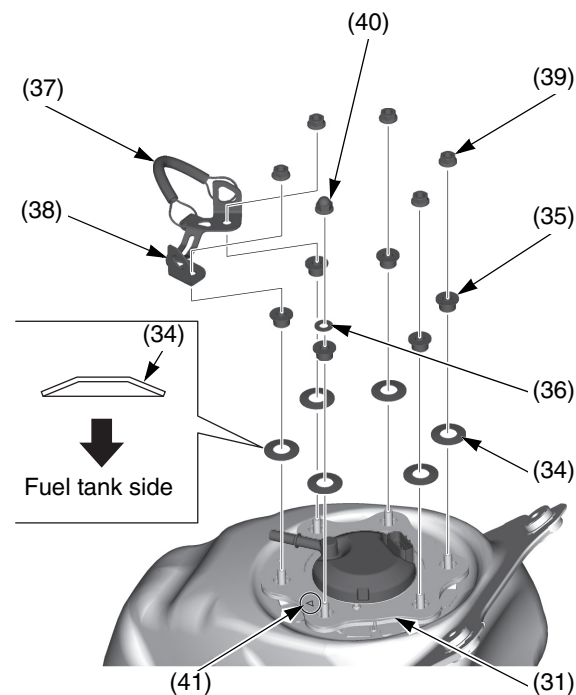


(31) fuel pump plate
(34) conical spring washers
(35) collars
(36) washer
(37) stopper cable
(38) stopper cable guide
(39) fuel pump mounting nuts
(40) fuel pump mounting cap nut
(41) identification mark

13. Tighten the fuel pump mounting nuts (39) and cap nut (40) to the specified torque in the specified sequence as shown:
11 N·m (1.1 kgf·m, 8 lbf·ft)

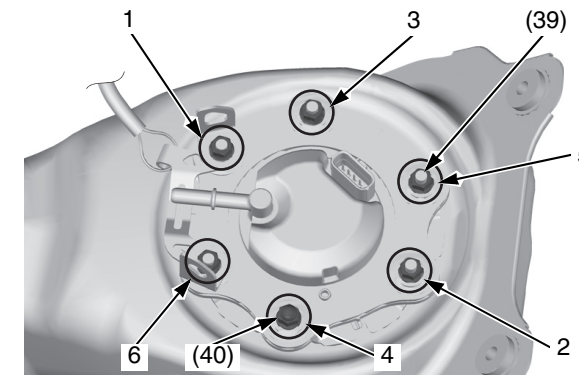

(39) fuel pump mounting nuts
(40) fuel pump mounting cap nut

14. Install the harness band clip (42) to the stopper cable guide (38).
15. Install the stopper cable (37) to the hook (43) of the frame while holding the fuel tank (30).

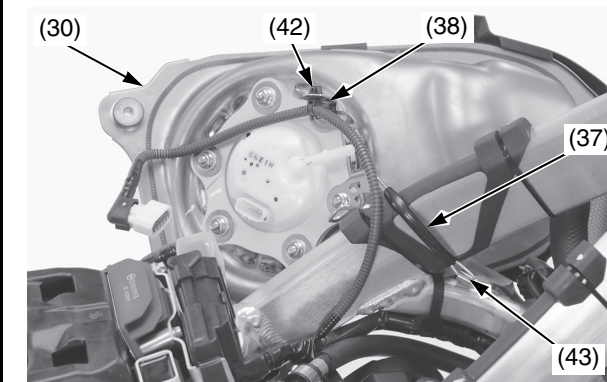

(30) fuel tank
(37) stopper cable
(38) stopper cable guide
(42) harness band clip
(43) hook

16. Connect the fuel line (page 58).
17. Increase the fuel pressure (page 65).

Fuel System (CRF450R)

Fuel Pressure Increasing

Make sure enough fuel remains (1.0 ℓ (0.3 US gal, 0.2 Imp gal) minimum) in the fuel tank and add fuel if necessary before increasing fuel pressure.

With the throttle closed.
Pull the clutch lever all the way in, and depress the start button.

The engine will start up with increasing the fuel pressure.

If the engine does not start, check all connector connections and/or refer to an official Honda Shop Manual for troubleshooting of the PGM-FI symptom.

Engine Oil


Refer to *Important Safety Precautions* on page 27.

Using the proper oil, and regularly checking, adding, and changing oil will help extend the service life of the engine. Even the best oil wears out. Changing oil helps get rid of dirt and deposits. Operating the engine with old or dirty oil can damage your engine. Running the engine with insufficient oil can cause serious damage to the engine.


Oil Recommendation

API classification	SG or higher except oils labeled as energy conserving or resource conserving on the circular API service label
viscosity (weight)	SAE 10W-30
JASO T 903 standard	MA
suggested oil	Honda "4-STROKE MOTORCYCLE OIL" or equivalent

- Your CRF does not need oil additives. Use the recommended oil.
- Do not use API SH or higher 4-stroke engine oils displaying a circular API "energy conserving" or "resource conserving" service label on the container. They may affect lubrication.

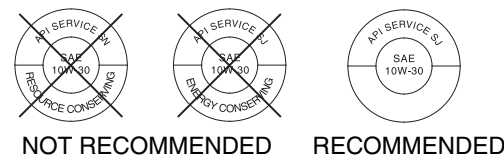


Other viscosities shown in the following chart may be used when the average temperature in your riding area is within the indicated range.

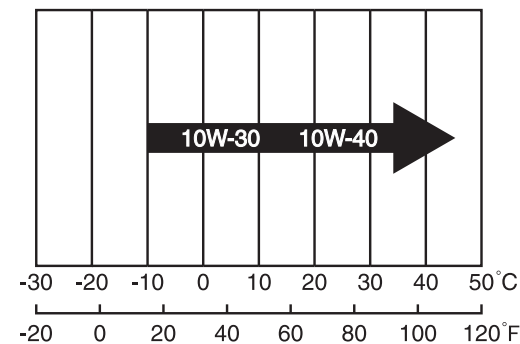

JASO T 903 standard

The JASO T 903 standard is an index for engine oils for 4-stroke motorcycle engines. There are two classes: MA and MB. Oil conforming to the standard is labeled on the oil container. For example, the following label shows the MA classification.

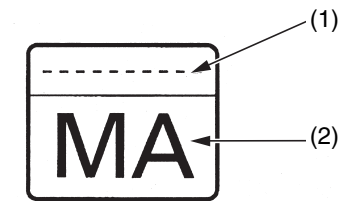


- (1) oil code
(2) oil classification


Engine Oil

Checking & Adding Oil


1. Run the engine at idle for 3 minutes, then shut it off.
2. Wait 3 minutes after shutting off the engine to allow the oil to properly distribute itself in the engine.
3. Support the CRF in an upright position on a level surface.
4. Remove the engine oil fill cap/dipstick (1) from the left crankcase cover, wipe it clean, and insert it without screwing it in. Remove the oil fill cap/dipstick.
5. Check that the oil level is between the upper (2) and lower (3) level marks on the engine oil fill cap/dipstick.
 - If the oil is at or near the upper level mark, you do not have to add oil.
 - If the oil is below or near the lower level mark, add the recommended oil until it reaches the upper level mark. (Do not overfill.)
 Reinstall the engine oil fill cap/dipstick.
Repeat steps 1 – 5.

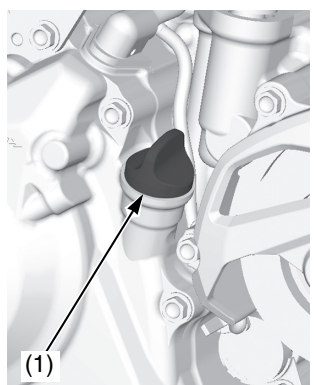

(1) engine oil fill cap/dipstick
(2) upper level mark
(3) lower level mark

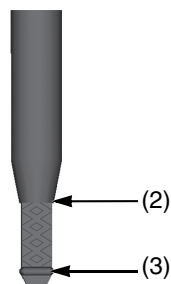

6. Check that the O-ring (4) is in good condition and replace it if necessary.
7. Reinstall the engine oil fill cap/dipstick (1).

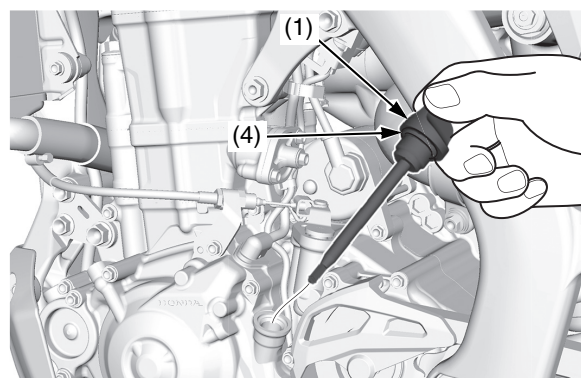


(1) engine oil fill cap/dipstick
(4) O-ring

8. Check for oil leaks.

Changing Engine Oil & Filter

1. Remove the engine guard A bolts/washers (1), B bolt/washer (2) and engine guard (3).

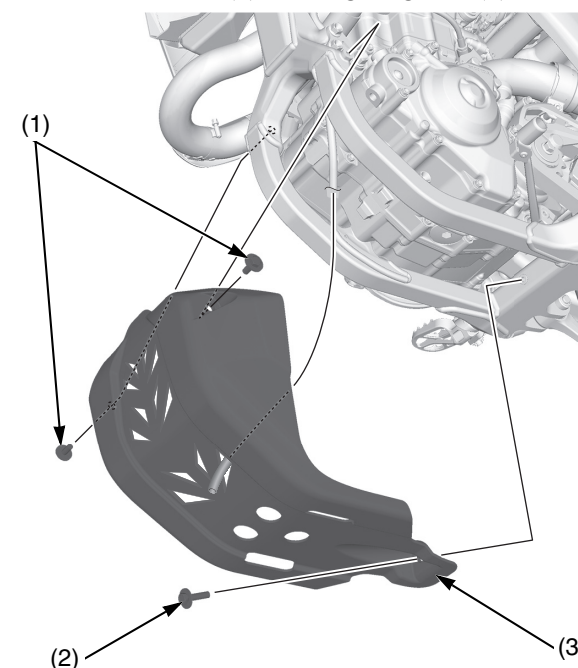

(1) engine guard A bolts/washers
(2) engine guard B bolt/washer
(3) engine guard

2. Run the engine at idle for 3 minutes, then shut it off.
3. Support the CRF in an upright position on a level surface.
4. Remove the engine oil fill cap/dipstick (4) from the left crankcase cover.

(cont'd)


Engine Oil

5. Place an oil drain pan under the engine to catch the oil. Then remove the engine oil drain bolt (5) and O-ring (6).
6. With the engine stop button pushed, pull the clutch lever all the way in, and depress the start button to drain the engine oil completely.
7. After the oil has drained, apply engine oil to the drain bolt threads, seating surface and a new O-ring, then install the O-ring on the drain bolt and tighten the drain bolt to the specified torque:
18 N·m (1.8 kgf·m, 13 lbf·ft)

Pour the drained oil into a suitable container and dispose of it in an approved manner (page 168).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

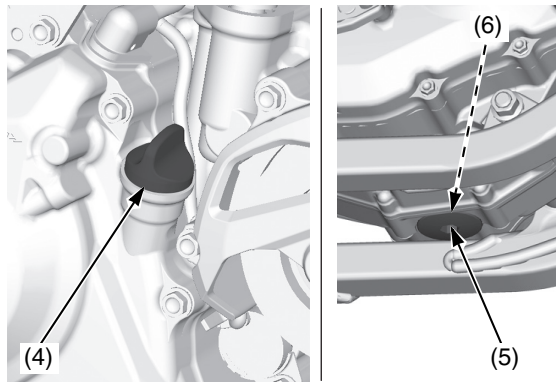


- (4) engine oil fill cap/dipstick
(5) engine oil drain bolt
(6) O-ring (new)

8. (CRF450RX)
It is recommended to replace the oil and filter every 4 races or about every 15.0 hours. However, if you replace only the oil before the recommended interval, see page 29.

(CRF450R)

It is recommended to replace the oil and filter every 6 races or about every 15.0 hours. However, if you replace only the oil before the recommended interval, see page 30.

9. Remove the oil filter cover bolts (7) and oil filter cover (8).
10. Remove the oil filter (9), O-ring (10) and spring (11).

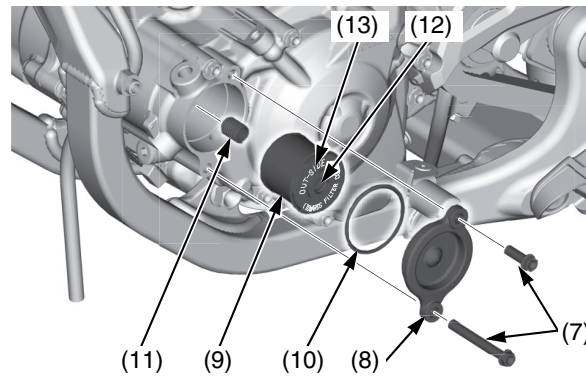

- (7) oil filter cover bolts
(8) oil filter cover
(9) oil filter
(10) O-ring
(11) spring
(12) rubber seal
(13) "OUT-SIDE" mark

NOTICE

Using the wrong oil filter may result in leaks or engine damage.

11. Apply grease to the filter side of the spring end, then install the spring into a new oil filter.
12. Position the spring against the engine crankcase and install a new oil filter with the rubber seal (12) facing out, away from the engine. You should see the "OUT-SIDE" mark (13) on the filter body, near the rubber seal. Use a new Honda Genuine oil filter or a filter of equal quality specified for your model.

NOTICE

If the oil filter is not installed properly, it will cause serious engine damage.

13. Apply engine oil to a new O-ring and install it to the oil filter cover.
14. Install the oil filter cover being careful not to damage the O-ring, then tighten the oil filter cover bolts to the specified torque:
10 N·m (1.0 kgf·m, 7 lbf·ft)
15. Install the engine guard, then tighten the engine guard A bolts/washers and B bolt/washer to the specified torque:
10 N·m (1.0 kgf·m, 7 lbf·ft)
16. Fill the crankcase with the recommended oil.
Capacity: 1.04 l (1.10 US qt, 0.92 Imp qt)
after draining and filter change
1.00 l (1.06 US qt, 0.88 Imp qt)
after draining
17. Install the engine oil fill cap/dipstick.
18. Check the engine oil level by following the steps in *Checking & Adding Oil* (page 67).

Pour the drained oil into a suitable container and dispose of it in an approved manner (page 168).

NOTICE

Improper disposal of drained fluids is harmful to the environment.

Coolant

Refer to *Important Safety Precautions* on page 27.

Your CRF's liquid cooling system dissipates engine heat through the coolant jacket that surrounds the cylinder and cylinder head.

Maintaining the coolant will allow the cooling system to work properly and prevent freezing, overheating, and corrosion.

Coolant Recommendation

Use high quality ethylene glycol antifreeze containing corrosion protection inhibitors specifically recommended for use in aluminium engines. Check the antifreeze container label.

Use only distilled water as a part of the coolant solution. Water that is high in mineral content or salt may be harmful to the aluminium engine.

NOTICE

Using coolant with silicate inhibitors may cause premature wear of the mechanical seal or blockage of the radiator passages. Using tap water may cause engine damage.

The factory provides a 50/50 solution of antifreeze and water in this motorcycle. This coolant solution is recommended for most operating temperatures and provides good corrosion protection.

Decreasing the concentration of antifreeze to less than 40% will not provide proper corrosion protection.

Increasing the concentration of antifreeze is not recommended because it decreases cooling system performance. Higher concentrations of antifreeze (up to 60%) should only be used to provide additional protection against freezing. Check the cooling system frequently during freezing weather.

Checking & Adding Coolant


Refer to *Important Safety Precautions* on page 27.

1. Position your CRF on an optional workstand or equivalent support so that it is securely held in place in an upright position.
2. With the engine cold, remove the radiator cap (1) and check coolant level. The coolant level is correct when it is at the bottom of the radiator filler neck (2).

⚠ WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.

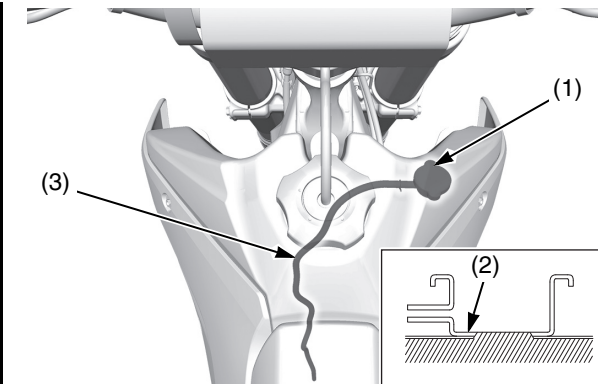

(1) radiator cap
(2) radiator filler neck
(3) overflow hose

3. If the coolant level is low, add the coolant up to the filler neck.
Inspect the coolant level before each outing. A coolant loss of 20 – 60 cm³ (0.7 – 2.0 US oz, 0.7 – 2.1 Imp oz) through the overflow hose (3) is normal. If coolant loss is more than this, inspect the cooling system.
Capacity:
(CRF450RX)
1.15 ℓ (1.22 US qt, 1.01 Imp qt) after disassembly
1.07 ℓ (1.13 US qt, 0.94 Imp qt) after draining
(CRF450R)
1.13 ℓ (1.19 US qt, 0.99 Imp qt) after disassembly
1.07 ℓ (1.13 US qt, 0.94 Imp qt) after draining
4. Install the radiator cap securely.


NOTICE

If the radiator cap is not installed properly, it will cause excessive coolant loss and may result in overheating and engine damage.

Coolant

Cooling System Inspection


1. Check the cooling system for leaks (see an official Honda Shop Manual for troubleshooting of leaks).
2. Check the radiator hoses (1) for cracks, deterioration, and radiator hose clamps for looseness.
3. Check the radiator mount for looseness.
4. Make sure the overflow hose (2) is connected and not clogged.
5. Check the radiator fins (3) for clogging.

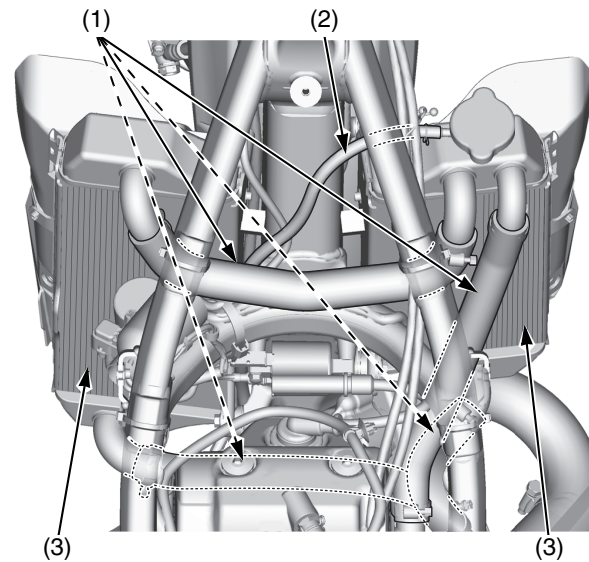

(1) radiator hoses
(2) overflow hose


(3) radiator fins

6. Check the bleed hole (4) below the water pump cover (5) for leakage. Clean away any clogged dirt or sand, if necessary. Check the bleed hole of the water pump for signs of seal leakage. If water leaks through the bleed hole, replace the mechanical seal. If oil leaks through the bleed hole, replace the oil seal. Make sure that there is no continuous coolant leakage from the bleed hole while operating the engine. A small amount of coolant weeping from the bleed hole is normal. See an official Honda Shop Manual or consult your dealer for replacing the mechanical seal or oil seal. Both seals should be replaced at the same time.

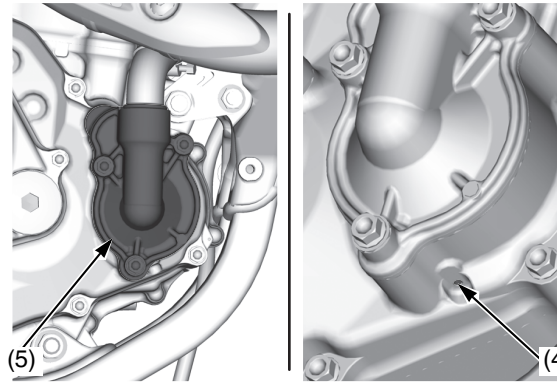

(4) bleed hole
(5) water pump cover

7. Check the radiator air passages for clogging or damage. Straighten bent fins (6), and remove insects, mud or other obstructions with compressed air or low water pressure. Replace the radiator if the air flow is restricted over more than 20% of the radiating surface.

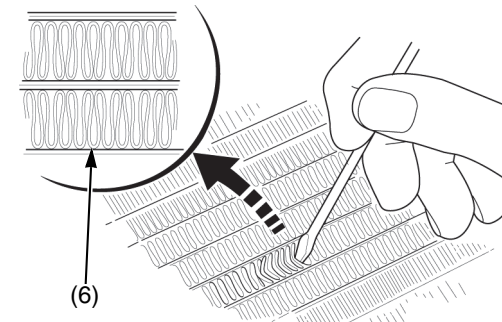

(6) fins

Radiator should be replaced by your dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to an official Honda Shop Manual.

Coolant Replacement

Refer to *Important Safety Precautions* on page 27.

Coolant should be replaced by your dealer, unless you have the proper tools and service data and are mechanically qualified.

Refer to an official Honda Shop Manual.

⚠ WARNING

Removing the radiator cap while the engine is hot can cause the coolant to spray out, seriously scalding you.

Always let the engine and radiator cool down before removing the radiator cap.

To properly dispose of drained coolant, refer to *You & the Environment* on page 168.

NOTICE

Improper disposal of drained fluids is harmful to the environment.

Air Cleaner

Refer to *Important Safety Precautions* on page 27.

The air cleaner uses polyurethane inner and outer pieces which can't be separated. A dirty air cleaner will reduce engine power.

Proper air cleaner maintenance is very important for off-road vehicles. A dirty, water-soaked, worn-out, or defective air cleaner will allow dirt, dust, mud, and other impurities to pass into the engine.

Service the air cleaner more frequently if you ride in unusually wet or dusty areas. Your dealer can help you determine the correct service interval for your riding conditions.

Your CRF's air cleaner has very specific performance requirements. Use a new Honda Genuine air cleaner specified for your model or an air cleaner of equal quality.

NOTICE

Using the wrong air cleaner may result in premature engine wear.


Proper air cleaner maintenance can prevent premature engine wear or damage, expensive repairs, low engine power, poor gas mileage, and spark plug fouling.

NOTICE

Improper or lack of proper air cleaner maintenance can cause poor performance and premature engine wear.


Cleaning

1. Remove the seat (page 38).
2. Remove the air cleaner retaining bolt (1) and air cleaner assembly (2).

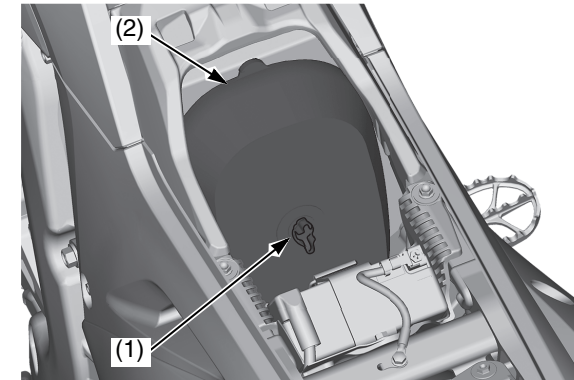

- (1) air cleaner retaining bolt
(2) air cleaner assembly

3. Remove the air cleaner element (3) from the air cleaner holder (4) by releasing the hole (5) of the air cleaner element from the holder tab (6).

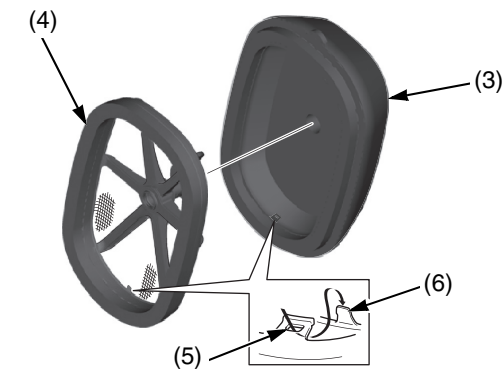


- (3) air cleaner element
(4) air cleaner holder

- (5) hole
(6) holder tab


(cont'd)

Air Cleaner

4. Wash the air cleaner in clean non-flammable cleaning solvent such as Honda foam air filter cleaner. Then wash in hot, soapy water, rinse well, and allow to dry thoroughly. The air cleaner element is made in two pieces: inner and outer, which cannot be separated.
5. Clean the inside of the air cleaner housing (7).
6. Allow the air cleaner to dry thoroughly. After drying, apply 40 cm³ (1.4 US oz, 1.4 Imp oz) of clean Honda Foam Air Filter Oil or an equivalent air cleaner oil from the inside of the element.
Place the element into a plastic bag (8) and spread the oil evenly by hand.

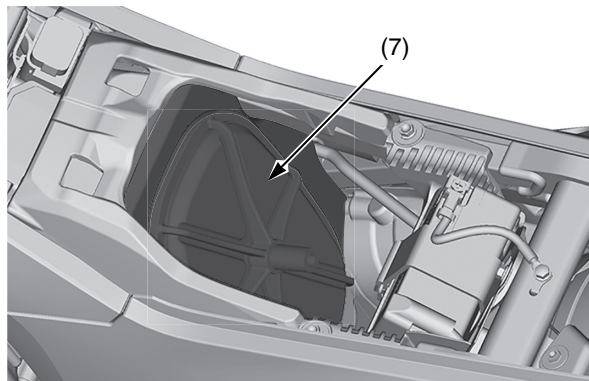


(7) air cleaner housing

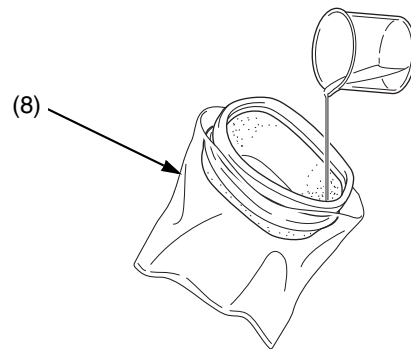


(8) plastic bag

7. Assemble the air cleaner element and holder. Install the holder tab in the hole of the air cleaner element.
8. Apply 1.5 – 5.5 g (0.05 – 0.19 oz) of Honda White Lithium Grease or equivalent to the air cleaner element contact area (9) of the air cleaner housing.
9. Install the air cleaner assembly (2) into the air cleaner housing stay (10) with the “UP” mark tab (11) facing up.
10. Carefully position the sealing flange of the element to prevent dirt intrusion.

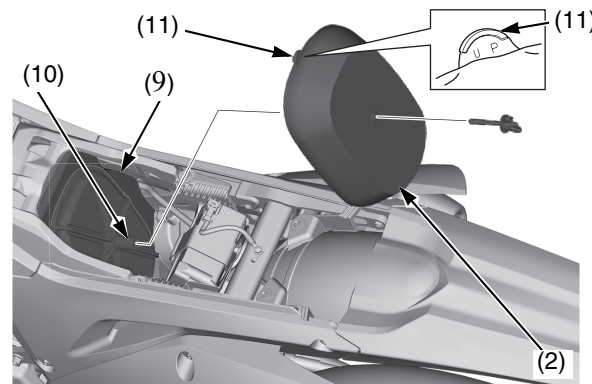

(2) air cleaner assembly
(9) contact area
(10) air cleaner housing stay
(11) “UP” mark tab

11. Install and tighten the air cleaner retaining bolt (1) to the specified torque:
2.4 N·m (0.2 kgf·m, 1.7 lbf·ft)

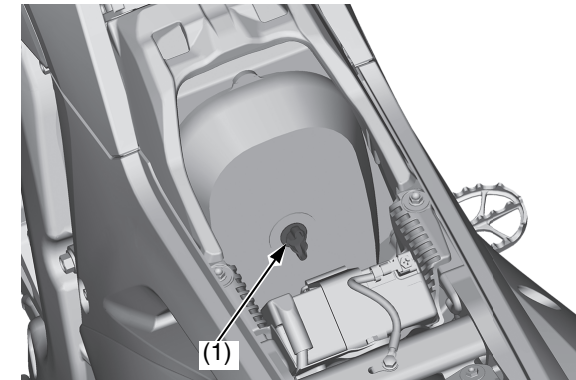

(1) air cleaner retaining bolt

NOTICE

Improper installation of the air cleaner assembly may allow dirt and dust to enter the engine and cause rapid wear of the piston rings and cylinder.

12. Install the seat (page 38).


Crankcase Breather

Refer to *Important Safety Precautions* on page 27.

Service more frequently if your CRF is ridden in the rain or often at full throttle.
Service the breather if you can see deposits in the transparent section of the crankcase breather tube.
If the breather tube overflows, the air filter may become contaminated with engine oil causing poor engine performance.

Draining

1. Remove the crankcase breather tube plug (1) from the crankcase breather tube (2) by sliding the clip (3) and drain deposits into a suitable container.
2. Reinstall the crankcase breather tube plug.

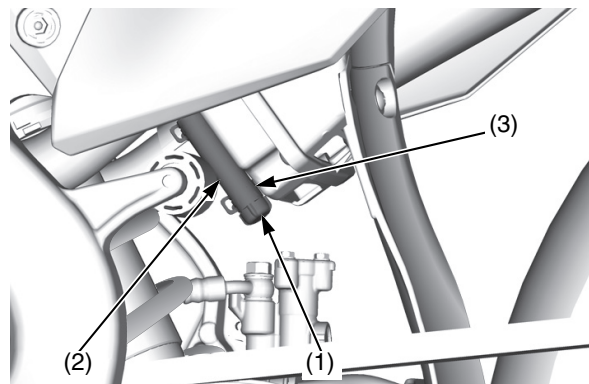

- (1) crankcase breather tube plug
(2) crankcase breather tube
(3) clip

Throttle

Refer to *Important Safety Precautions* on page 27.


Throttle Freeplay

Inspection

Check freeplay (1).

Freeplay: 2 – 6 mm (0.08 – 0.24 in)

If necessary, adjust to the specified range.

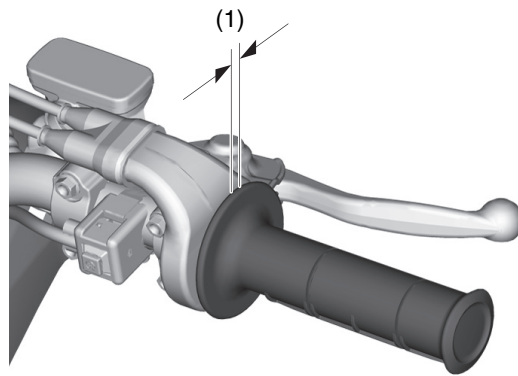


(1) freeplay

Upper Adjustment

Minor adjustments are generally made with the upper adjuster.

1. Loosen the lock nut (1).
2. Turn the adjuster (2).
Turning the adjuster in direction (–) will decrease freeplay and turning it in direction (+) will increase freeplay.

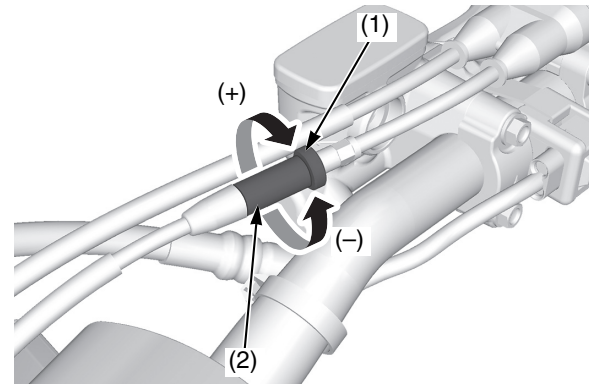

(1) lock nut
(2) adjuster


(+) increase freeplay
(–) decrease freeplay

3. Tighten the lock nut securely.
4. After adjustment, check for smooth rotation of the throttle grip from fully closed to fully open in all steering positions.
If the adjuster is threaded out near its limit or the correct freeplay cannot be reached, turn the adjuster all the way in and back out one turn. Tighten the lock nut securely. Make the adjustment with the lower adjuster.

Lower Adjustment

The lower adjuster is used for major freeplay adjustment, such as after replacing the throttle cables or removing the throttle body. It is also used if you cannot get the proper adjustment with the upper adjuster.

1. Loosen the lock nut (1).
2. Turn the adjuster (2) in direction (–) to decrease freeplay, and in direction (+) to increase freeplay.

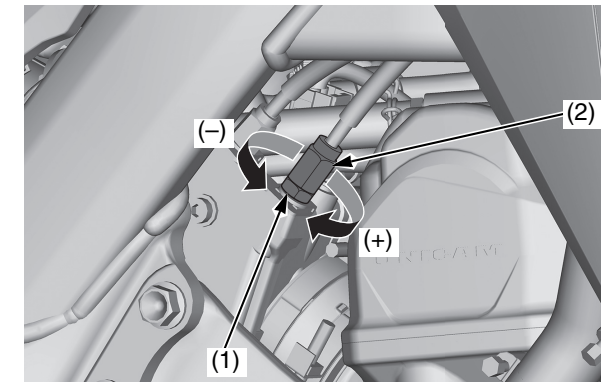

(1) lock nut
(2) adjuster

(+) increase freeplay
(–) decrease freeplay


3. Tighten the lock nut to the specified torque:
4.0 N·m (0.4 kgf·m, 3.0 lbf·ft)
4. Operate the throttle grip to ensure that it functions smoothly and returns completely.

If you can't get the freeplay within the specified range, contact your dealer.

Throttle


Throttle Inspection

1. Check that the throttle assembly is positioned properly (the end of the throttle housing (1) is aligned with the paint mark (2) on the handlebar) and the securing bolts are tight.

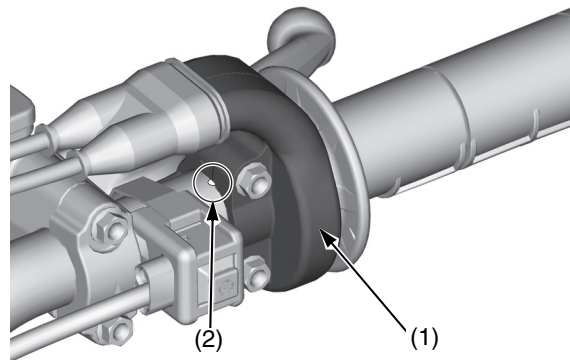

(1) throttle housing (2) paint mark

2. Check for smooth rotation of the throttle (3) from fully open to fully closed in all steering positions. If there is a problem, see your dealer.

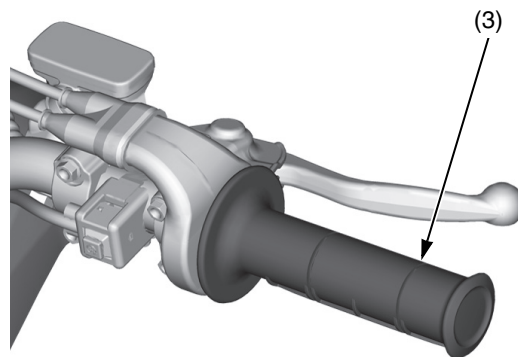


(3) throttle

3. Inspect the condition of the throttle cables from the throttle grip down to the throttle body. If the cable is kinked or chafed, have it replaced.
4. Check the cables for tension or stress in all steering positions.
5. Lubricate the cables with a commercially available cable lubricant.

Throttle Cable Lubrication

Check for smooth rotation of the throttle. If necessary, apply multi-purpose grease to sliding surface of the throttle cable ends.

1. Slide the dust cover (1).
2. Remove the throttle housing bolts (2).
3. Remove the throttle housing (3) from the throttle pipe (4).
4. Thoroughly lubricate the throttle cable ends (5) with multi-purpose grease.

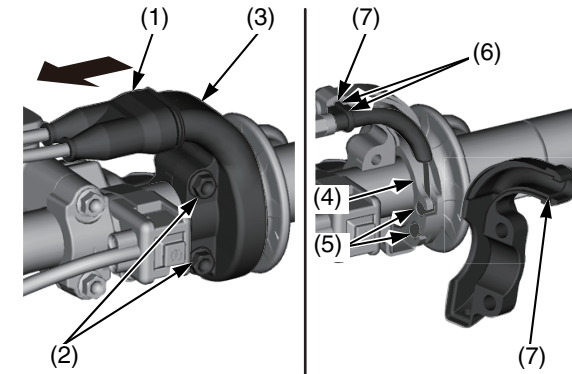

(1) dust cover (2) housing bolts (3) throttle housing (4) throttle pipe (5) throttle cable ends (6) lugs (7) grooves

5. Install the throttle housing, then tighten the throttle housing bolts to the specified torque: 10 N·m (1.0 kgf·m, 7 lbf·ft)

NOTICE

Align the lugs (6) of the wire guide with the grooves (7) of the throttle housing.

6. Install the dust cover in the reverse order.

If the throttle operation is not smooth, replace the throttle cable.

Be sure the throttle returns freely from fully open to fully closed automatically, in all steering positions.

Engine Idle Speed

Refer to *Important Safety Precautions* on page 27.

Remember, idle speed adjustment is not a “cure-all” for other problems in your engine’s PGM-FI system. Adjusting the idle speed will not compensate for a fault elsewhere.


The engine must be at normal operating temperature for accurate idle speed adjustment. When pushed in, the fast idle knob acts as the idle adjustment screw.

Turning it counterclockwise results in a faster/higher idle speed.

Turning it clockwise results in a slower/lower idle speed.

Idle Speed Adjustment

1. If the engine is cold, start it and warm it up 3 minutes. Then shut it off.
2. Connect a tachometer to the engine.
3. Shift the transmission into neutral. Start the engine.
4. Adjust idle speed with the fast idle knob (1).
Idle speed: $2,000 \pm 100 \text{ min}^{-1} (\text{rpm})$

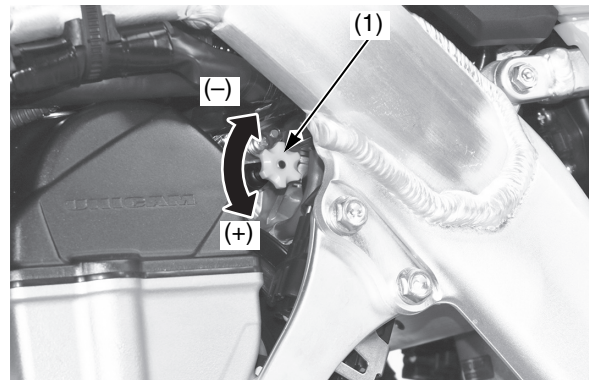

(1) fast idle knob
(+) increase
(-) decrease

Clutch System

Refer to *Important Safety Precautions* on page 27.


Clutch Lever Freeplay

Inspection

Check freeplay (1).

Freeplay: 10 – 20 mm (0.4 – 0.8 in)

If necessary, adjust to the specified range.

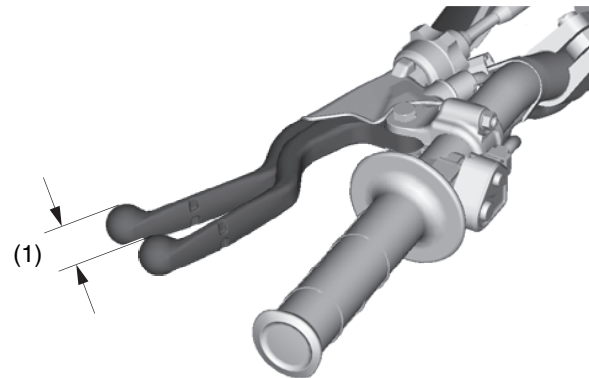

(1) freeplay


Improper freeplay adjustment can cause premature clutch wear.

Make sure to adjust the clutch lever freeplay after the clutch cable is disconnected.

Cable End Adjustment

Minor adjustments are generally made with the clutch cable end adjuster.

Turning the clutch cable end adjuster (1) in direction (+) will increase freeplay and turning it in direction (–) will decrease freeplay.

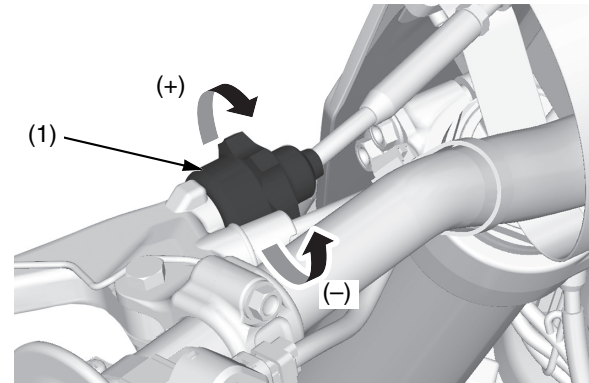


(1) clutch cable end adjuster
(+) increase freeplay
(–) decrease freeplay

If the adjuster is threaded out near its limit or the correct freeplay cannot be reached, turn the adjuster all the way in and back out five turns and make the adjustment with the integral cable adjuster.

Integral Cable Adjustment

The integral cable adjuster is used if the cable end adjuster is threaded out near its limit — or the correct freeplay cannot be obtained.

1. Turn the cable end adjuster in direction (+) until it seats lightly and then turn it out five turns.
2. Loosen the lock nut (1).
3. Slide the rubber boot (2) off and turn the integral cable adjuster (3) to obtain the specified freeplay.
4. Once the specified freeplay has been obtained, slide the rubber boot on and tighten the lock nut.

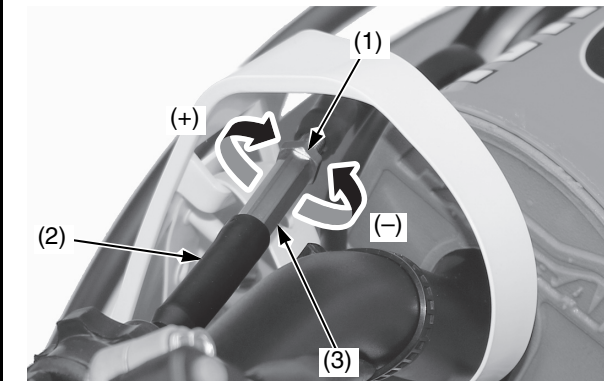

(1) lock nut
(2) rubber boot
(3) integral cable adjuster
(+) increase freeplay
(–) decrease freeplay


5. Start the engine, pull the clutch lever in, and shift into gear. Make sure the engine does not stall and the motorcycle does not creep. Gradually release the clutch lever and open the throttle. Your CRF should move smoothly and accelerate gradually.

If you can't get proper adjustment, or the clutch does not work properly, the cable may be kinked or worn, or the clutch discs may be worn. Inspect the clutch discs and plates (page 80).

Clutch System

Other Inspections

- Check that the clutch lever assembly is positioned properly (the end of the holder (1) is aligned with the paint mark (2) on the handlebar) and the securing bolts are tight.

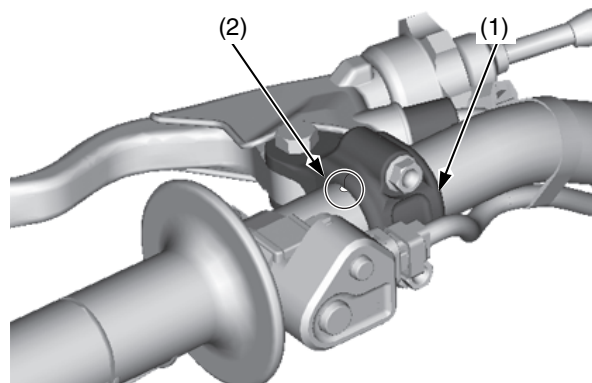

(1) holder

(2) paint mark

- Check the clutch cable for kinks or signs of wear. If necessary, have it replaced.


Clutch Operation

- Check for smooth clutch lever operation. If necessary, lubricate the clutch lever pivot bolt sliding surface with grease and/or clutch cable with commercially available cable lubricant.
- Check the clutch cable for deterioration, kinks, or damage.

Clutch Cable Lubrication


Check for smooth clutch lever operation. If necessary, apply multi-purpose grease to sliding surface of the clutch cable ends.

- Release the dust cover (1).
- Turn the adjuster (2) and remove the clutch cable (3).
- Disconnect the clutch cable end from the clutch lever (4).
- Thoroughly lubricate the clutch cable end (5) with multi-purpose grease.

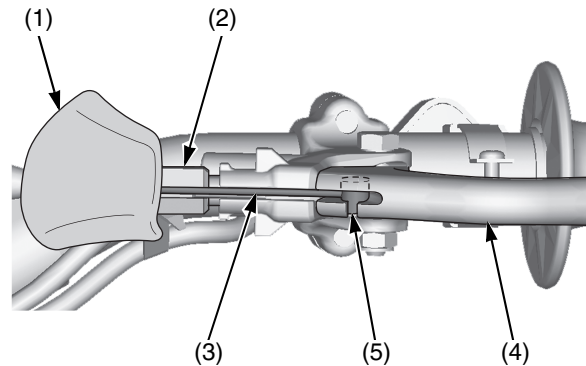(1) dust cover
(2) adjuster
(3) clutch cable(4) clutch lever
(5) clutch cable end

- Connect the clutch cable end to the lever.
- Install the clutch cable and turn the adjuster.

- Remove the clutch cable end adjuster (6).
- Apply multi-purpose grease to the clutch cable end adjuster inside surface.

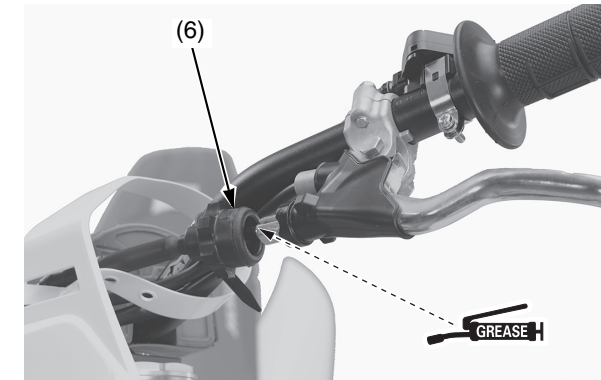

(6) clutch cable end adjuster


- Recheck clutch lever freeplay and adjust as necessary (page 77).

If the clutch lever operation is not smooth, replace the clutch cable.

Clutch System

Clutch Disc/Plate Removal

1. Drain the engine oil (page 67).
2. Remove the six clutch cover bolts (1) and clutch cover (2).

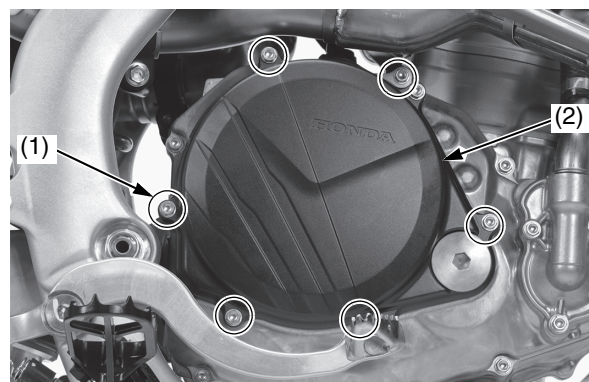


(1) clutch cover bolts (2) clutch cover

3. Remove the six clutch spring bolts and springs (3).


Loosen the bolts in a crisscross pattern in two or three progressive steps.

4. Remove the clutch pressure plate (4).

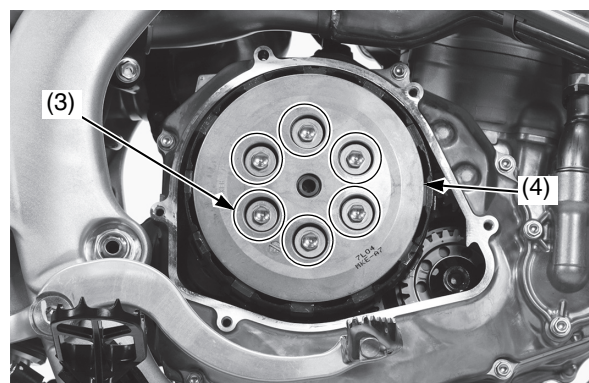


(3) clutch spring bolts and springs
(4) clutch pressure plate

5. Remove the clutch lifter (5).

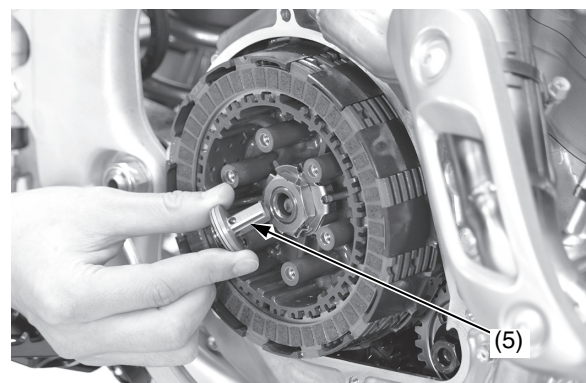

(5) clutch lifter


6. Check the operation of the thrust bearing (6) built in clutch lifter with your finger. The bearing should turn smoothly and quietly.

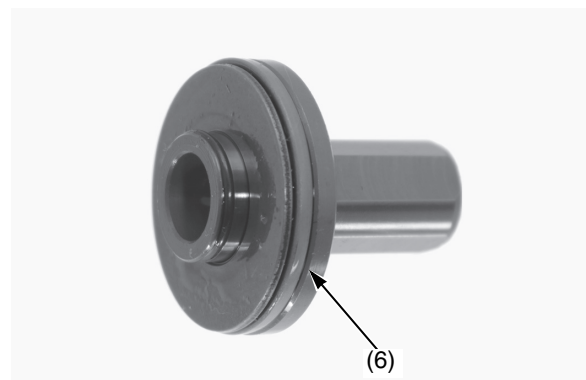

(6) thrust bearing

If the operation is not smooth, refer to an official Honda Shop Manual for bearing disassembly or see your dealer.

7. Remove the seven clutch discs, six clutch plates, judder spring and spring seat (7).

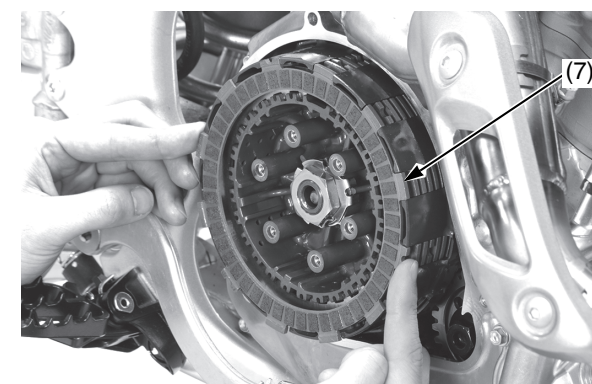


(7) clutch discs, clutch plates, judder spring and spring seat

Clutch System


Clutch Disc/Plate/Spring Inspection

- Replace the clutch discs (1) if they show signs of scoring or discolouration.
Measure the thickness of each clutch disc.
Service Limit: 2.85 mm (0.112 in)
Replace the clutch discs and clutch plates as a set.

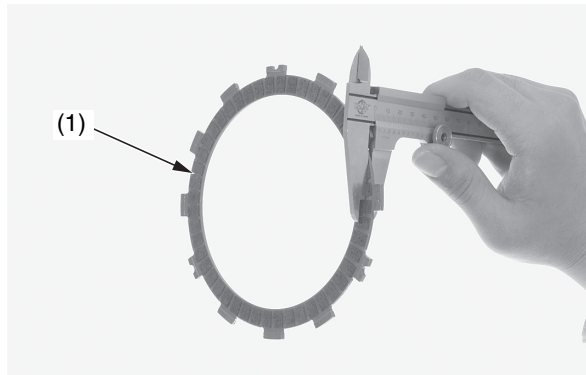


(1) clutch discs

- Check the clutch plates (2) for excessive warpage or discolouration.
Check the plate warpage on a surface plate using a feeler gauge.
Service Limit: 0.15 mm (0.006 in)
Replace the clutch discs and plates as a set.

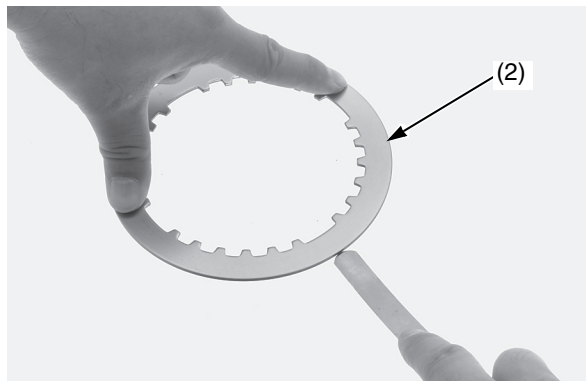

(2) clutch plates

- Check the clutch springs (3) for wear or damage.
Measure the free length of each clutch spring.
Service Limit: 48.70 mm (1.917 in)
Replace the clutch spring as a set.

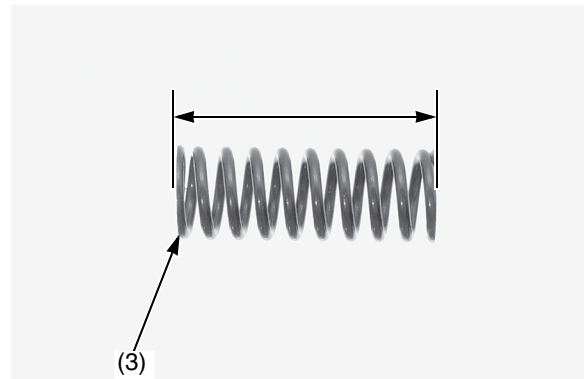


(3) clutch springs

- If you feel the clutch slipping after replacing the clutch disc and plate, replace the clutch springs.

Clutch Disc/Plate Installation

1. Install the spring seat (1) and judder spring (2) onto the clutch centre as shown.
Coat the clutch discs with engine oil.
2. Install the clutch disc A (larger I.D. disc) (3) onto the clutch outer.
Stack the six clutch plates (4) five clutch discs B (5) alternately while aligning the lugs (6) of the clutch centre with the groove (7) of the clutch plates as shown.
Install the clutch disc C (8).

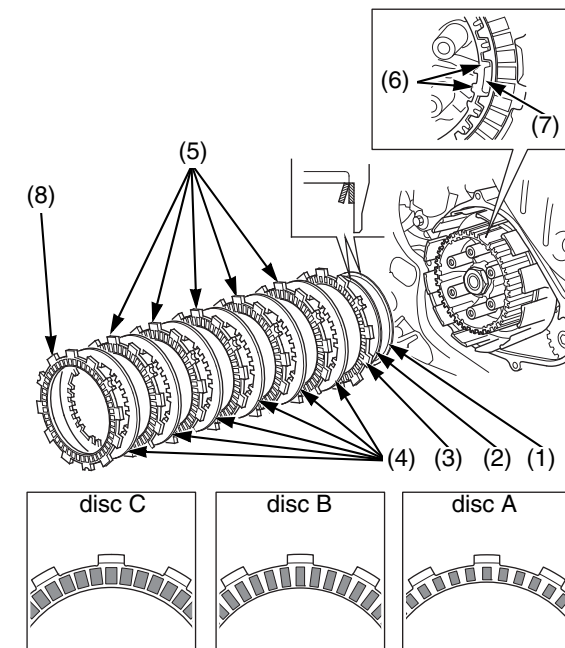


- (1) spring seat
(2) judder spring
(3) clutch disc A
(4) clutch plates

- (5) clutch discs B
(6) lugs
(7) groove
(8) clutch disc C

Clutch System


3. Install the clutch lifter (9) onto the clutch lifter rod (10).

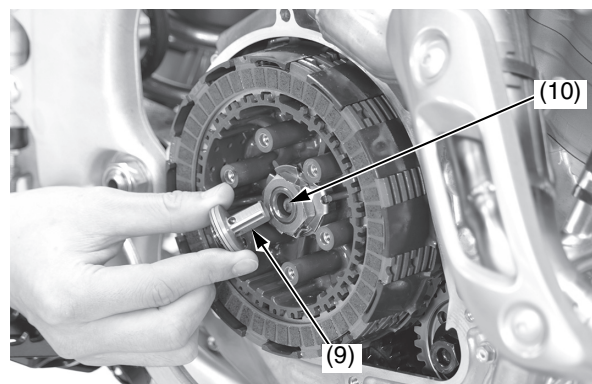

(9) clutch lifter

(10) clutch lifter rod


4. Install the clutch pressure plate (11).
5. Install the six clutch springs and bolts (12).
6. Tighten the bolts in a crisscross pattern in two or three steps to the specified torque:
12 N·m (1.2 kgf·m, 9 lbf·ft)

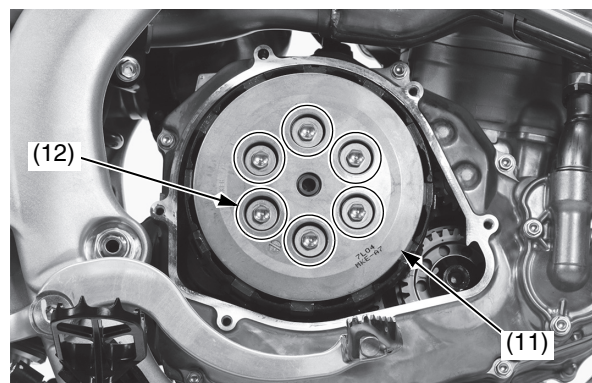

(11) clutch pressure plate

(12) clutch springs and bolts

7. Apply engine oil to a new O-ring (13) and install it in the groove of the clutch cover (14).
8. Install the cover by tightening the six cover bolts in a crisscross pattern in two or three steps to the specified torque:
10 N·m (1.0 kgf·m, 7 lbf·ft)

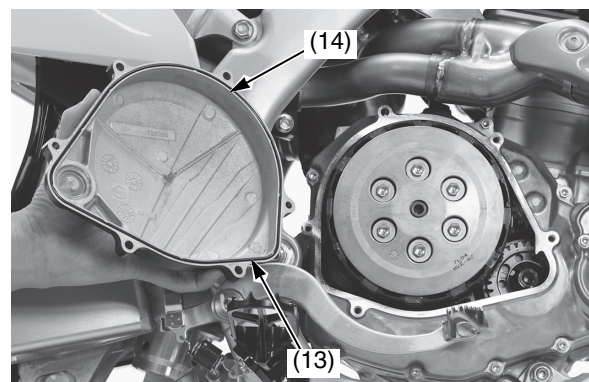

(13) O-ring (new)

(14) clutch cover

9. Fill the crankcase with the recommended oil (page 67).

Spark Plug

Refer to *Important Safety Precautions* on page 27.

Spark Plug Recommendation

The recommended standard spark plug is satisfactory for most racing conditions.

Standard	SILMAR9A – 9S (NGK)
Optional	SILMAR10A – 9S (NGK)

Use only the recommended type of spark plugs in the recommended heat range.

NOTICE

*Using a spark plug with an improper heat range or incorrect reach can cause engine damage.
Using a non-resistor spark plug may cause ignition problems.*


This motorcycle uses a spark plug that has an iridium tip in the centre electrode and a platinum tip in the side electrode.

Be sure to observe the following when servicing the spark plug.

- Do not clean the spark plug. If an electrode is contaminated with accumulated objects or dirt, replace the spark plug with a new one.
- To check the spark plug gap, use only a “wire-type feeler gauge.” To prevent damaging the iridium tip of the centre electrode and platinum tip of the side electrode, never use a “leaf-type feeler gauge.”
- Do not adjust the spark plug gap. If the gap is out of specification, replace the spark plug with a new one.

Spark Plug Inspection & Replacement


1. Remove the seat and hang the fuel tank to the left of the frame (pages 38, 39, 41).
2. Disconnect the spark plug cap (1).
3. Clean any dirt from around the spark plug base.
4. Remove the spark plug (2).

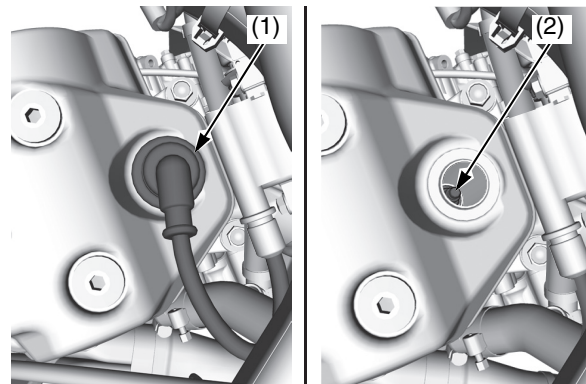

(1) spark plug cap

(2) spark plug

5. Check the electrodes for wear or deposits, the sealing gasket (3) for damage, and the insulator for cracks. Replace if you detect them.
6. Check the spark plug gap (4), using a wire-type feeler gauge. If the gap is out of specifications, replace the plug with a new one.
The recommended spark plug gap is:
0.8 – 0.9 mm (0.031 – 0.035 in)

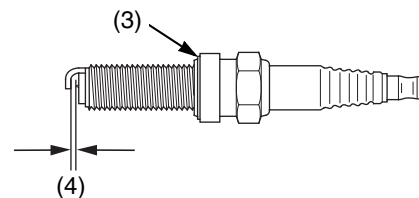

(3) sealing gasket
(4) spark plug gap

7. To obtain accurate spark plug readings, accelerate up to speed on a straightaway. Press and hold the engine stop button and disengage the clutch by pulling the lever in.
Coast to a stop, then remove and inspect the spark plug. The porcelain insulator around the centre electrode should appear tan or medium gray.

If you're using a new plug, ride for at least 10 minutes before taking a plug reading; a brand-new plug will not colour initially.

If the electrodes appear burnt, or the insulator is white or light gray (lean) or the electrodes and insulator are black or fouled (rich), there is a problem elsewhere (page 158).
Check the PGM-FI system and ignition timing.

8. With the sealing gasket attached, thread the spark plug in by hand to prevent cross-threading.
9. Tighten the spark plug.
 - If the old plug is good:
1/12 turn after it seats.
 - If installing a new plug, tighten it twice to prevent loosening:
 - a) First, tighten the plug:
1/4 turn after it seats.
 - b) Then loosen the plug.
 - c) Next, tighten the plug again:
1/12 turn after it seats.

NOTICE

An improperly tightened spark plug can damage the engine. If a plug is too loose, the piston may be damaged. If a plug is too tight, the threads may be damaged.

10. Connect the spark plug cap. Take care to avoid pinching any cables or wires.
11. Install the fuel tank and seat (pages 38, 40, 42).

Valve Clearance

Refer to *Important Safety Precautions* on page 27.


Excessive valve clearance will cause noise and eventual engine damage. Little or no clearance will prevent the valve from closing and cause valve damage and power loss. Check valve clearance when the engine is cold at the intervals specified in the Maintenance Schedule (pages 29, 30).

The checking or adjusting of the valve clearance should be performed while the engine is cold. The valve clearance will change as engine temperature rises.

Cylinder Head Cover Removal

Before inspection, clean the engine thoroughly to keep dirt from entering the engine.


1. Remove the seat and hang the fuel tank to the left of the frame (pages 38, 39, 41).
2. Disconnect the breather tube (1) and spark plug cap (2).

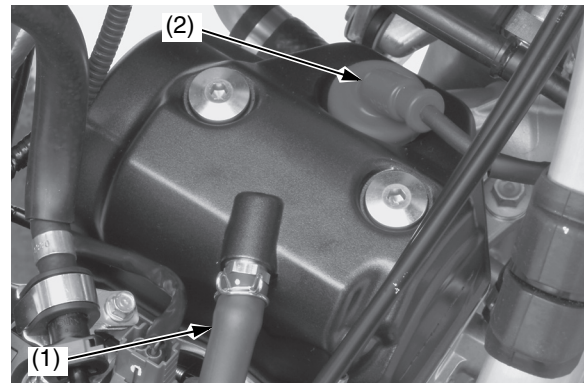

(1) breather tube

(2) spark plug cap

3. Remove the cylinder head cover socket bolts (3), rubber seals (4), cylinder head cover (5) and spark plug hole packing (6).

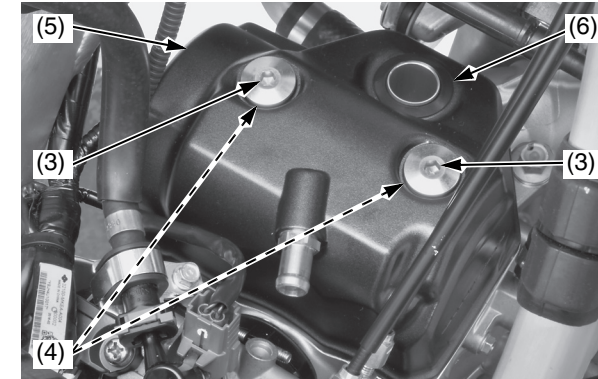


- (3) cylinder head cover socket bolts
(4) cylinder head cover rubber seals
(5) cylinder head cover
(6) spark plug hole packing

Valve Clearance

Positioning At TDC On The Compression Stroke

1. Remove the crankshaft hole cap (1).

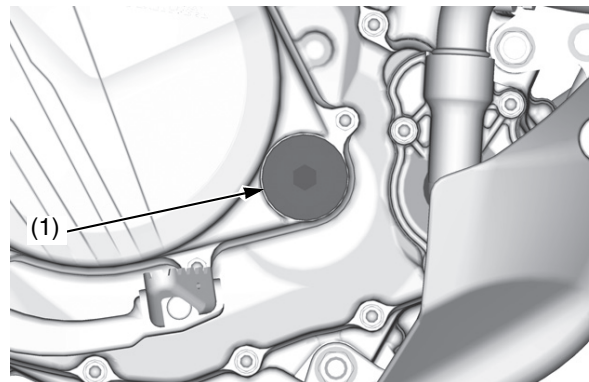


(1) crankshaft hole cap

2. Remove the spark plug (page 82).
3. Remove the cylinder head cover (page 83).


4. Rotate the crankshaft by turning the primary drive gear bolt (2) clockwise until "T" mark (3) on the primary drive gear aligns with the index mark (4) on the clutch cover. In this position, the piston may either be on the compression or exhaust stroke at TDC. If the primary drive gear passed the "T" mark, rotate the primary drive gear bolt clockwise again and align the "T" mark with the index mark. Make sure that the decompressor weight (5) is upper position.

crankshaft side:

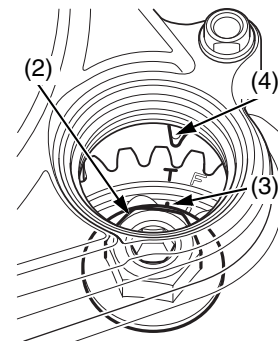


- (2) primary drive gear bolt
(3) "T" mark
(4) index mark
(5) decompressor weight

camshaft side:

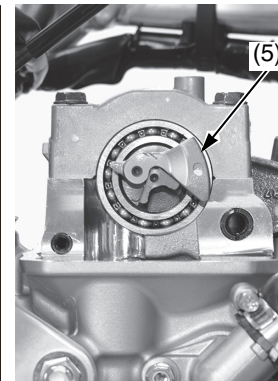


5. Check the timing marks (6) on the cam sprocket aligns with the camshaft holder mating surface (7) of the cylinder head.

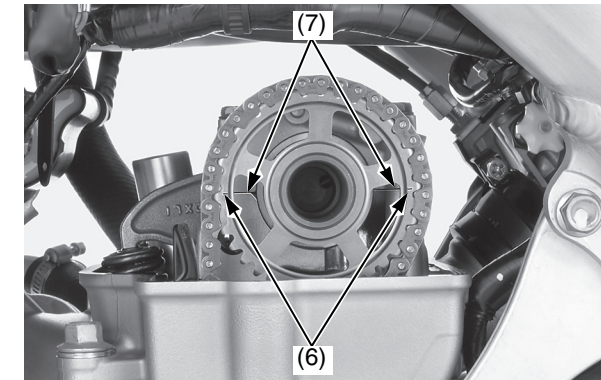

- (6) timing marks
(7) camshaft holder mating surface

6. The inspection must be made when the piston is at the top of the compression stroke when both the intake and exhaust valves are closed. This condition can be determined by moving the rocker arms (8).

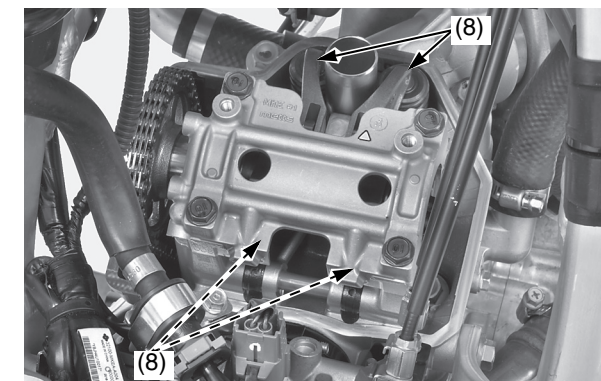

(8) rocker arms



Valve Clearance

Valve Clearance Inspection

1. Set the piston at TDC on the compression stroke (page 84).
2. Measure the intake valve clearances by inserting a feeler gauge (1) between the intake rocker arms (2) and camshaft cam lobes (3).

NOTICE



Be careful not to damage the intake rocker arms.

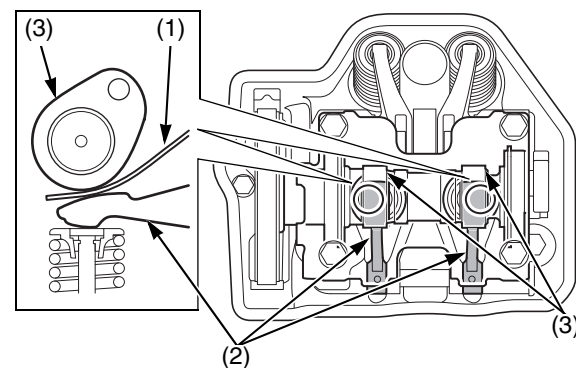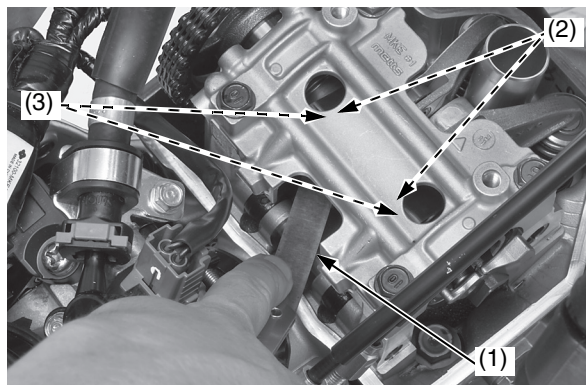

- (1) feeler gauge
(2) intake rocker arms
(3) camshaft cam lobes

Valve Clearance:
IN: 0.13 ± 0.03 mm (0.005 ± 0.001 in)

3. Measure the exhaust valve clearances by inserting a feeler gauge (1) between the exhaust rocker arms (4) and shims (5).

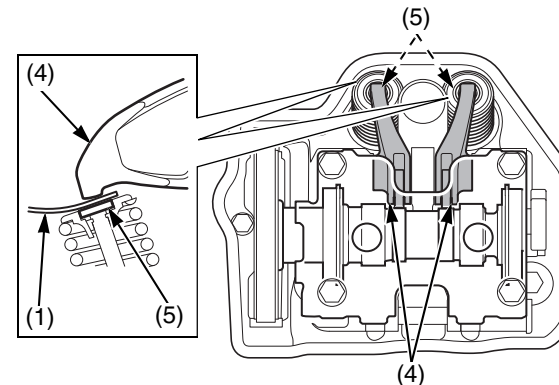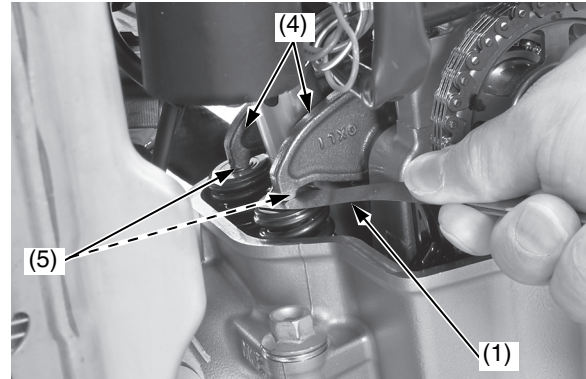


- (1) feeler gauge
(4) exhaust rocker arms
(5) valve shims

Valve Clearance:
EX: 0.28 ± 0.03 mm (0.011 ± 0.001 in)

If intake valve clearance and exhaust valve clearance need adjustment, see Camshaft Removal (this page) and select the correct shim for each valve.

Camshaft Removal

1. Make sure the piston is at TDC on the compression stroke (page 84). Record the intake valve and exhaust valve clearances (this page).
2. Remove the cam chain tensioner lifter cover bolt (1) and sealing washer (2).

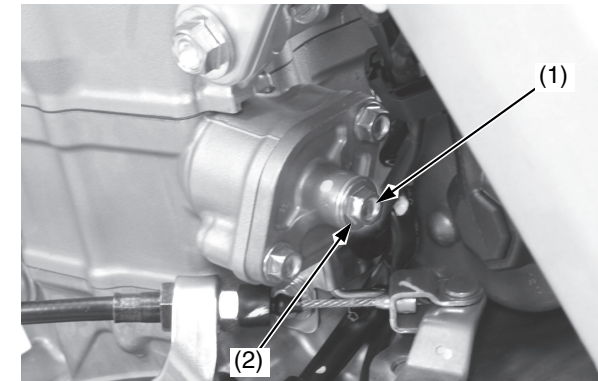


- (1) cam chain tensioner lifter cover bolt
(2) sealing washer

(cont'd)

Valve Clearance


3. Insert the tensioner stopper (3) into the cam chain tensioner lifter (4).
Turn the tensioner stopper clockwise and lock the cam chain tensioner lifter by pushing the handle (5) to the cam chain tensioner lifter.
- Tensioner stopper 070MG-0010100

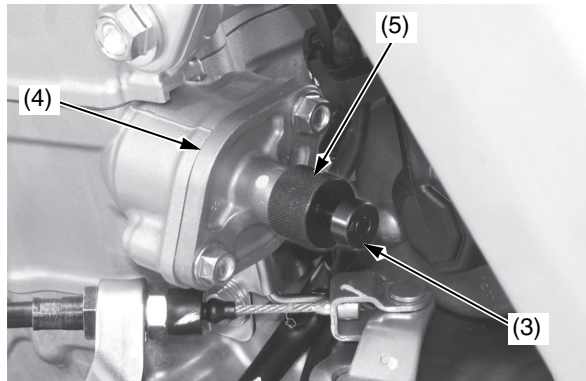

(3) tensioner stopper
(4) cam chain tensioner lifter
(5) handle

4. Check the piston is at TDC on the compression stroke (page 84).
Loosen the camshaft holder bolts (6) in a crisscross pattern in two or three steps.
Remove the camshaft holder bolts, camshaft holder (7) and set rings (8).

As you remove the camshaft holder, set rings may be sticking in the camshaft holder.

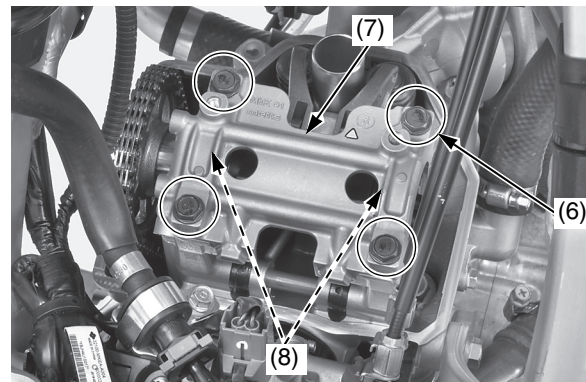

(6) camshaft holder bolts
(7) camshaft holder
(8) set rings

NOTICE

Do not let the set rings fall into the crankcase.


If the set rings are remained on the camshaft holder, remove the set rings carefully.

5. Slide the left camshaft bearing (9) and remove the camshaft (10) by removing the cam chain (11).

Suspend the cam chain with a piece of wire to prevent the chain from falling into the crankcase.

NOTICE


Do not let the cam chain fall into the crankcase.

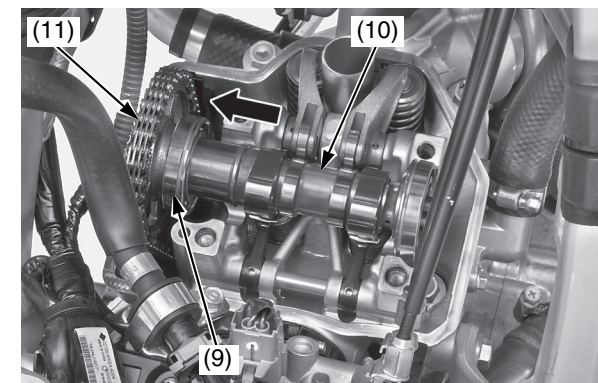

(9) left camshaft bearing
(10) camshaft
(11) cam chain

Valve Clearance

6. Lift the rocker arms (12) up and remove the shims (13).

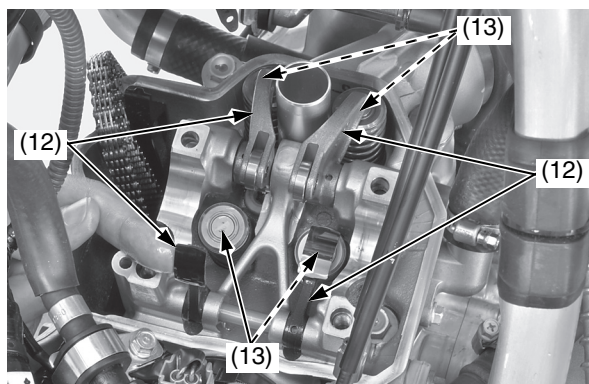


(12) rocker arms
(13) shims

NOTICE

Be careful not to damage the intake rocker arms. Do not clean the intake rocker arms using a commercially available compound cleaner.

Shim Selection

1. Measure the shim thickness with a micrometer and record it.
Seventy-three different shims (1) are available in 0.025 mm thickness intervals, from 1.200 mm (the thinnest) to 3.000 mm (the thickest).

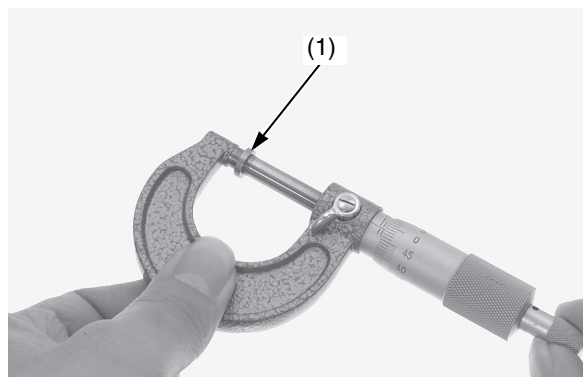

(1) shim

2. Calculate the new shim thickness using the equation below.

$$A = (B - C) + D$$

A: New shim thickness
B: Recorded valve clearance
C: Specified valve clearance
D: Old shim thickness

- Make sure of the correct shim thickness by measuring the shim with a micrometer.
- Reface the exhaust valve seat if carbon deposits result in a calculated dimension of over 3.000 mm.

NOTICE

Do not lap the intake valves. They are titanium and have a thin oxide coating. Lapping will damage this coating.

If a calculated dimension is out of specifications, have your motorcycle inspected by your dealer.

			
1.80 mm	1.825 mm	1.85 mm	1.875 mm


Valve Clearance

Camshaft Installation

1. Lift the rocker arms (1) up and install the newly selected shims (2) on the valve spring retainers (3).


NOTICE

Do not let the shims fall into the crankcase.

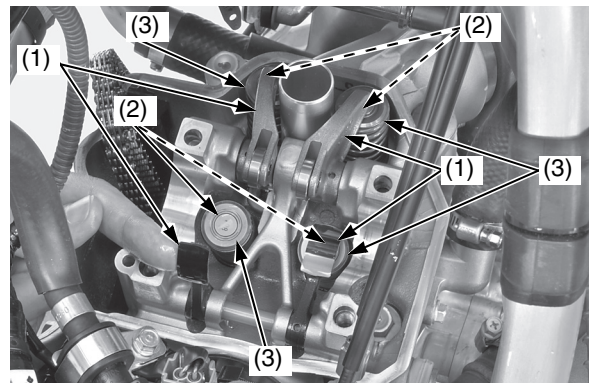

(1) rocker arms
(2) shims
(3) valve spring retainers

2. Check the operation of the plunger (4) by turning the decompressor weight (5) with your finger. The plunger should be retracted and protruded smoothly.


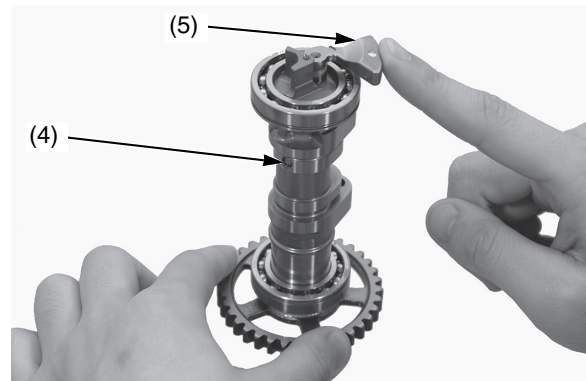


(4) plunger
(5) decompressor weight

If the operation is not smooth, refer to an official Honda Shop Manual for decompressor disassembly or see your dealer.

3. Make sure the piston is at TDC on the compression stroke (page 84).
4. Apply molybdenum disulfide oil (a mixture of 1/2 engine oil and 1/2 molybdenum disulfide grease containing more than 3% molybdenum disulfide additive) to the following parts.
 - camshaft cam lobes
 - plunger whole surface
5. Install the camshaft (6) onto the cylinder head with the decompressor weight (5) facing up as illustrated below.
6. Install the cam chain (7) over the cam sprocket (8).


While holding the left camshaft bearing (9) to the left fully, install the camshaft (6) onto the cylinder head (10) and slide the left camshaft bearing to the right fully.

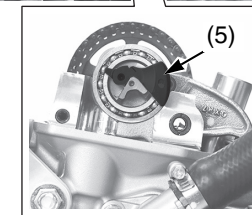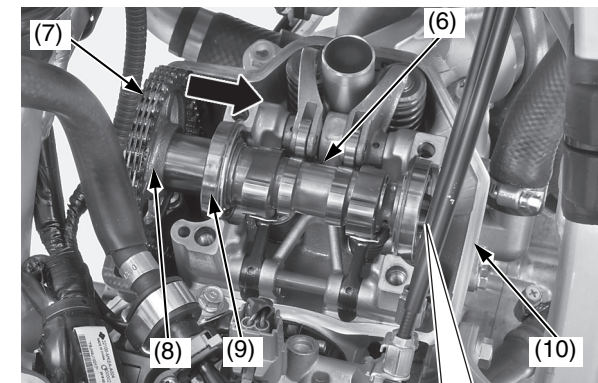

(5) decompressor weight
(6) camshaft
(7) cam chain
(8) cam sprocket
(9) left camshaft bearing
(10) cylinder head


Valve Clearance

7. Make sure that the timing mark (11) on the cam sprocket aligns with the camshaft holder mating surface (12) of the cylinder head.

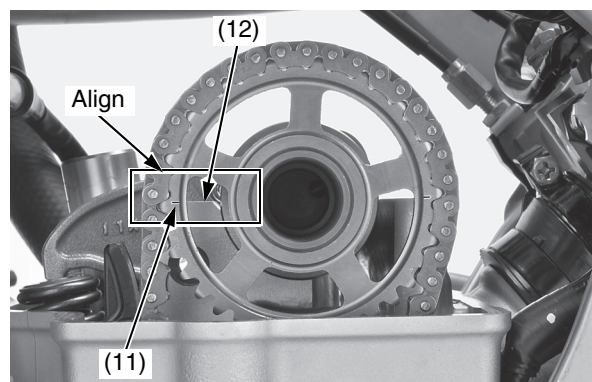

(11) timing mark
(12) camshaft holder mating surface

8. Make sure that the dowel pins (13) are installed into the camshaft holder (14).

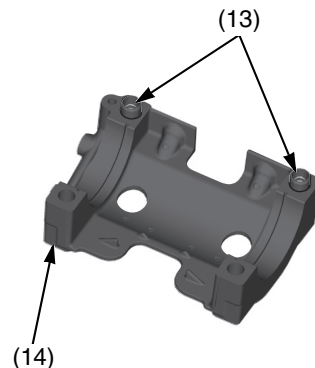


(13) dowel pins (14) camshaft holder

9. Install the set rings (15) on the camshaft bearing grooves (16).

NOTICE


Do not let the set rings fall into the crankcase.

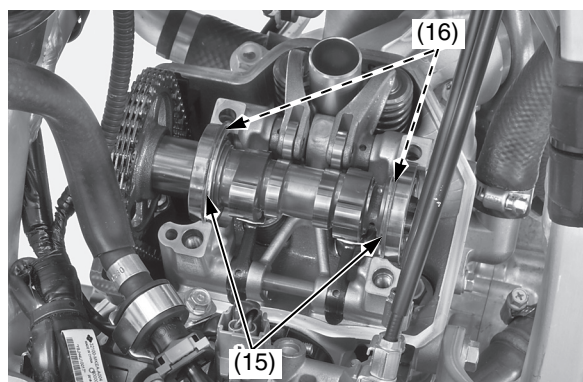

(15) set rings
(16) camshaft bearing grooves


10. Apply engine oil to the camshaft holder bolt threads.
Install the camshaft holder (17) with the “Δ” mark (18) facing forward.
Install the camshaft holder bolts (19) (20) and tighten the camshaft holder bolts to the specified torque:
15 N·m (1.5 kgf·m, 11 lbf·ft)

Tighten the camshaft holder bolts in a crisscross pattern in two or three steps.

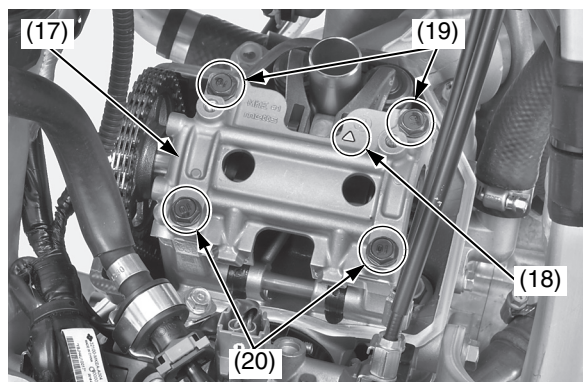

(17) camshaft holder (18) “Δ” mark
(19) camshaft holder bolts (long)
(20) camshaft holder bolts (short)


11. Remove the tensioner stopper (21) from the cam chain tensioner lifter.

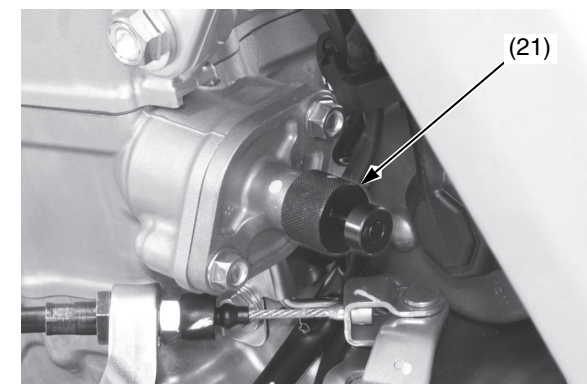

(21) tensioner stopper

12. Make sure that the piston is at TDC on the compression stroke (page 84).
Check that the timing mark (11) on the cam sprocket aligns with the camshaft holder mating surface (12) of the cylinder head.

If the timing mark doesn't align with the camshaft holder mating surface, insert the tensioner stopper into the cam chain tensioner lifter (page 86) and then remove the cam chain and realign the timing mark.

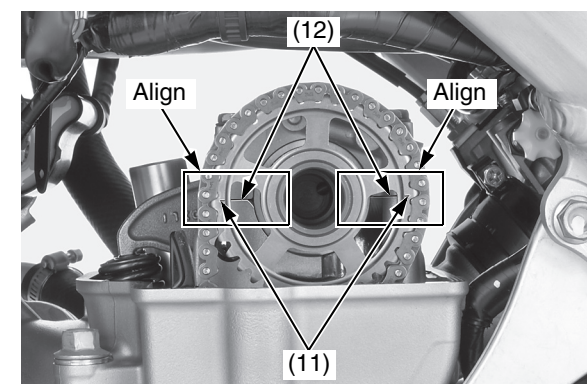


(11) timing mark
(12) camshaft holder mating surface

(cont'd)

Valve Clearance

13. Check that “T” mark (22) on the primary drive gear (23) aligns with the index mark (24) on the right crankcase cover.

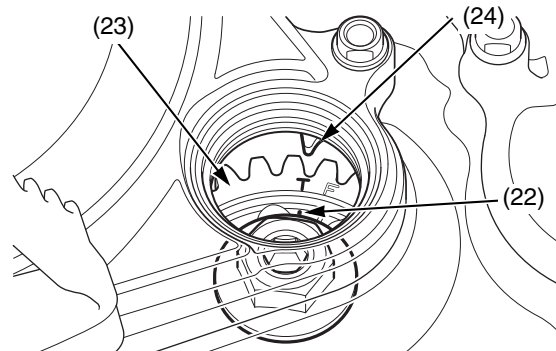


(22) “T” mark
(23) primary drive gear
(24) index mark

14. Rotate the camshaft by rotating the crankshaft clockwise several times. Make sure the piston is at TDC on the compression stroke (page 84).


15. Measure the intake and exhaust valve clearances by inserting a feeler gauge (25).
Valve Clearance:

IN: 0.13 ± 0.03 mm (0.005 ± 0.001 in)
EX: 0.28 ± 0.03 mm (0.011 ± 0.001 in)

Intake side:

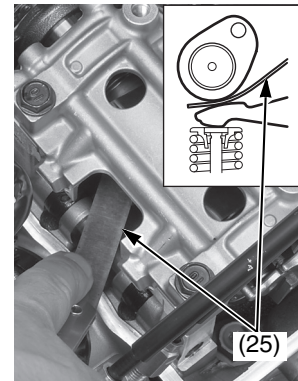


Exhaust side:

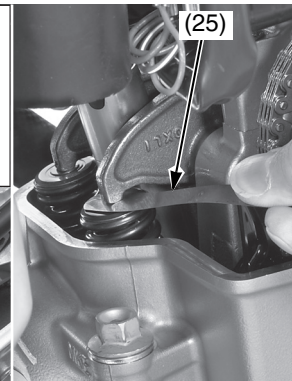

(25) feeler gauge


16. Install a new sealing washer (26) and tighten the cam chain tensioner lifter cover bolt (27).

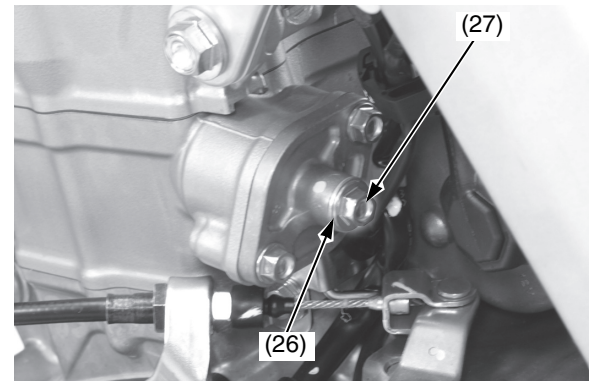

(26) sealing washer (new)
(27) cam chain tensioner lifter cover bolt

Crankshaft Hole Cap Installation

1. Install the spark plug (page 82).
2. Coat a new O-ring (1) with engine oil and install it onto the crankshaft hole cap (2). Apply grease to the crankshaft hole cap threads. Install and tighten the crankshaft hole cap to the specified torque:
15 N·m (1.5 kgf·m, 11 lbf·ft)

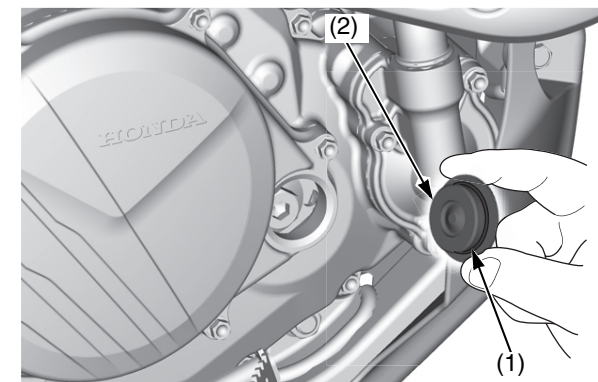


(1) O-ring (new)
(2) crankshaft hole cap

Valve Clearance


Cylinder Head Cover Installation

1. Check that the spark plug hole packing (1) is in good condition and replace it if necessary. Apply engine oil to the spark plug hole packing and install it to the cylinder head cover (2).
2. Check that the cylinder head cover packing (3) is in good condition and replace it if necessary. Clean and apply liquid sealant ((TB1207B) manufactured by ThreeBond or equivalent) to the cylinder head cover groove (4) in the shown and install the cylinder head cover packing into the cylinder head cover groove.

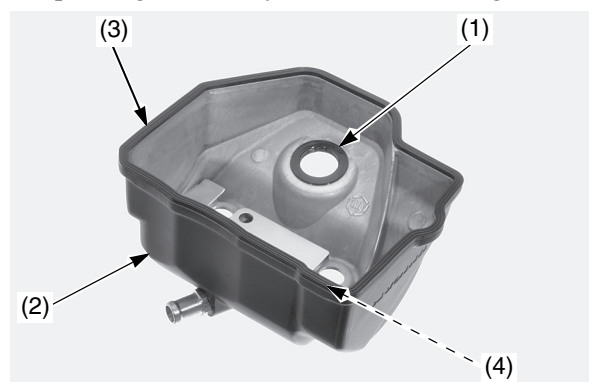


- (1) spark plug hole packing
(2) cylinder head cover
(3) cylinder head cover packing
(4) cylinder head cover groove

3. Check that the rubber seals (5) are in good condition, replace them if necessary. Install the rubber seals onto the cylinder head cover with the "UP" marks (6) facing up.

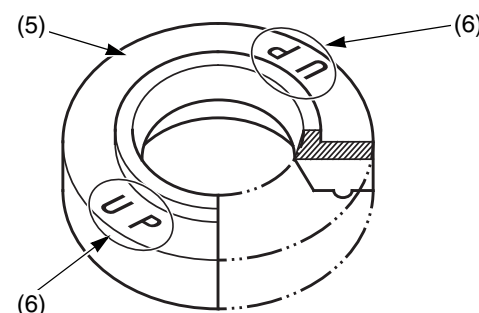


- (5) rubber seals
(6) "UP" marks

4. Install the cylinder head cover (2) and tighten the cylinder head cover socket bolts (7) to the specified torque:
10 N·m (1.0 kgf·m, 7 lbf·ft)

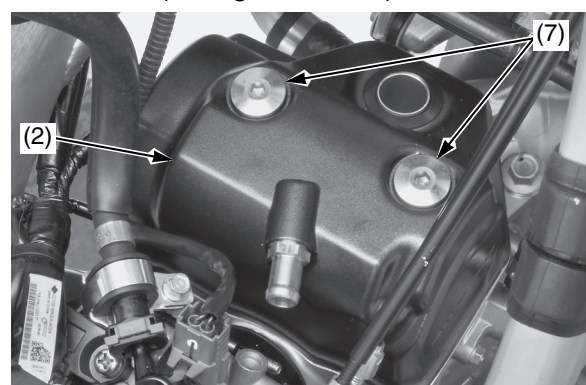

- (2) cylinder head cover
(7) cylinder head cover socket bolts

5. Connect the spark plug cap (8) and breather tube (9).

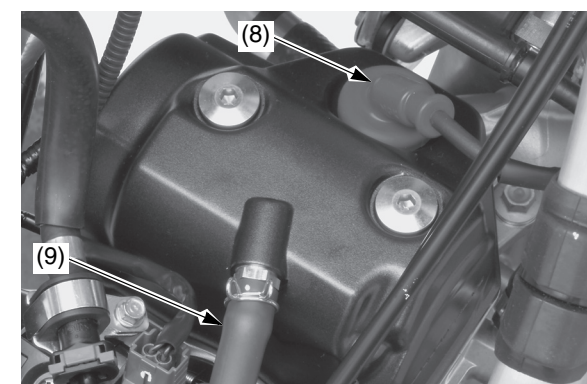

- (8) spark plug cap
(9) breather tube


6. Install the fuel tank and seat (pages 38, 40, 42).

Piston/Piston Rings/Piston Pin

Refer to *Important Safety Precautions* on page 27.


Cylinder Head Removal

1. Clean the area above the engine before disassembly to prevent dirt falling into the engine.
2. Drain the radiator coolant after cooling the motorcycle (page 167).
3. Remove the seat and hang the fuel tank to the left of the frame (pages 38, 39, 41).
4. Remove the left and right mufflers (page 130).
5. Remove the exhaust pipe (page 133).
6. Remove the subframe (page 43).
7. Remove the spark plug (page 82).
8. Remove the cylinder head cover (page 83).
9. Set the piston at TDC on the compression stroke (page 84).
10. Remove the camshaft holder, camshaft and shims (page 85).
11. Disconnect the ignition coil A connector (1) and B connector (2).
Remove the ignition coil (3) by removing the ignition coil bolts (4).

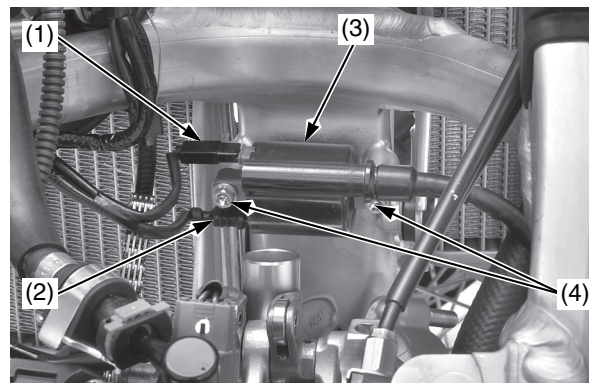


(1) ignition coil A connector (3) ignition coil
(2) ignition coil B connector (4) ignition coil bolts

12. Disconnect the ECT sensor connector (5).

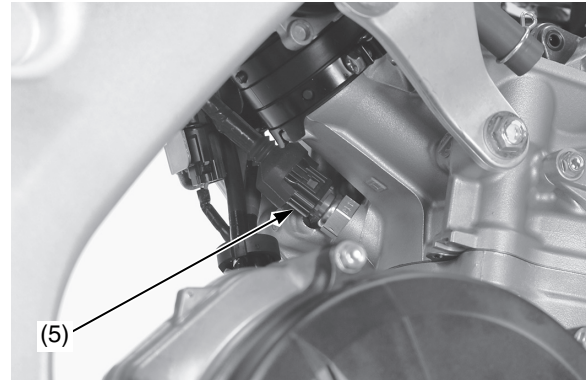

(5) ECT sensor connector


13. Loosen the radiator hose clamp screw (6) and disconnect the radiator hose (7).
14. Remove the right radiator lower mounting bolt (8) and washer (9).

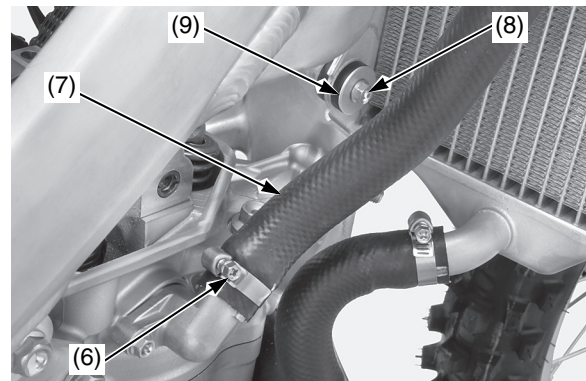

(6) radiator hose clamp screw
(7) radiator hose
(8) right radiator lower mounting bolt
(9) washer

15. Loosen the insulator band screw (10) and pull the throttle body (11) out from the insulator (12).



Do not hang the throttle body and support it with a suitable strap.

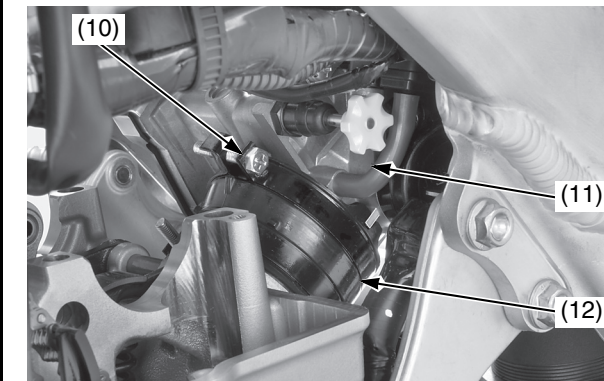

(10) insulator band screw
(11) throttle body
(12) insulator

Piston/Piston Rings/Piston Pin

16. Remove the cylinder head hanger bolts (13).
Remove the cylinder head hanger plate bolts (14), left cylinder head hanger plate (15) and right cylinder head hanger plate (16).

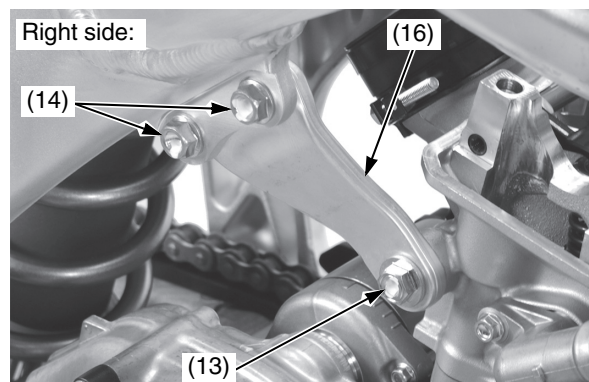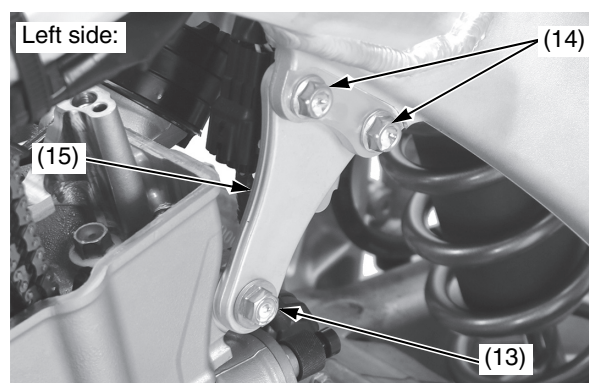


- (13) cylinder head hanger bolts
(14) cylinder head hanger plate bolts
(15) left cylinder head hanger plate
(16) right cylinder head hanger plate

17. Remove the cylinder bolt (17).
18. Remove the cylinder head bolts, washers (18) and cylinder head (19).

Loosen the bolts in a crisscross pattern in two or three steps.

NOTICE

Do not let the washers and cam chain fall into the crankcase.

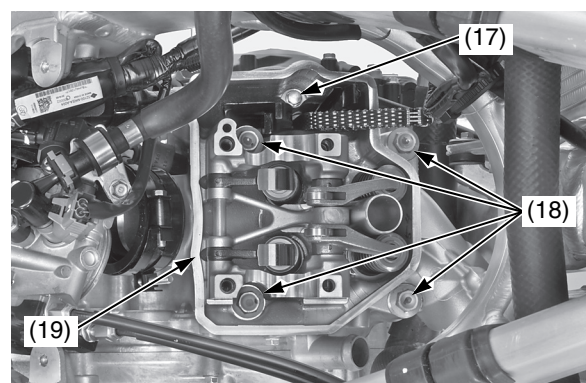


- (17) cylinder bolt
(18) cylinder head bolts and washers
(19) cylinder head

19. Remove the dowel pins (20) and cylinder head gasket (21).


NOTICE

Do not let the dowel pins and cam chain fall into the crankcase.

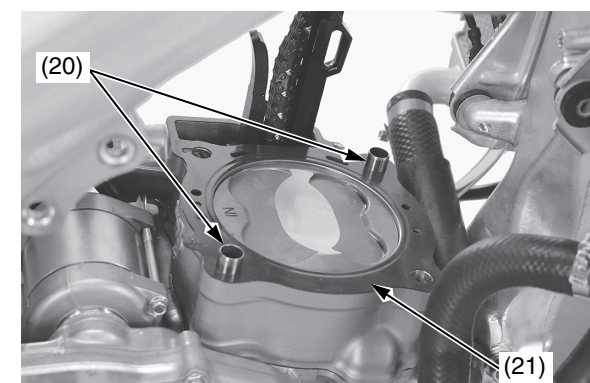

- (20) dowel pins
(21) cylinder head gasket

20. Remove the cam chain guide (22) from the cylinder (23).

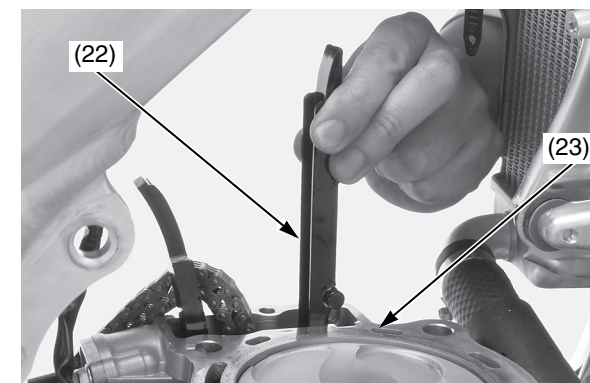

- (22) cam chain guide
(23) cylinder


Piston/Piston Rings/Piston Pin

Cylinder Removal

1. Remove the cylinder (1) while holding the piston (2).

NOTICE

*Do not let the cam chain fall into the crankcase.
Do not pry on or strike the cylinder.*

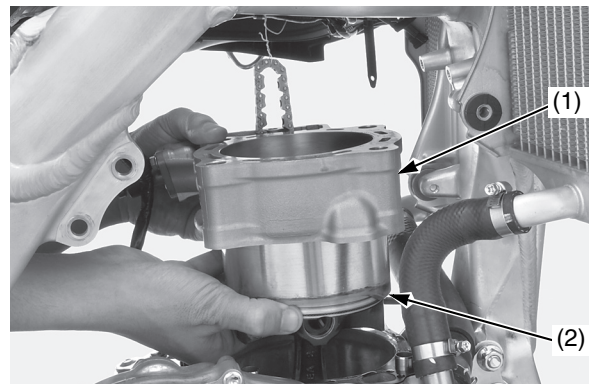


(1) cylinder (2) piston

2. Remove the dowel pins (3) and cylinder gasket (4).

NOTICE

*Do not let the cam chain fall into the crankcase.
Do not let the dowel pins fall into the crankcase.*

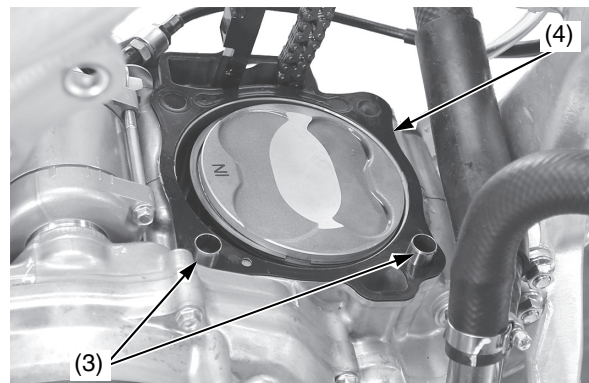

(3) dowel pins (4) cylinder gasket

Piston Removal

1. Place clean shop towels (1) in the crankcase to keep the piston pin clips, or other parts, from falling into the crankcase.
2. Remove the piston pin clips (2) using a pair of needle-nose pliers.
3. Press the piston pin (3) out of the piston (4), and remove the piston.

(CRF450RX)


Under racing conditions, the piston, rings and piston pin should be replaced every 4 races or about every 15.0 hours of running.

(CRF450R)

Under racing conditions, the piston, rings and piston pin should be replaced every 6 races or about every 15.0 hours of running.

NOTICE

*Be careful not to damage or shock the piston pin.
Do not clean the piston pin using a commercially available compound cleaner.*

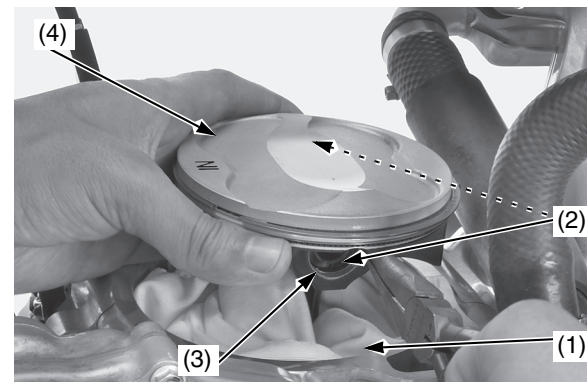

(1) shop towels (2) piston pin clips
(3) piston pin (4) piston

Piston Ring Removal

Spread each piston ring (1) and remove by lifting it up at a point just opposite the gap.

NOTICE

Do not damage the piston ring by spreading the ends too far.



(1) piston ring

Piston/Piston Rings/Piston Pin

Piston/Piston Pin/Piston Ring Inspection

We recommend you consult an official Honda Shop Manual or your dealer for correct Service Limit measurements.

Piston Ring Installation

1. Remove the carbon deposits from the piston head and piston ring grooves.

NOTICE


Do not damage the piston when removing the carbon deposit.

2. Apply engine oil to each piston ring whole surface.
3. Install the spacer (1) first, then install the side rails (2) to the piston (3).
4. Install the top ring (4) to the piston with “1R” mark (5) side facing up.

NOTICE

Do not damage the piston ring by spreading the ends too far.
Do not damage the piston during piston ring installation.

5. After installing the piston rings they should rotate freely, without sticking. Space the ring end gaps 180 degrees apart between top ring and upper side rail. Space the ring end gaps 90 degrees apart between upper side rail, spacer and lower side rail.

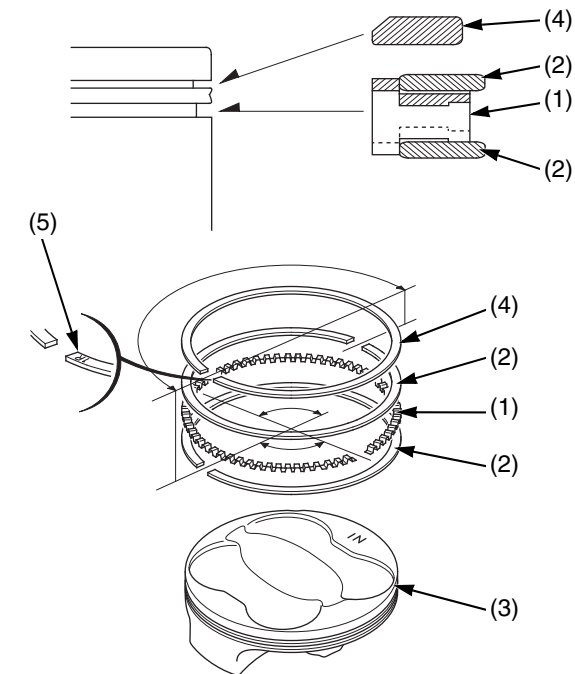


(1) spacer
(2) side rails
(3) piston

(4) top ring
(5) “1R” mark

Piston/Piston Rings/Piston Pin


Piston Installation

1. Place clean shop towels (1) over the crankcase opening to keep the piston pin clips from falling into the crankcase.
2. Apply molybdenum disulfide oil (a mixture of 1/2 engine oil and 1/2 molybdenum disulfide grease containing more than 3% molybdenum disulfide additive) to the connecting rod small end (2) inner surface.

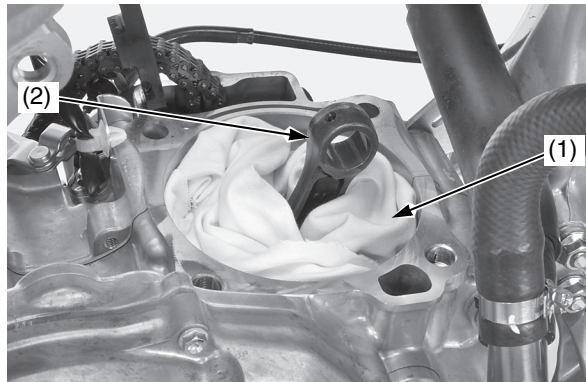

(1) shop towels
(2) connecting rod small end

3. Install the piston (3) with the "IN" mark (4) and/or the large valve recesses (5) facing the intake side of the engine.

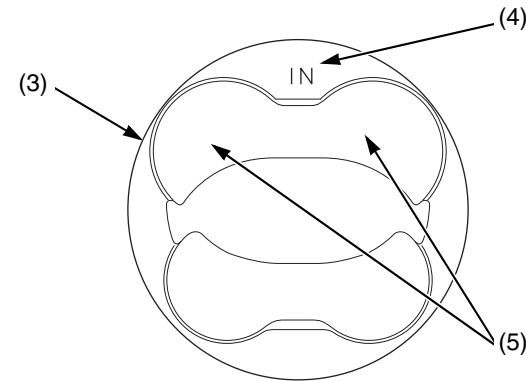


(3) piston
(4) "IN" mark
(5) large valve recesses

4. Apply molybdenum disulfide oil (a mixture of 1/2 engine oil and 1/2 molybdenum disulfide grease containing more than 3% molybdenum disulfide additive) to the piston pin (6) outer surface. Apply engine oil to the piston outer surface and piston pin hole inner surface. Install the piston pin and new piston pin clips (7).

NOTICE

*Be careful not to damage or shock the piston pin.
Use new pin clips. Never reuse old clips.
Do not let the clips fall into the crankcase.
Do not align the piston pin clip end gap with the piston cutout (8).*

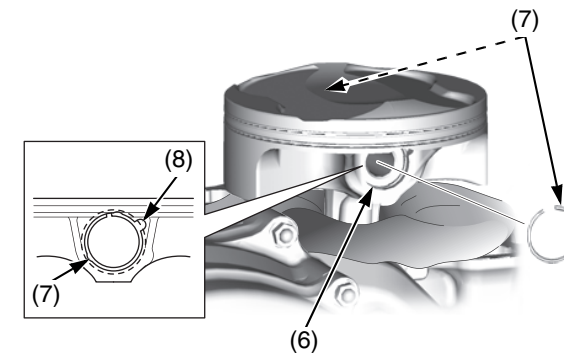


(6) piston pin
(7) piston pin clips (new)
(8) piston cutout


Piston/Piston Rings/Piston Pin

Cylinder Installation

1. Clean the cylinder mating surfaces (1) of the crankcase, being careful not to let any material fall into the crankcase.
2. Remove the shop towels.
3. Apply liquid sealant (TB1141G manufactured by ThreeBond or equivalent) to the cylinder mating surface of the crankcase side as shown.

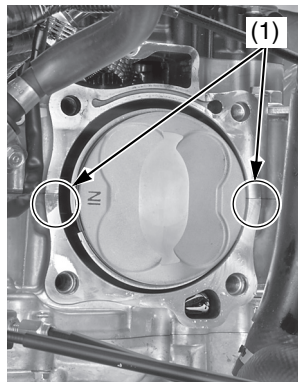


(1) cylinder mating surface

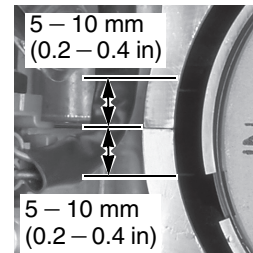

4. Install the dowel pins (2) and a new cylinder gasket (3).

NOTICE

Do not let the dowel pins fall into the crankcase.

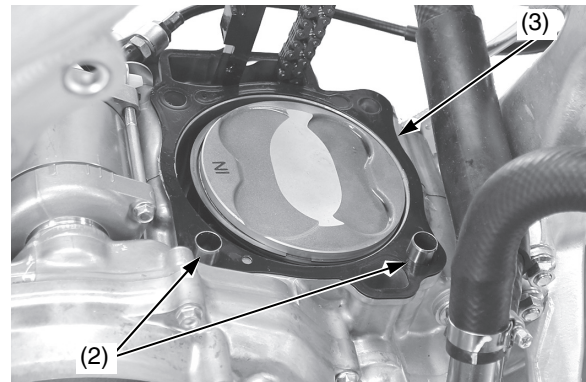


(2) dowel pins

(3) cylinder gasket (new)

5. Apply engine oil to the cylinder bore (4), piston outer surface and piston rings (5). Route the cam chain (6) through the cylinder. Install the cylinder over the piston rings by hand while compressing the piston rings.

NOTICE

*Do not damage the piston rings and cylinder bore.
Do not let the cam chain fall into the crankcase.*

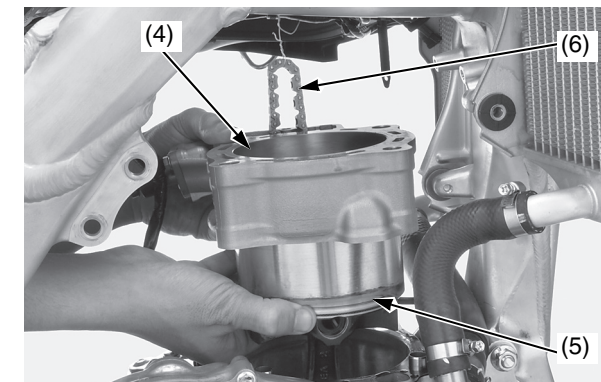


(4) cylinder bore
(5) piston rings

(6) cam chain

Piston/Piston Rings/Piston Pin

Cylinder Head Installation

1. Clean any gasket material off cylinder head.
2. Install the cam chain guide (1) and fit the cam chain guide tabs (2) in the cylinder cutouts (3). Push the guide until it bottoms in the crankcase guide groove.

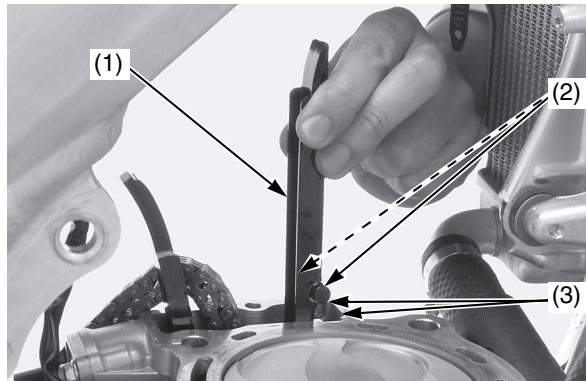


(1) cam chain guide (3) cylinder cutouts
(2) cam chain guide tabs

3. Install the dowel pins (4) and a new cylinder head gasket (5).

NOTICE

Do not let the dowel pins fall into the crankcase.

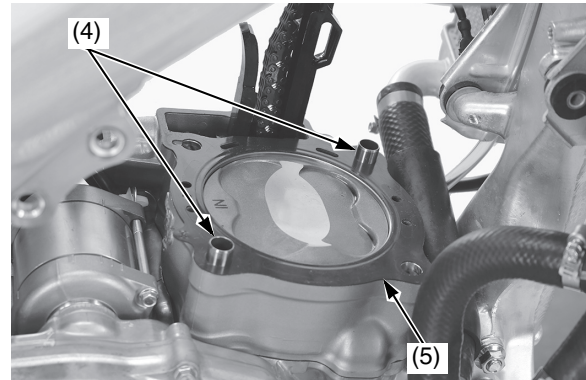

(4) dowel pins
(5) cylinder head gasket (new)

4. Route the cam chain through the cylinder head and install the cylinder head (6).

NOTICE


Do not damage mating surfaces when installing the cylinder head.

5. Apply engine oil to all cylinder head bolt threads and seating surface. Install the washers and cylinder head bolts (7) and tighten them to the specified torque in a crisscross pattern in two or three steps: 50 N·m (5.1 kgf·m, 37 lbf·ft)

NOTICE

Do not let the washers fall into the crankcase.

6. Install the cylinder bolt (8) and tighten it to the specified torque:
10 N·m (1.0 kgf·m, 7 lbf·ft)

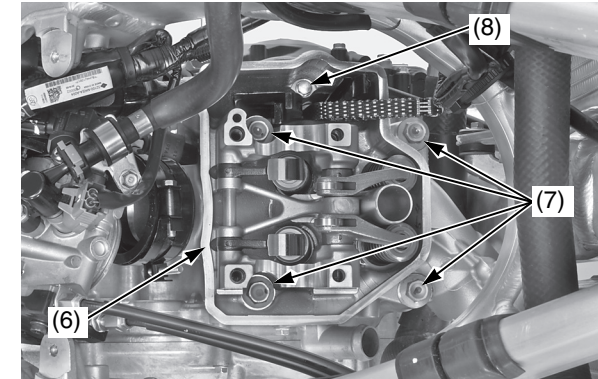

(6) cylinder head
(7) washers and cylinder head bolts
(8) cylinder bolt

Piston/Piston Rings/Piston Pin

7. Install the left cylinder head hanger plate (9) and right cylinder head hanger plate (10), then loosely install the cylinder head hanger plate bolts (11) and cylinder head hanger bolts (12). Tighten the cylinder head hanger bolts and cylinder head hanger plate bolts to the specified torque:


cylinder head hanger bolts:

54 N·m (5.5 kgf·m, 40 lbf·ft)


cylinder head hanger plate bolts:

32 N·m (3.3 kgf·m, 24 lbf·ft)

Left side:

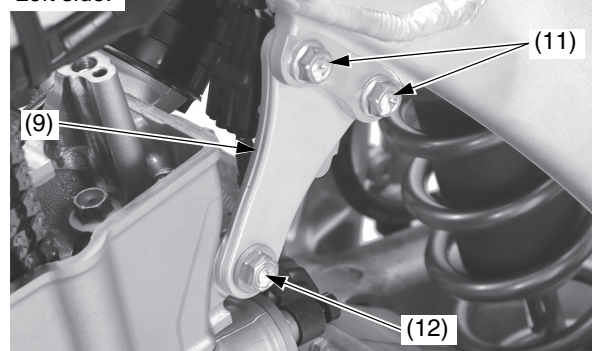


Right side:

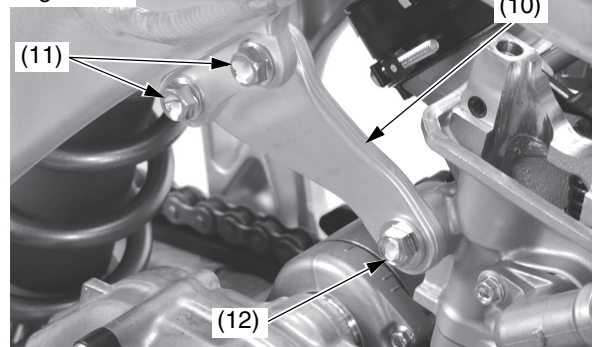

- (9) left cylinder head hanger plate
(10) right cylinder head hanger plate
(11) cylinder head hanger plate bolts
(12) cylinder head hanger bolts


8. Install the throttle body (13) to the insulator (14) by aligning the tab of the throttle body with the groove of the insulator and tighten the insulator band screw (15) so the distance between the band ends is 11.0 ± 1.0 mm (0.43 ± 0.04 in).

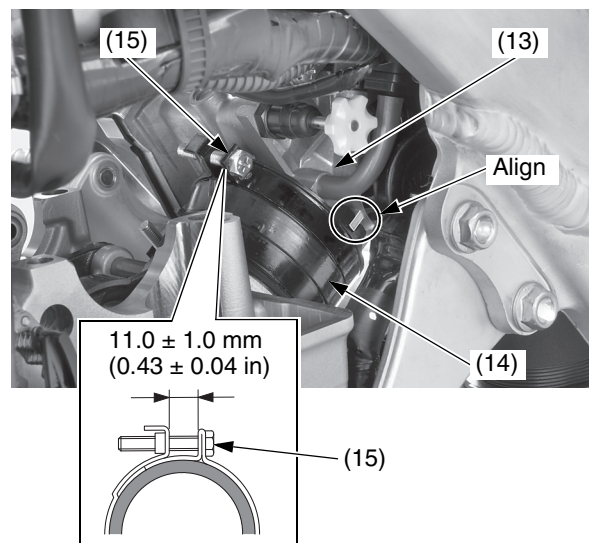

- (13) throttle body
(14) insulator


- (15) insulator band screw

9. Install and tighten the washer (16) and right radiator lower mounting bolt (17) securely.
10. Connect the radiator hose (18) to the water hose joint (19) of the cylinder head as shown.

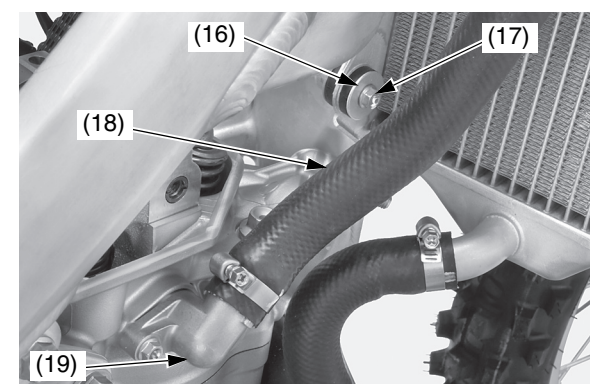

- (16) washer
(17) right radiator lower mounting bolt
(18) radiator hose
(19) water hose joint

11. Tighten the radiator hose clamp screw (20) as illustrated below.

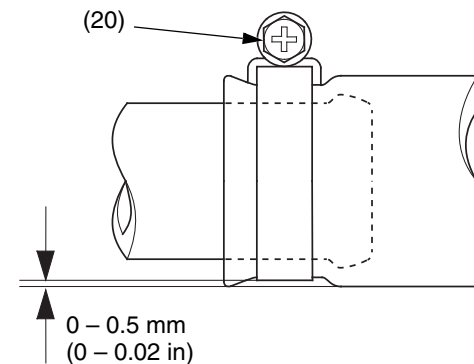


- (20) radiator hose clamp screw

(cont'd)


Piston/Piston Rings/Piston Pin

12. Connect the ECT sensor connector (21).

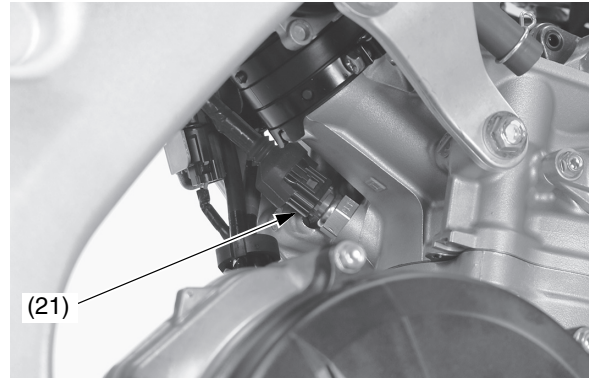

(21) ECT sensor connector

13. Install the ignition coil (22) and tighten the ignition coil bolts (23) to the specified torque: 10 N·m (1.0 kgf·m, 7 lbf·ft). Connect the ignition coil A connector (24) and B connector (25).

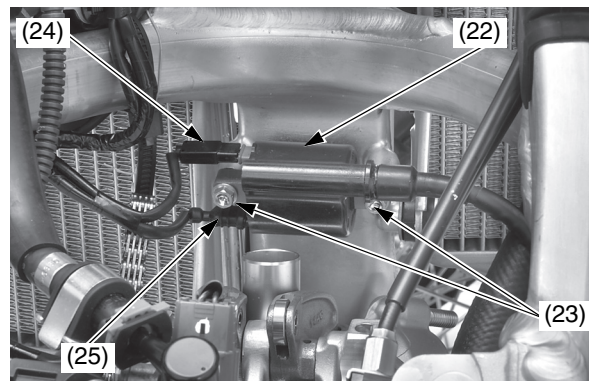

(22) ignition coil
(23) ignition coil bolts
(24) ignition coil A connector
(25) ignition coil B connector

14. Install the shims, camshaft and camshaft holder (page 88).
15. Install the crankshaft hole cap (page 90).
16. Install the cylinder head cover (page 91).
17. Install the spark plug (page 82).
18. Install the exhaust pipe (page 133).
19. Install the subframe (page 44) and left and right mufflers (page 131).
20. Install the fuel tank and seat (pages 38, 40, 42).
21. Fill and bleed the cooling system (page 167).
Check for the following:
 - compression leaks
 - abnormal engine noise
 - secondary air leaks
 - exhaust gas leaks
 - coolant leaks
 - oil leaks

Suspension

Refer to *Important Safety Precautions* on page 27.


Loose, worn, or damaged suspension components may adversely affect the handling and stability of your CRF. If any suspension components appear worn or damaged, see your dealer for further inspection. Your dealer is qualified to determine whether or not replacement parts or repairs are needed.

Front Suspension Inspection

- When your CRF is new, break it in for approximately 1 hour to ensure that the suspension has worked in (page 24).
- After break-in, test run your CRF with the front suspension at the standard setting before attempting any adjustments.
- For optimum fork performance, we recommend that you disassemble and clean the fork after riding your CRF for 3 hours. See page 102 for front suspension removal.
- (CRF450RX)
Replace the fork oil every 6 races or 22.5 hours of running. See pages 104, 105, 109 - 117 for fork oil replacement.
- (CRF450R)
Replace the fork oil every 9 races or 22.5 hours of running. See pages 104, 105, 109 - 117 for fork oil replacement.

- Use Pro Honda HP Fork Oil, A15-00 or an equivalent which contains special additives to assure maximum performance of your CRF's front suspension. Periodically check and clean all front suspension parts to assure top performance. Check the dust seals for dust, dirt, and foreign materials. Check the oil for any contamination.
- Refer to *Suspension Adjustment Guidelines* (page 155). Make all rebound and compression damping adjustments in one-click increments. (Adjusting two or more clicks at a time may cause you to pass over the best adjustment.) Test ride after each adjustment.
- If you become confused about adjustment settings, return to the standard position and start over.
- If the fork is still too stiff/soft after adjusting compression damping, determine which portion of the travel is still too stiff/soft. This is an important step that will help you solve suspension problems.


1. Make sure that the fork protectors (1) and dust seals (2) are clean and not packed with mud and dirt.
2. Check for signs of oil leakage. Damaged or leaking fork seals should be replaced before your CRF is ridden.

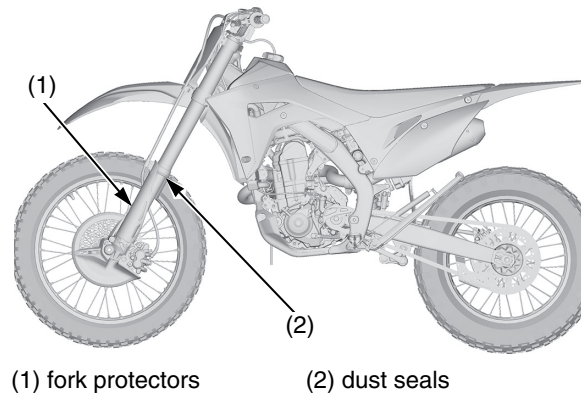

(1) fork protectors


(2) dust seals

3. Inspect the wear rings (3) for wear or damage. Replace the wear ring if it is 1.5 mm (0.06 in) or flush with the outer tube (4). Remove the fork leg when replacing the wear ring (page 102). Install the wear ring with its end gap (5) facing rearward.

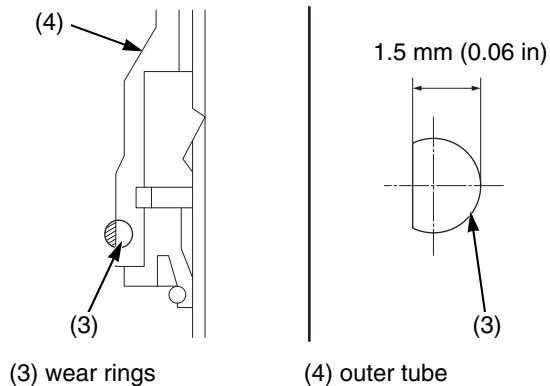

(3) wear rings

(4) outer tube

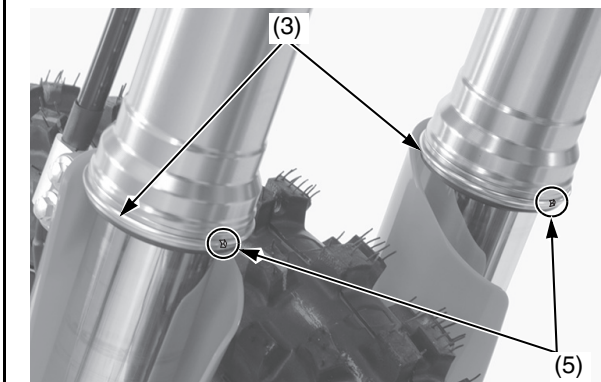


(3) wear rings

(5) end gaps

(cont'd)


Suspension

- Make a quick check of fork operation by locking the front brake and pushing down on the handlebar several times.

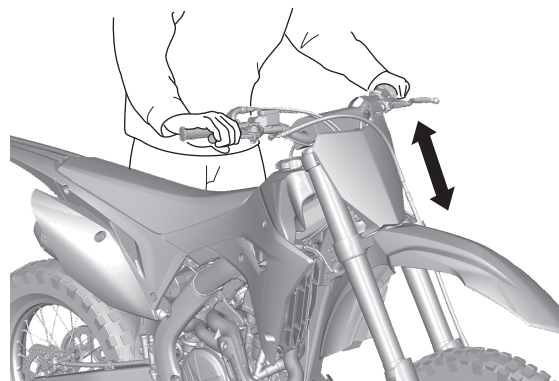


Front Suspension Removal

- When disassembling the fork, turn the compression (1) and rebound (2) damping adjusters counterclockwise to the softest position to prevent damaging the adjustment needle (be sure to record the number of turns from the starting position).

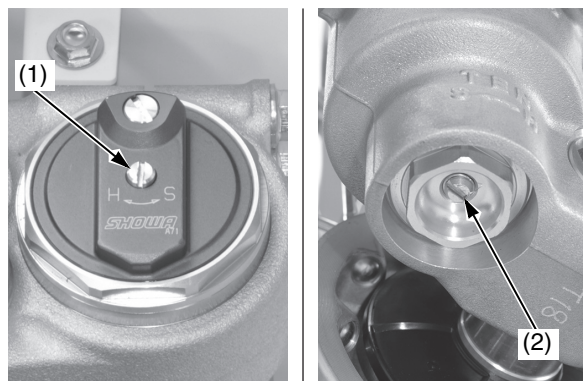

(1) compression damping adjuster
(2) rebound damping adjuster

- Unlock the number plate tab (3) from the handlebar. Remove the bolts (4) and number plate (5).

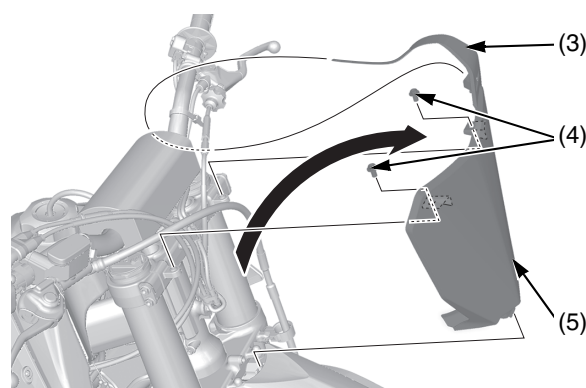


(3) number plate tab (4) bolts
(5) number plate

- Place your CRF on an optional workstand or equivalent support with the front wheel off the ground.
- Remove the handlebar protector, handlebar upper holder bolts (6), handlebar upper holders (7) and handlebar (8).

NOTICE

Keep the master cylinder upright to prevent air from entering system.

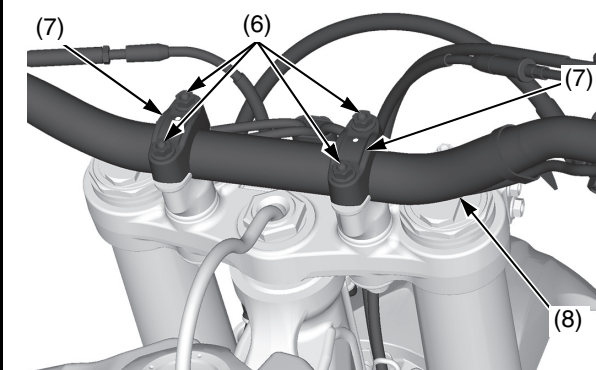

(6) handlebar upper holder bolts
(7) handlebar upper holders
(8) handlebar

- Loosen the fork bridge upper pinch bolts (9).
- Loosen the fork bolts assembly (10), but do not remove them yet.


Suspension

6. Loosen the fork damper assembly (11) using the lock nut wrench (12), but do not remove them.

• Lock nut wrench 07WMA-KZ30100


NOTICE

Do not use an adjustable wrench to loosen the fork damper: it may damage them.

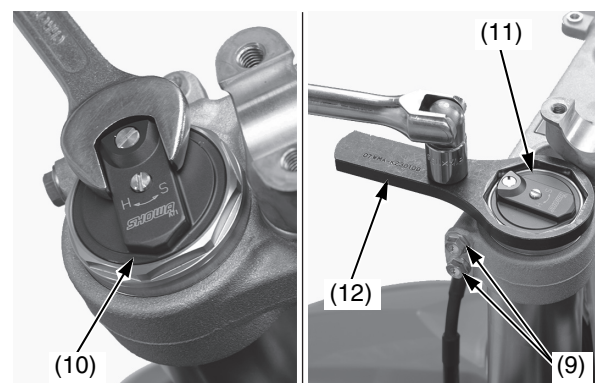


(9) fork bridge upper pinch bolts
(10) fork bolt assembly
(11) fork damper assembly
(12) lock nut wrench

7. Remove the disc cover (13) by removing disc cover socket bolts (14).

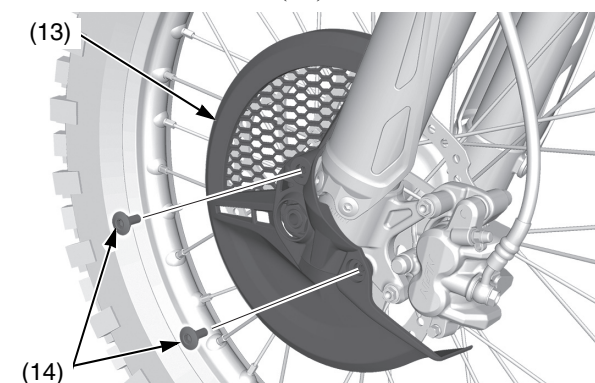

(13) disc cover (14) disc cover socket bolts

8. Remove the front axle nut (15) and loosen the axle pinch bolts (16) on both forks. Pull the front axle shaft (17) out of the wheel hub and remove the front wheel with collars (18).

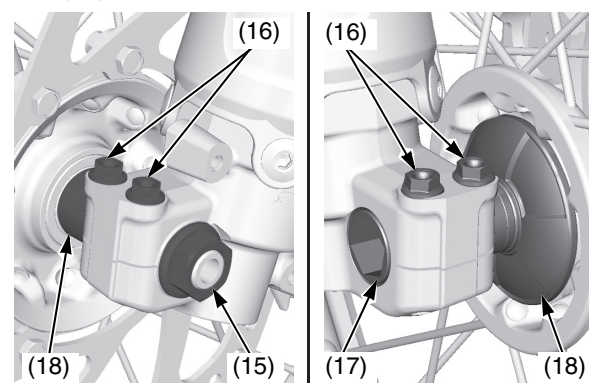


(15) front axle nut
(16) axle pinch bolts
(17) front axle shaft
(18) collars

9. Remove the brake hose clamp bolts (19), stay A (20) and stay B (21).


10. Remove the front brake caliper mounting bolts (22) and brake caliper (23).

- Do not support the brake caliper by the brake hose.
- Do not operate the brake lever after the front wheel is removed. To do so will cause difficulty in fitting the brake disc between the brake pads.

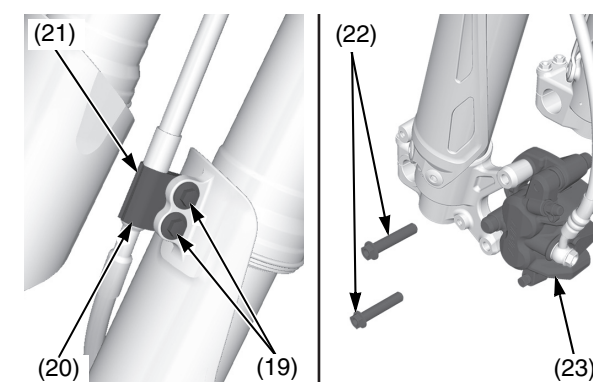

(19) brake hose clamp bolts
(20) stay A
(21) stay B
(22) front brake caliper mounting bolts
(23) brake caliper

11. Remove the fork protector socket bolts (24) and fork protectors (25).

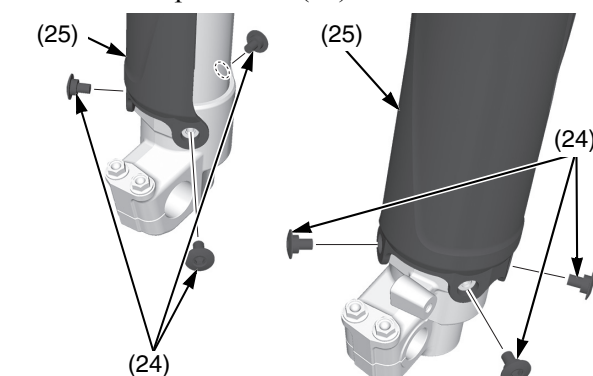


(24) fork protector socket bolts
(25) fork protectors

(cont'd)

Suspension


12. Loosen the fork bridge lower pinch bolts (26), then pull the fork legs down and out.

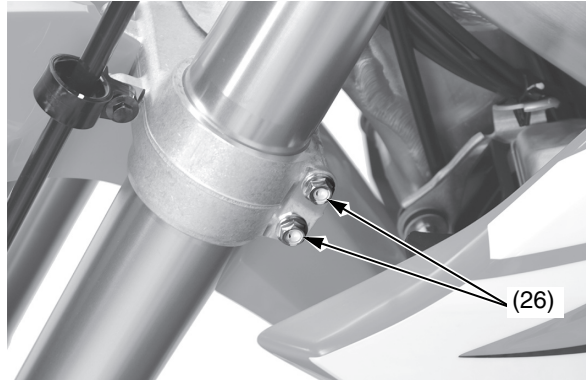

(26) fork bridge lower pinch bolts

13. Clean the fork assembly, especially the sliding surface (27) of the slider and fork dust seal (28).

14. Measure the length (29) between the axle holder and outer tube and record it before disassembling the fork.

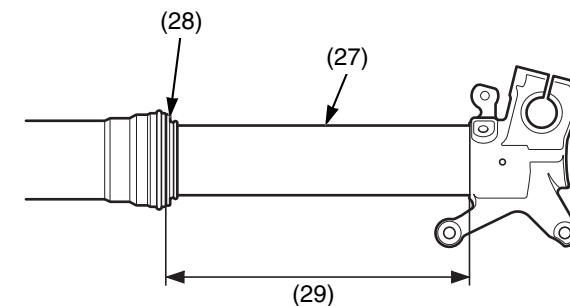

(27) sliding surface
(28) fork dust seal

(29) length


Recommended Fork Oil

suggested oil	Pro Honda HP Fork Oil, A15-00
---------------	-------------------------------

Fork Outer Tube Disassembly

Refer to *Front Suspension Removal* on page 102.

1. Clean the fork assembly, especially the sliding surface of the slider and dust seal.
 2. Hold the outer tube (1), then remove the fork damper assembly (2) from the outer tube using the lock nut wrench (3). Gently slide the outer tube down onto the lower end (axle holder) (4).
- Lock nut wrench 07WMA-KZ30100

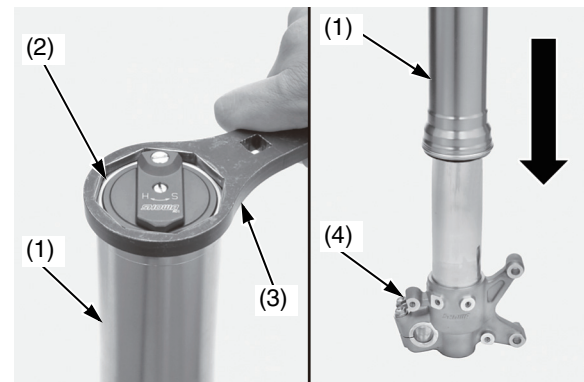


(1) outer tube
(2) fork damper assembly

(3) lock nut wrench
(4) axle holder

NOTICE


The outer tube (1) can drop on the axle holder (4) and damage the fork dust seal (5). To avoid damage, hold both the outer tube and slider when removing the fork damper.

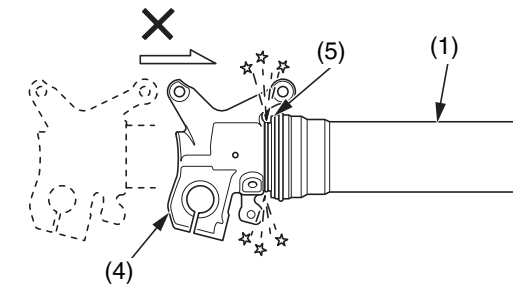

(1) outer tube
(4) axle holder

(5) fork dust seal

3. Drain the fork oil from the outer tube (1) and oil holes (6) of the fork damper assembly (2). Remove the O-ring (7) from the fork damper assembly.

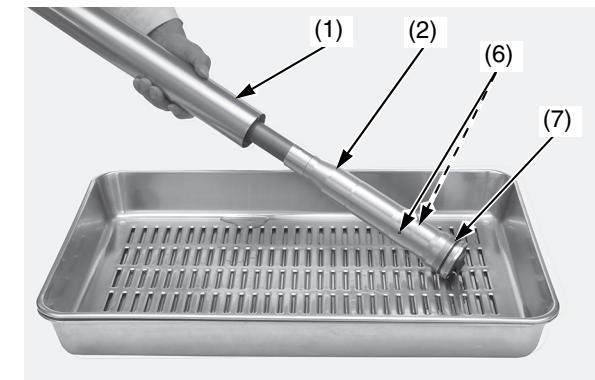


(1) outer tube
(2) fork damper assembly

(6) oil holes
(7) O-ring

Suspension

4. Drain the fork oil by turning the outer tube (1) upside down. (About 13.7 cm³ (0.46 US oz, 0.48 Imp oz) of fork oil will be left in the outer tube when it is left inverted for about 20 minutes at 20°C/68°F.)

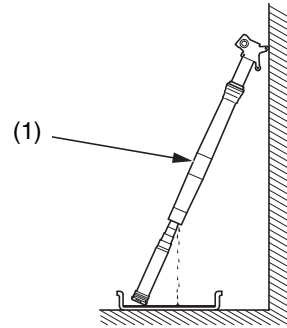

(1) outer tube

Pour the drained oil into a suitable container and dispose of it in an approved manner (page 168).


NOTICE

Improper disposal of drained oil is harmful to the environment.

Amount of fork oil left in the fork
(within damper and spring)

unit: cm³


minute °C/°F	5	10	20	35	55	85	145
30/86	16.5	14.1	12.7	11.8	11	10.1	8.6
20/68	17.4	15	13.7	12.6	11.5	10.5	9.1
10/50	18.9	16.5	14.8	13.7	12.5	11.4	9.8
0/32	20	18.4	15.9	14.5	13.7	13	11.7

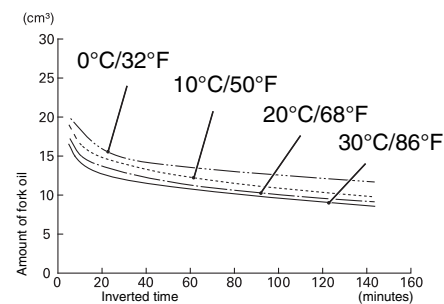

Fork Oil Refilling

1. Pour the recommended fork oil into the outer tube (1).

Be sure the oil capacity is the same in both fork legs.

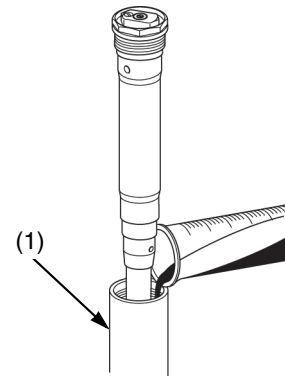


(1) outer tube

Recommended Oil:
Pro Honda HP Fork Oil, A15-00
Recommended Standard Amount:
(CRF450RX)
360 cm³ (12.2 US oz, 12.7 Imp oz)
(CRF450R)
356 cm³ (12.0 US oz, 12.5 Imp oz)

Fill the fork oil which is obtained by docking off the amount of the remaining oil in the fork from the recommended standard fork oil capacity.

Refer to *Front Suspension Adjustments* on page 145.

2. Apply the recommended fork oil to a new O-ring (2). Install the O-ring on the fork damper assembly (3).

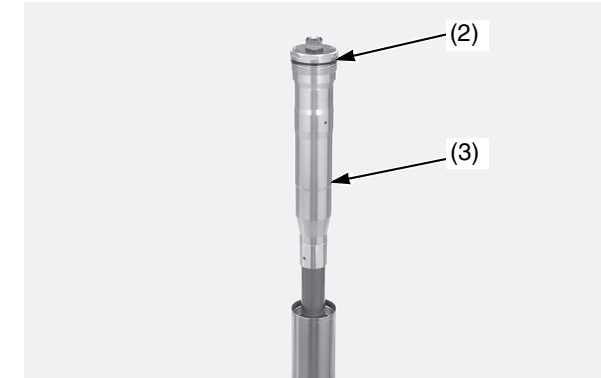


(2) O-ring (new)

(3) fork damper assembly

3. Pull up the fork outer tube (1) slowly and temporarily tighten the fork damper assembly (3) using the lock nut wrench (4).

• Lock nut wrench 07WMA-KZ30100

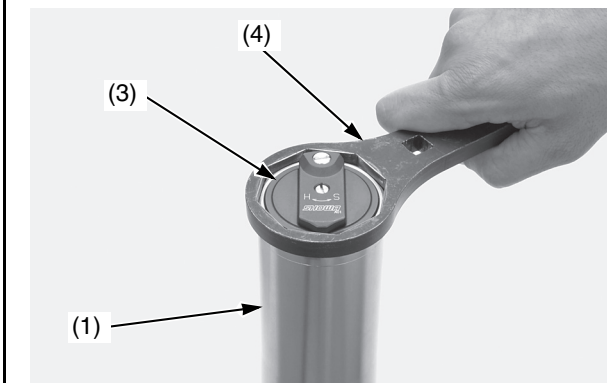

(1) outer tube


(3) fork damper assembly

(4) lock nut wrench

Suspension

Front Suspension Installation

1. Insert both fork legs into the fork clamps.
Tighten the fork bridge lower pinch bolts (1) to the specified torque:
20 N·m (2.0 kgf·m, 15 lbf·ft)

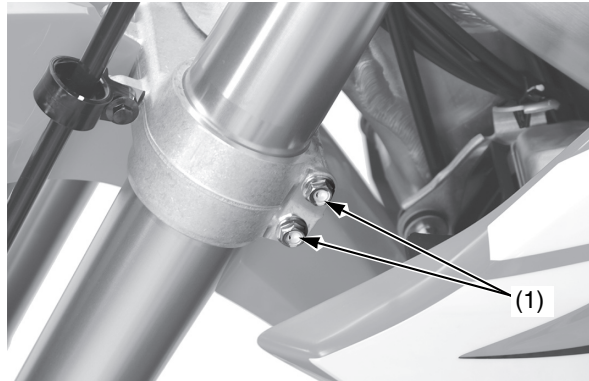

(1) fork bridge lower pinch bolts


2. Tighten the fork damper assembly (2) to the specified torque using the lock nut wrench (3):
Actual:
76 N·m (7.7 kgf·m, 56 lbf·ft)
Torque wrench scale reading:
69 N·m (7.0 kgf·m, 51 lbf·ft), using a 500 mm (20 in) long deflecting beam type torque wrench.

• Lock nut wrench 07WMA-KZ30100

When using the lock nut wrench, use a 500 mm (20 in) long deflecting beam type torque wrench.


The lock nut wrench increases the torque wrench's leverage, so the torque wrench reading will be less than the torque actually applied to the fork damper assembly.

3. Tighten the fork bolt assembly (4) to the specified torque:
30 N·m (3.1 kgf·m, 22 lbf·ft)

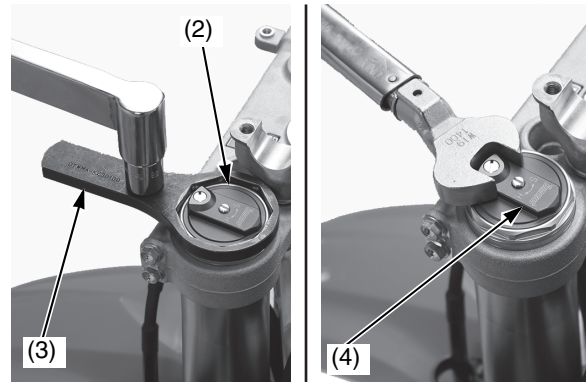


(2) fork damper assembly
(3) lock nut wrench
(4) fork bolt assembly

4. For ease of releasing air pressure after the forks are installed, loosen the fork bridge lower pinch bolts (1) and position the outer tubes so that the fork air pressure release screws (5) are in front of the compression damping adjuster (6).

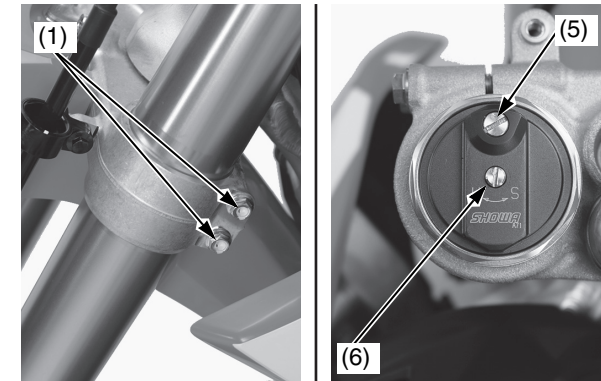

(1) fork bridge lower pinch bolts
(5) pressure release screw
(6) compression damping adjuster

5. Align the groove (7) in the outer tube with the top surface of the upper fork bridge (8).

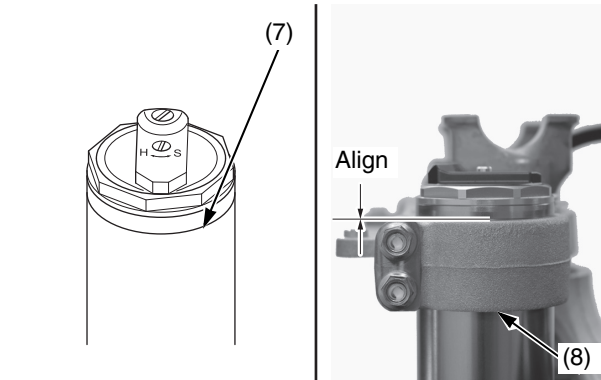

(7) groove


(8) upper fork bridge

Suspension

6. Tighten the fork bridge lower pinch bolts (1) to the specified torque:
20 N·m (2.0 kgf·m, 15 lbf·ft)
7. Tighten the fork bridge upper pinch bolts (9) to the specified torque:
22 N·m (2.2 kgf·m, 16 lbf·ft)


NOTICE

Over-tightening the pinch bolts can deform the outer tubes. Deformed outer tubes must be replaced.

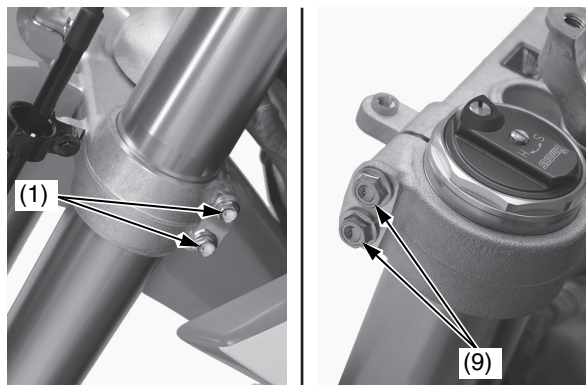

(1) fork bridge lower pinch bolts
(9) fork bridge upper pinch bolts


8. Clean the threads of the fork protector socket bolts (10) and axle holder thoroughly. Apply locking agent to the bolt threads. Install the fork protectors (11), fork protector socket bolts. Tighten the fork protector socket bolts to the specified torque:
7 N·m (0.7 kgf·m, 5.2 lbf·ft)

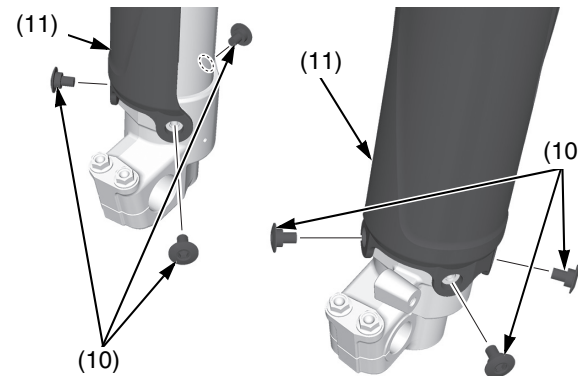

(10) fork protector socket bolts
(11) fork protectors

9. Align the brake caliper (12) and brake hose (13) with the left fork leg, making sure that the brake hose is not twisted. An improperly routed brake hose may rupture and cause a loss of braking efficiency.
10. Align the lower surface of the brake hose protector (14), stay A (15) and stay B (16), and assemble them. Install and tighten them to the left fork protector using the brake hose clamp bolts (17).

11. Clean the threads of the front brake caliper mounting bolts (18) and brake caliper thoroughly. Apply locking agent to the bolt threads. Install the brake caliper (12) on the axle holder and tighten the front brake caliper mounting bolts to the specified torque:
30 N·m (3.1 kgf·m, 22 lbf·ft)

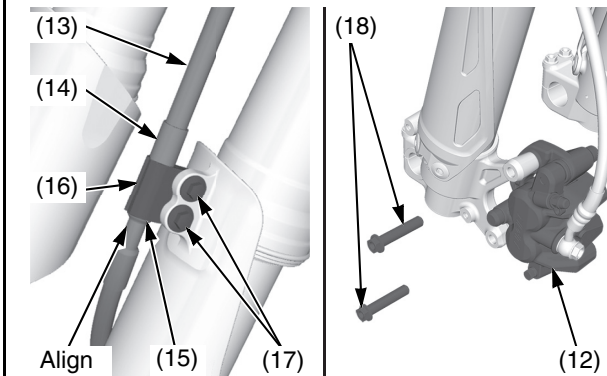


(12) brake caliper
(13) brake hose
(14) brake hose protector
(15) stay A
(16) stay B
(17) brake hose clamp bolts
(18) front brake caliper mounting bolts

(cont'd)

Suspension


12. Clean the surfaces where the axle and axle clamps contact each other.
Apply grease to each dust seal lips (19) of the front wheel.
Install the left side collar (20) and right side collar (21) into the wheel hub.

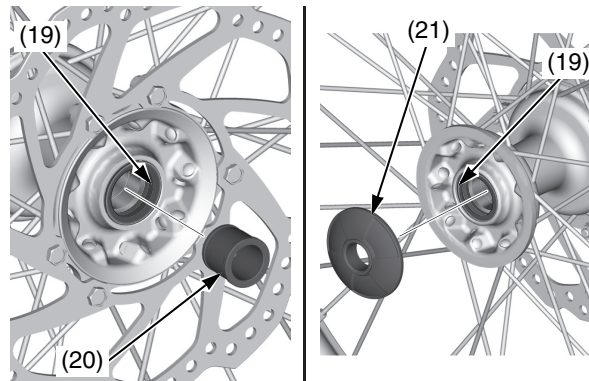

(19) dust seal lips
(20) left side collar

(21) right side collar

13. Install the front wheel between the fork legs while inserting the brake disc between the brake pads, being careful not to damage the pads.
14. Insert the front axle shaft (22) through the forks and wheel hub from the right side. Make sure that the front axle shaft is seated firmly onto the left fork leg clamp inner surface. Tighten the front axle nut (23) to the specified torque:
88 N·m (9.0 kgf·m, 65 lbf·ft)
Tighten the left axle pinch bolts (24) to the specified torque:
20 N·m (2.0 kgf·m, 15 lbf·ft)

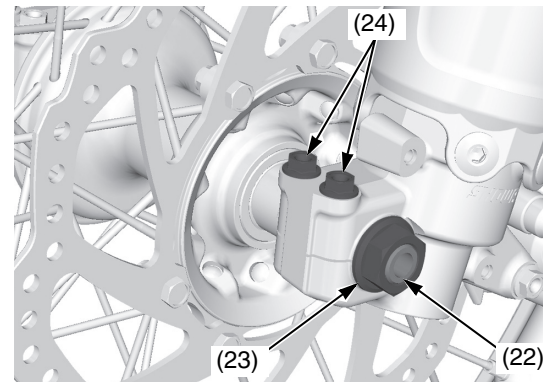


(22) front axle shaft
(23) front axle nut
(24) left axle pinch bolts

15. Install the handlebar (25), handlebar upper holders (26) and handlebar upper holder bolts (27) and tighten the handlebar upper holder bolts to the specified torque:
22 N·m (2.2 kgf·m, 16 lbf·ft)


NOTICE

- Install the handlebar upper holder with the punch marks (28) facing forward.
- Align the paint mark (29) on the handlebar with the end of the left handlebar holders.
- First, tighten the bolts on front side of the handlebar upper holders.

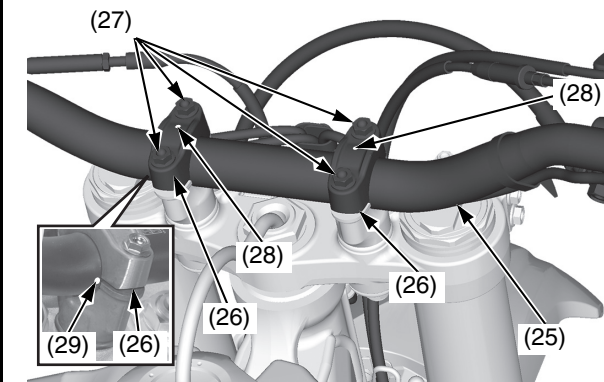

(25) handlebar
(26) handlebar upper holders
(27) handlebar upper holder bolts
(28) punch marks
(29) paint mark


16. Install the handlebar protector.
Install the number plate (30) by aligning its tab (31) with the slit (32) on the front fender. Install and tighten the bolts (33).
Route the number plate tab (34) around the handlebar (35) as shown. Make sure that the brake hose (13) is routed properly in front of the number plate.

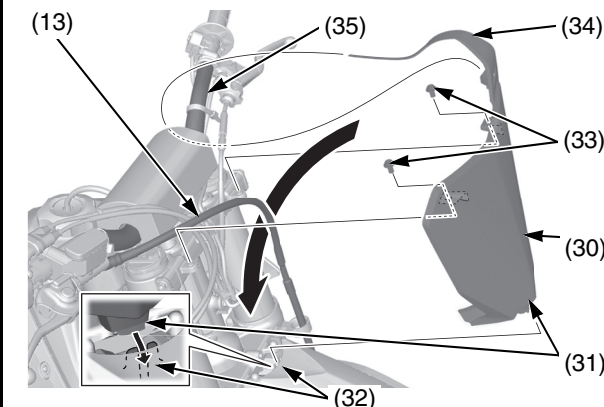


(13) brake hose
(30) number plate
(31) tab
(32) slit
(33) bolts
(34) number plate tab
(35) handlebar

Suspension

17. With the front brake applied, pump the fork up and down several times to seat the axle and check front brake operation.

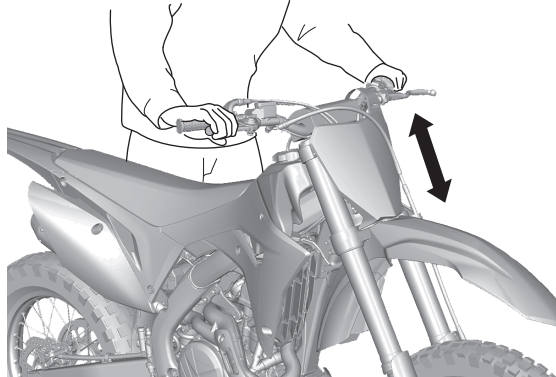

18. While keeping the forks parallel, alternately tighten the right axle pinch bolts (36) to the specified torque:
20 N·m (2.0 kgf·m, 15 lbf·ft)

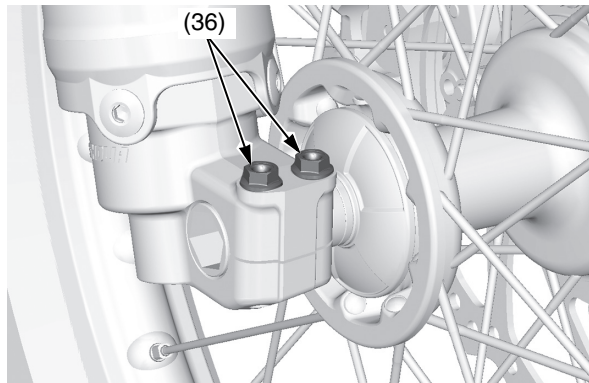


(36) right axle pinch bolts

NOTICE

To avoid damage when torquing the axle pinch bolts, be sure the axle is seated firmly onto the left fork leg clamp inner surface.

19. Install the disc cover (37) and tighten the disc cover socket bolts (38) to the specified torque:
13 N·m (1.3 kgf·m, 10 lbf·ft)

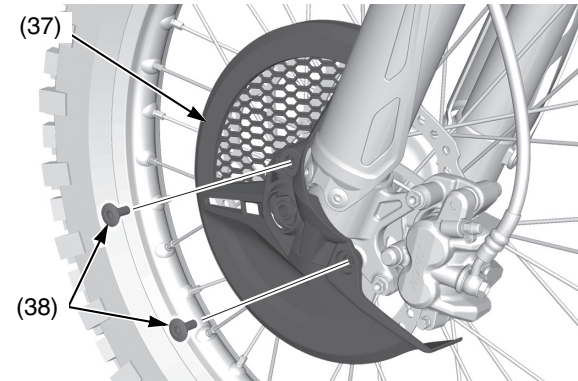


(37) disc cover

(38) disc cover socket bolts

20. Turn the compression damping (39) and rebound damping (40) adjuster screws back to their original settings.

Refer to *Front Suspension Damping* on page 146.

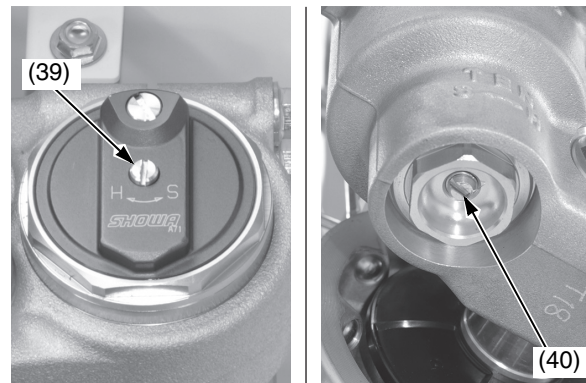

(39) compression damping adjuster

(40) rebound damping adjuster


Fork Damper Disassembly

1. Remove the front suspension (page 102).
2. Disassemble the fork outer tube (page 104).
3. Place the lower end (axle holder) (1) of the slider in a vise with a piece of wood or soft jaws to avoid damage.

NOTICE

Over-tightening the vise can damage the axle holder.

4. Loosen the fork centre bolt (2).

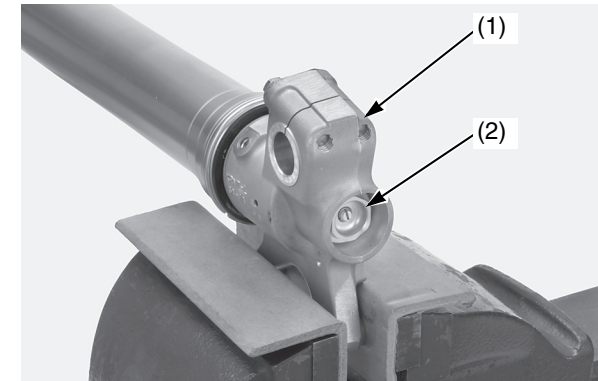

(1) axle holder

(2) fork centre bolt


5. Pull up the fork outer tube slowly and temporarily tighten the fork damper assembly (page 105). Push the outer tube until the fork centre bolt lock nut (3) is fully exposed and install the piston base (4) or mechanic's stopper tool between the axle holder (1) and fork centre bolt lock nut.

- Piston base 07958-2500001

(cont'd)

Suspension


6. Make the mechanic's stopper tool out of a thin piece of steel (2.0 mm (0.08 in) thick) as shown if you do not have a special tool.

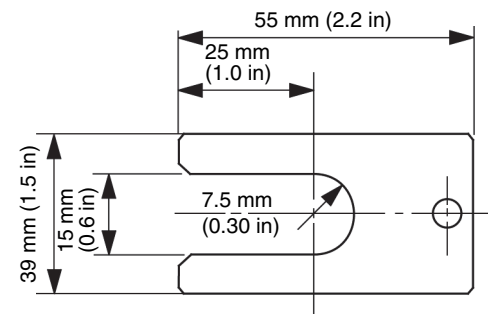

7. Hold the fork centre bolt lock nut (3) and remove the fork centre bolt (2) from the fork damper.

NOTICE

Do not remove the lock nut from the fork damper piston rod. If the lock nut is removed, the piston rod will fall in the fork damper and you may not reassemble the fork damper.

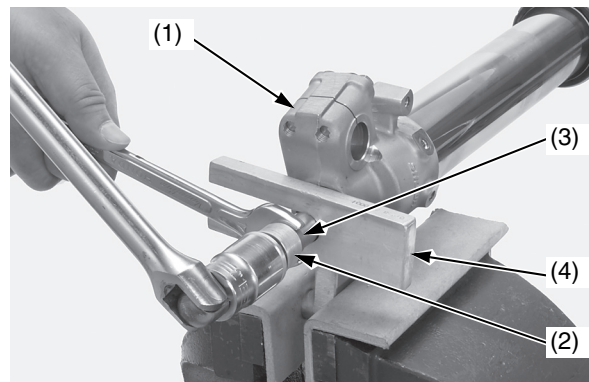


(1) axle holder (3) fork centre bolt lock nut
(2) fork centre bolt (4) piston base

8. Remove the push rod (5) from the fork damper.
9. Remove the piston base (4) or mechanic's stopper tool between the axle holder (1) and fork centre bolt lock nut (3) while pushing the fork outer tube.

NOTICE

Be careful not to damage the lock nut and fork centre bolt hole.

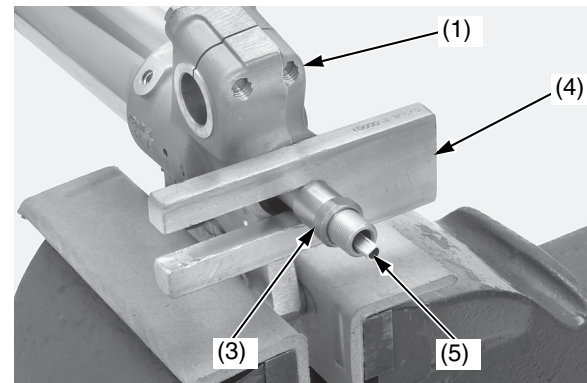


(1) axle holder (4) piston base
(3) fork centre bolt lock nut (5) push rod


10. Remove the fork damper assembly (6) from the fork assembly (7).
Remove the fork from the vise.
Remove the fork spring (8), spring seat collar (9) and back-up ring/seat stopper (10) from the fork damper assembly.

NOTICE

Do not attempt to separate the fork assembly and drop the axle holder out from the outer tube, which can damage the guide bushings (11). To avoid damage, hold both the outer tube and slider.

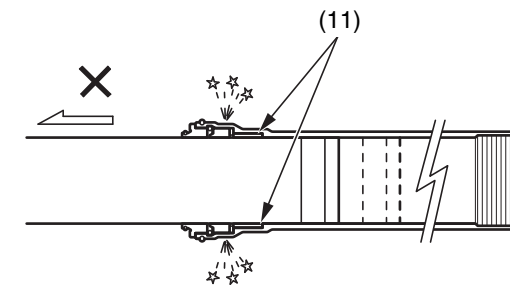

(11) guide bushing

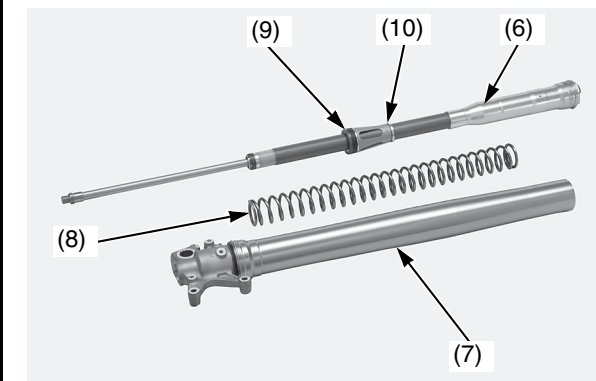

(6) fork damper assembly
(7) fork assembly
(8) fork spring
(9) spring seat collar
(10) back-up ring/seat stopper


Suspension

Damper Oil Change

1. Check the fork centre bolt lock nut (1) is installed on the fork damper piston rod (2) properly.


NOTICE

If the lock nut was removed, the piston rod will fall into the fork damper and you will not be able to reassemble the fork damper.

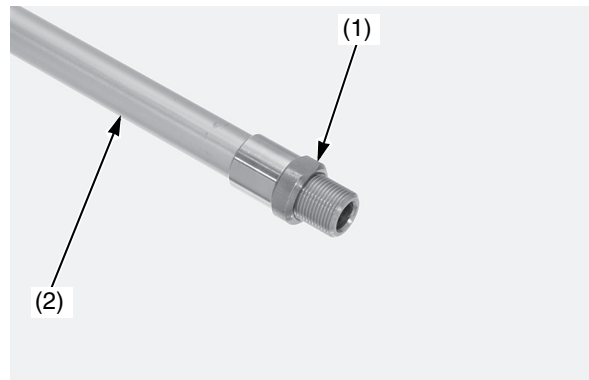

(1) fork centre bolt lock nut
(2) fork damper piston rod


2. Loosen the fork bolt assembly (3) while holding the fork damper assembly (4).

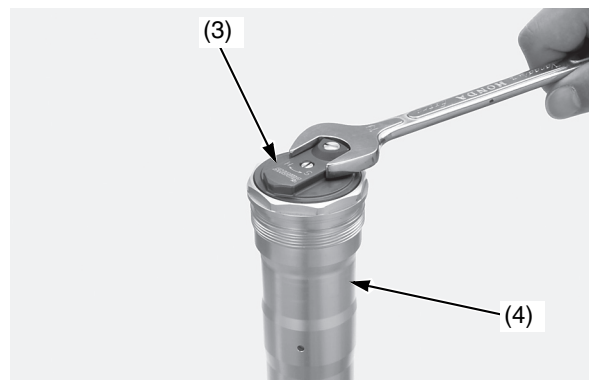

(3) fork bolt assembly (4) fork damper assembly


3. Remove the fork bolt assembly (3) from the fork damper threads and then pop it out by pumping the fork damper piston rod (2) slowly.
4. Remove the fork bolt assembly (3).

Be careful not to damage the fork bolt bushings (5). Do not disassemble the fork bolt assembly. Replace the fork bolt as an assembly if it is damaged.

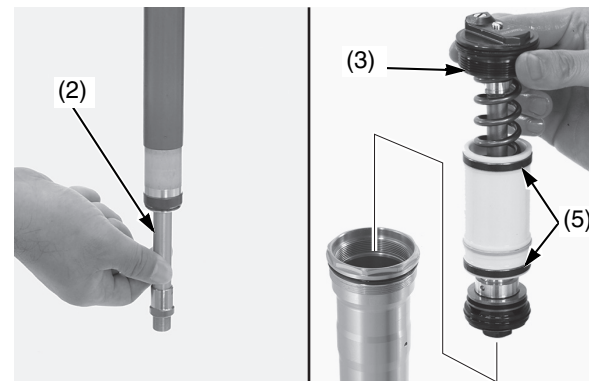


(2) fork damper piston rod (5) fork bolt bushings
(3) fork bolt assembly

5. Empty the fork oil from the fork damper assembly (4) by pumping the damper rod several times.

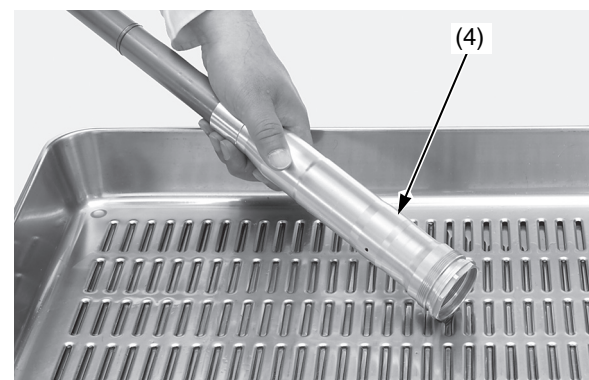


(4) fork damper assembly

6. Clean the fork bolt and fork damper assembly threads (6).

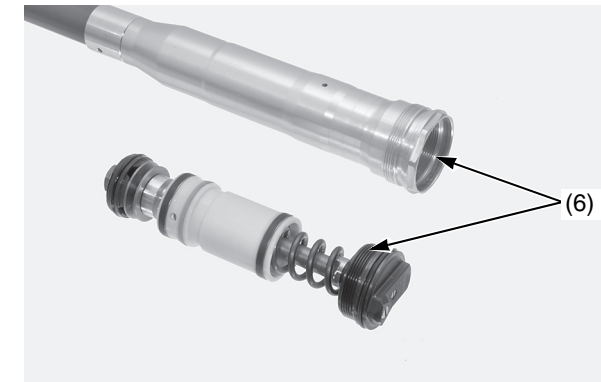

(6) fork bolt and fork damper assembly threads

7. Extend the fork damper piston rod to maximum length.
Pour the recommended fork oil into the fork damper assembly (4).
Recommended Oil:
Pro Honda HP Fork Oil, A15-00
Recommended Amount:
243 cm³ (8.2 US oz, 8.6 Imp oz)

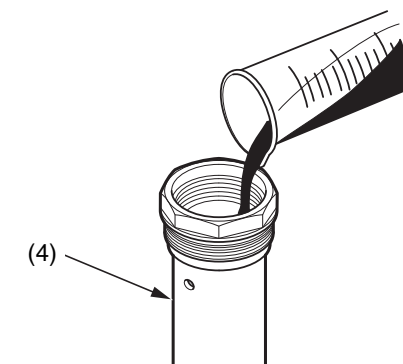


(4) fork damper assembly

(cont'd)


Suspension

8. Pump the fork damper piston rod (2) slowly several times to bleed the air from the fork damper assembly (4).

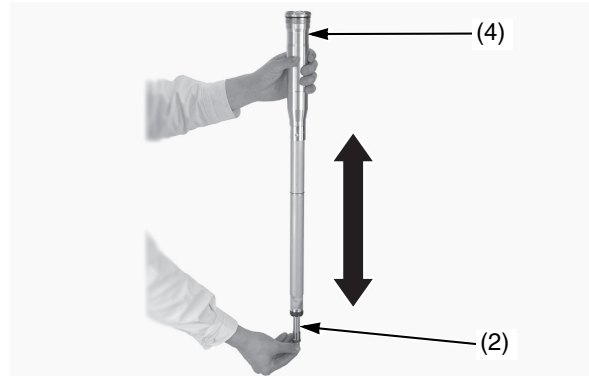

(2) fork damper piston rod
(4) fork damper assembly

9. Apply the recommended fork oil to the fork bolt bushings (5), new O-rings (7) and new piston ring (8) on the fork bolt assembly (3).

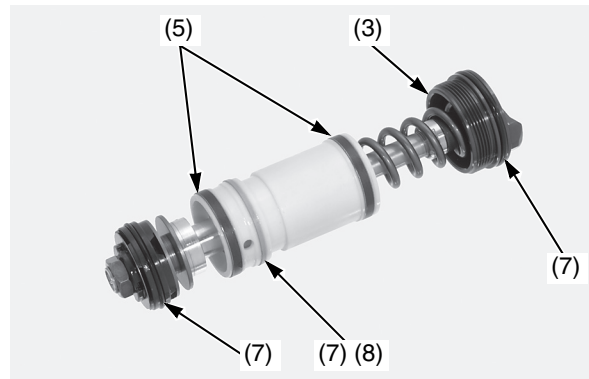


(3) fork bolt assembly
(5) fork bolt bushings
(7) O-rings (new)
(8) piston ring (new)

10. Cover the oil holes (9) of the fork damper assembly with a shop towel and compress the piston rod (2) all the way. Pull the piston rod out 20 mm (0.8 in) and install the fork bolt assembly (3) into the fork damper assembly (4). Push the fork bolt assembly in slowly while pulling the piston rod out.


NOTICE

Be careful not to damage the fork bolt piston ring.

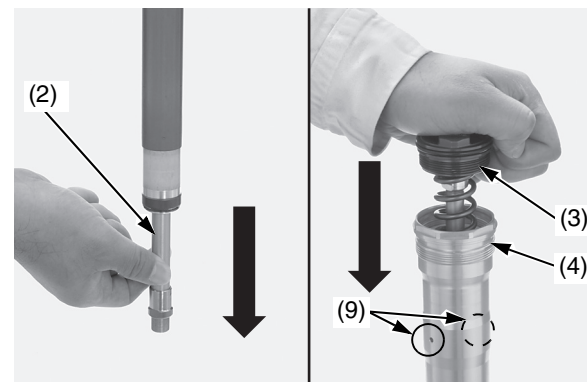


(2) fork damper piston rod
(3) fork bolt assembly
(4) fork damper assembly
(9) oil holes

11. Temporarily tighten the fork bolt assembly (3) to the fork damper assembly (4).

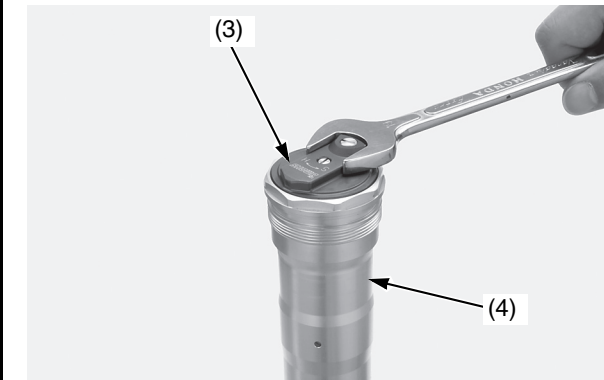

(3) fork bolt assembly
(4) fork damper assembly

12. Completely screw in the fork centre bolt lock nut (1) to the fork damper piston rod (2).

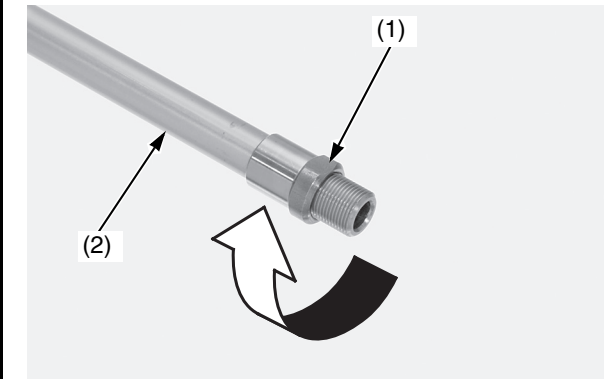

(1) fork centre bolt lock nut
(2) fork damper piston rod


13. Check the fork damper piston rod sliding surface and threads for damage.

Suspension

14. Hold the fork damper assembly (4) in an upright position and pump the fork damper piston rod (2) 100 mm (3.9 in) slowly, several times.


NOTICE

Be careful not to bend or damage the fork damper piston rod when the piston rod is stroked.

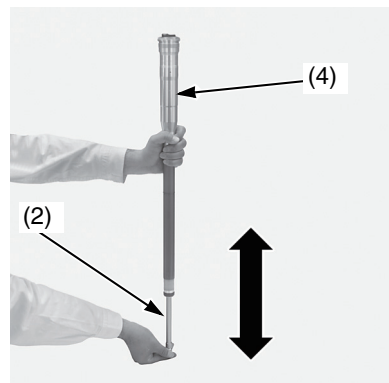

(2) fork damper piston rod (4) fork damper assembly


15. Cover the fork damper piston rod end with shop towel (10) to prevent fork damage. Cover the oil holes with shop towel to prevent blow out of fork oil. Blow the extra oil off from the fork damper assembly (4) by pumping the fork damper piston rod to full stroke.

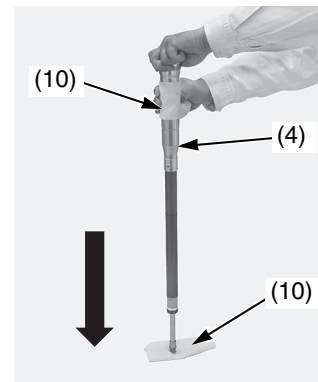

(4) fork damper assembly (10) shop towel

16. Drain the extra oil from the oil holes (9) of the fork damper assembly (4).

By doing above procedure, about 5 cm³ (0.2 US oz, 0.2 Imp oz) of fork oil will be drained from the fork damper through the oil hole and cause 243 cm³ (8.2 US oz, 8.6 Imp oz) of fork oil to be left in the fork damper assembly.

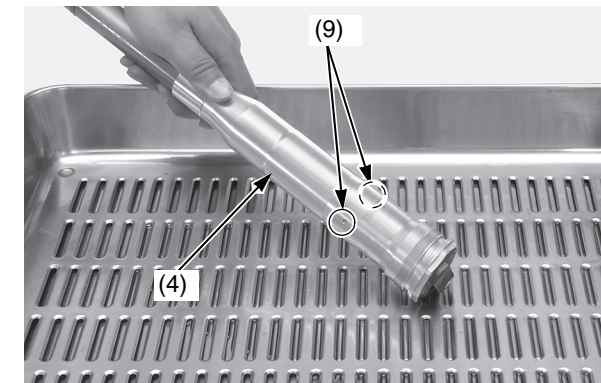

(4) fork damper assembly (9) oil holes

Pour the drained oil into a suitable container and dispose of it in an approved manner (page 168).


NOTICE

Improper disposal of drained fluids is harmful to the environment.

(cont'd)


Suspension

17. Blow out any oil from the oil hole (9) of the fork damper assembly (4) using compressed air.
Wipe off the oil completely from the fork damper.
18. If you cannot use compressed air, remove the fork air pressure release screws (11) from the fork bolt assembly.
Hold the fork damper upside down for 20 minutes and drain the fork oil.
Apply the recommended fork oil to a new O-ring (12), and then install a new O-rings on the air pressure release screws (11).
Tighten the air pressure release screws to the specified torque:
1.3 N·m (0.1 kgf·m, 1.0 lbf·ft)

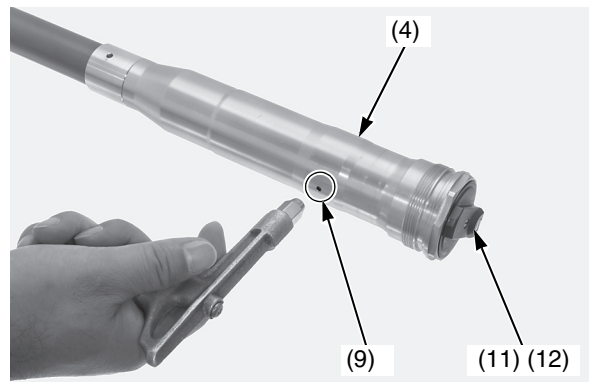

(4) fork damper assembly
(9) oil hole
(11) air pressure release screws
(12) O-rings (new)


19. Fully stroke the piston rod (2) by pushing down the fork damper assembly (4).
Check the piston rod for smooth operation.
If the piston rod operation is not smooth, check the piston rod for bends or damage.

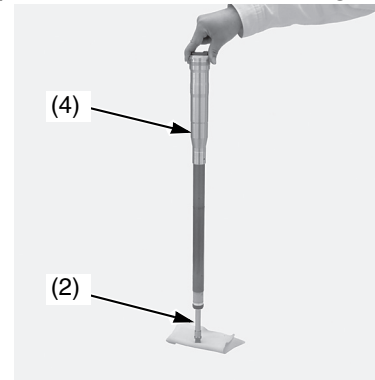

(2) fork damper piston rod
(4) fork damper assembly

Fork Damper Installation

1. Drain the fork oil from the fork assembly (1) by placing it upside down.
(About 5.4 cm³ (0.2 US oz, 0.2 Imp oz) of fork oil will be left in the fork assembly when it is left inverted for about 20 minutes at 20 °C/ 68 °F)

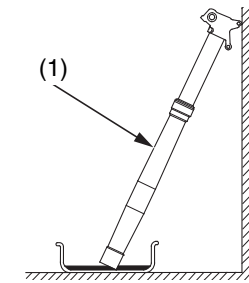

(1) fork assembly

To properly dispose of drained fluids, refer to *You & the Environment* on page 168.

NOTICE


Improper disposal of drained fluids is harmful to the environment.

Amount of fork oil left in the fork (without damper and spring) unit: cm³

minute °C/°F	5	10	20	35	55	85	145
30/86	6.5	5.7	5.2	4.5	4.1	3.7	3.3
20/68	6.7	6.2	5.4	4.7	4.4	3.8	3.5
10/50	7.3	6.4	5.6	5	4.6	4.2	3.8
0/32	8.6	8.2	7.9	7.6	7.3	6.8	6


Suspension

2. Tighten the fork centre bolt lock nut (2) fully and measure the thread length (A) as shown. Standard: 9 – 11 mm (0.35 – 0.43 in)
Wipe the oil completely off the fork damper.

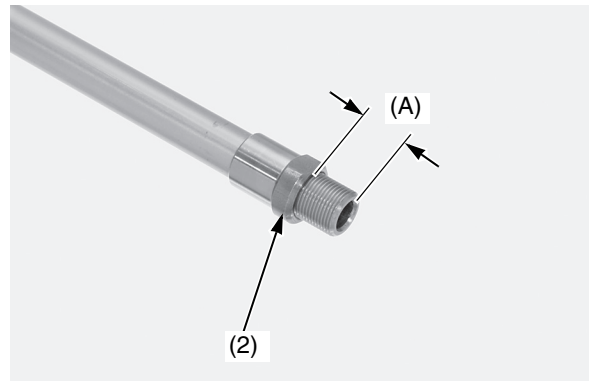


(2) fork centre bolt lock nut (A) thread length

3. Apply the recommended fork oil to the slider bushing (3). Install the seat stopper (4), back-up ring (5) and spring seat collar (6) to the fork damper (7). Make sure the black side of the back-up ring is seated on the seat stopper side.

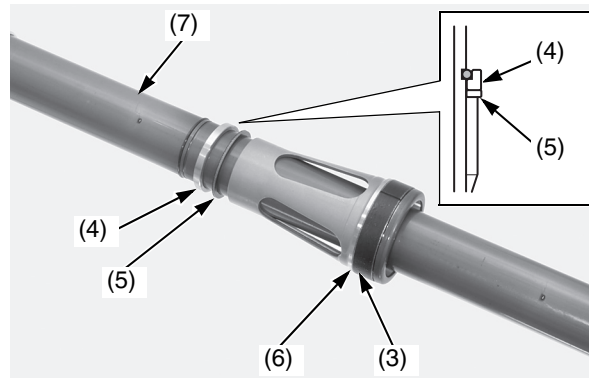

(3) slider bushing (4) seat stopper
(5) back-up ring (6) spring seat collar
(7) fork damper

4. Blow out the oil completely off the fork spring (8). Put the fork spring on the fork damper assembly (9). Install the spring/fork damper assembly into the fork assembly (1).

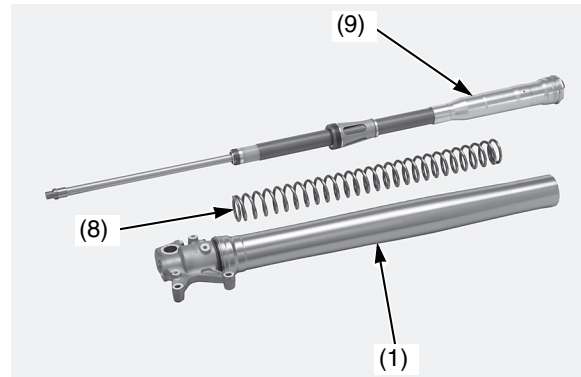


(1) fork assembly
(8) fork spring

(9) fork damper assembly

5. Temporarily tighten the fork damper assembly (9) to the outer tube (10) using the lock nut wrench (11).

• Lock nut wrench 07WMA-KZ30100

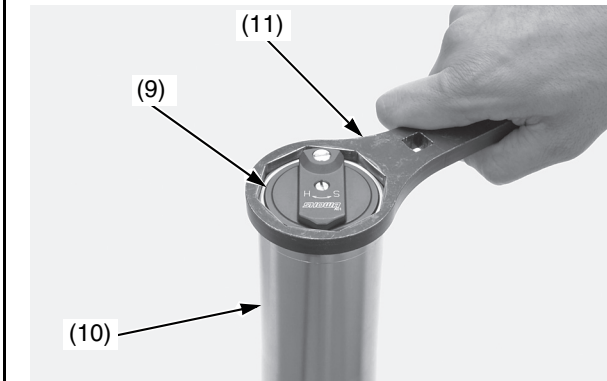

(9) fork damper assembly (11) lock nut wrench
(10) outer tube

6. Place the lower end (axle holder) (12) of the slider in a vise with a piece of wood or soft jaws to avoid damage.

NOTICE

Over-tightening the vise can damage the axle holder.

(cont'd)

Suspension


7. Push the outer tube until the fork centre bolt lock nut (2) is fully exposed and install the piston base (13) or mechanic's stopper tool between the axle holder (12) and fork centre bolt lock nut.

Measure the thread length again.

Standard: 9 – 11 mm (0.35 – 0.43 in)

- Piston base 07958-2500001


8. Install the push rod (14) into the piston rod (15) until it stops.

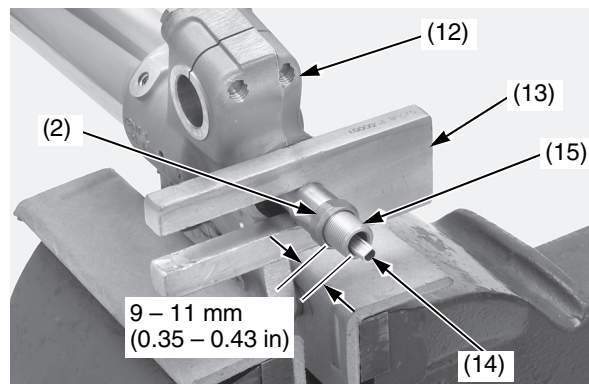

(2) fork centre bolt lock nut
(12) axle holder
(13) piston base
(14) push rod
(15) piston rod

9. Apply fork oil to new O-ring (16) and install it to the fork centre bolt (17). Install the fork centre bolt to the fork damper piston rod (15) by aligning the each flat-side of the fork centre bolt adjusting rod and the push rod (14).


Tighten the fork centre bolt fully by hand.

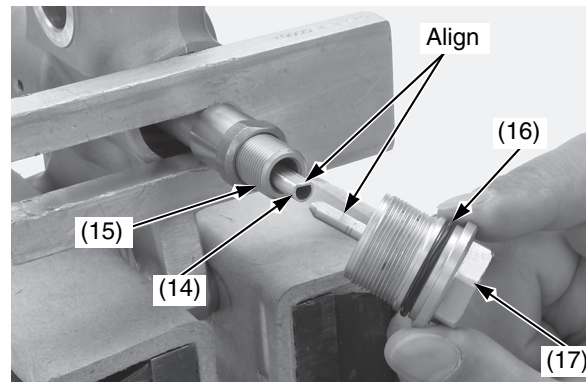

(14) push rod
(15) piston rod
(16) O-ring (new)
(17) fork centre bolt


10. Measure the clearance between the fork centre bolt lock nut (2) and fork centre bolt (17).
Standard: 1.5 – 2.0 mm (0.06 – 0.08 in)

If the clearance is out of specification, check the fork centre bolt lock nut and fork centre bolt installation.

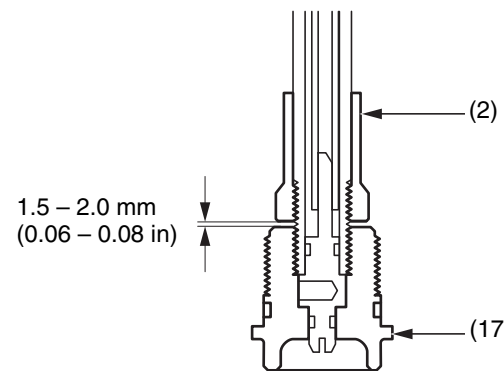

(2) fork centre bolt lock nut (17) fork centre bolt

11. Tighten the fork centre bolt lock nut (2) to the fork centre bolt (17) closely by hand. Tighten the fork centre bolt lock nut to the specified torque:
28 N·m (2.9 kgf·m, 21 lbf·ft)

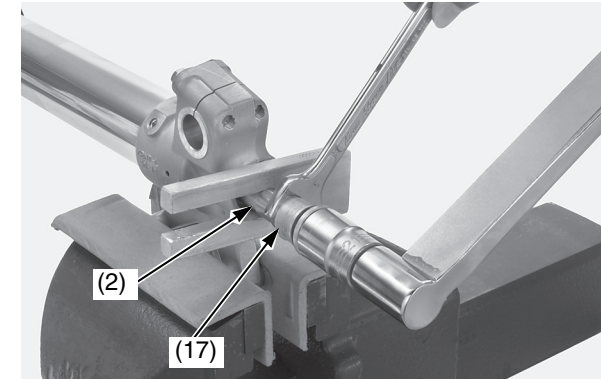


(2) fork centre bolt lock nut
(17) fork centre bolt

12. Apply locking agent to the fork centre bolt threads.

Remove the piston base or mechanic's stopper tool while pushing the outer tube.

Install the fork centre bolt (17) to the axle holder and tighten it to the specified torque:
69 N·m (7.0 kgf·m, 51 lbf·ft)

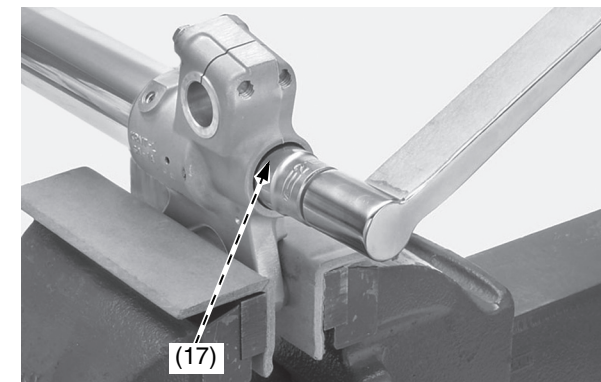


(17) fork centre bolt

Suspension

13. Remove the fork from the vice.
14. Measure the length between the axle holder and outer tube.
Standard: 312 ± 2 mm (12.3 ± 0.1 in)
15. Compare the length (18) at assembly and at disassembly. They should be the same length.

If the length at assembly is longer than at disassembly, check the fork centre bolt and fork centre bolt lock nut installation.

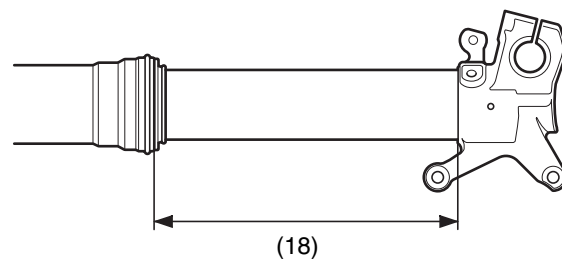

(18) length

16. Refilling the fork oil (page 105).
17. Install the front suspension (page 106).

Rear Suspension Inspection

The swingarm is controlled by one hydraulic shock absorber with an aluminium reservoir for oil and nitrogen gas pressure. The gas pressure in the reservoir is contained within a rubber bladder.


The rear suspension's spring pre-load and damping adjustments (compression and rebound) should be adjusted for the rider's weight and track conditions (pages 152, 154, 157).

Do not attempt to disassemble, service, or dispose of the damper; see your dealer.


The instructions found in this owner's manual are limited to adjustments of the shock assembly only.

- When your CRF is new, break it in for approximately 1 hour with the standard suspension settings before attempting to adjust the rear suspension.
- Refer to *Suspension Adjustment Guidelines* (page 157) for making all rebound and compression damping adjustments in one click or 1/12 turn increments. (Adjusting two or more clicks or turns at a time may cause you to pass over the best adjustment.)
Test ride after each adjustment.
- If the rear suspension is too stiff/soft, adjust it by turning all the compression and rebound adjusters according to the procedures described in page 157. After adjusting the adjusters simultaneously, suspension may be fine-tuned by turning one of the compression and rebound damping adjusters in one click or in 1/12 turn increments.
- If you have a problem finding an acceptable adjustment, return to the standard position and begin again.

1. Bounce the rear of the motorcycle up and down and check for smooth suspension action.

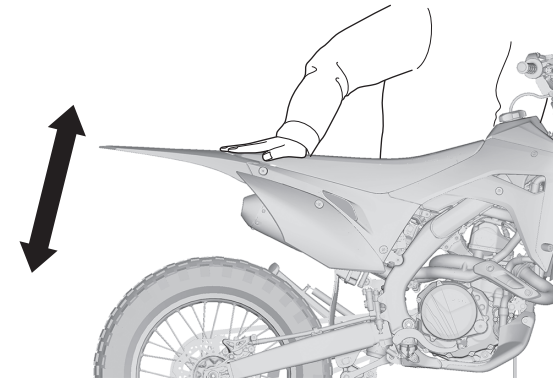

2. Remove the right and left mufflers (page 130), and subframe (page 43).
3. Check for a broken or collapsed spring.
4. Check the rear shock absorber (1) for a bent rod or oil leaks.

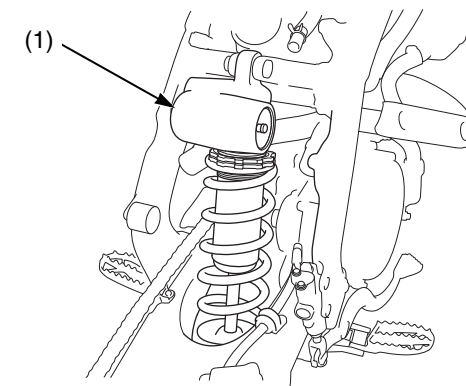

(1) rear shock absorber

5. Push the rear wheel sideways to check for worn or loose swingarm bearings. There should be no movement. If there is, have the bearings replaced by your dealer.

Brakes

Refer to *Important Safety Precautions* on page 27.

Both the front and rear brakes are the hydraulic disc type. As the brake pads wear, the brake fluid level will drop. A leak in the system will also cause the level to drop.


Frequently inspect the system to ensure there are no fluid leaks. Periodically inspect the brake fluid level and the brake pads for wear.

If the braking response of the front brake lever or rear brake pedal feels unusual, check the brake pads. If the brake pads are not worn beyond the recommended limit (page 121), there is probably air in the brake system.


Refer to an official Honda Shop Manual or see your dealer to have the air bled from the system.

Front Brake Lever Adjustment

1. Slide the front brake lever cover (1).

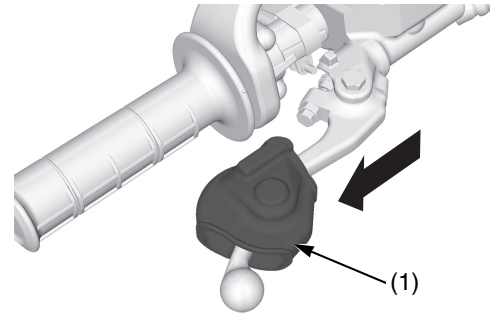

- (1) brake lever cover
2. Loosen the lock nut (2).
3. To position the front brake lever farther away from the handgrip, turn the adjuster (3) clockwise.
To position the front brake lever closer to the handgrip, turn the adjuster counterclockwise.
4. While holding the adjuster, tighten the lock nut to the specified torque:
5.9 N·m (0.6 kgf·m, 4.4 lbf·ft)
5. Apply silicone grease to the contacting areas of the adjuster and knocker arm (4).

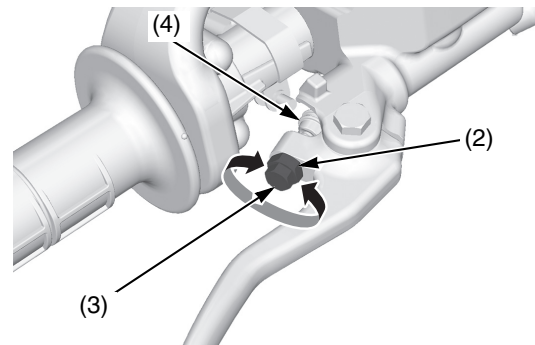

- (2) lock nut
- (3) adjuster


(4) knocker arm

6. Install the front brake lever cover in the reverse order.

Rear Brake Pedal Height

The rear brake pedal height should be approximately level with the right footpeg.

1. Loosen the lock nut (1) and turn the push rod (2) in direction (+) to raise the rear brake pedal (3) or in direction (–) to lower it.
2. Tighten the push rod lock nut to the specified torque at the desired pedal height.
5.9 N·m (0.6 kgf·m, 4.4 lbf·ft)

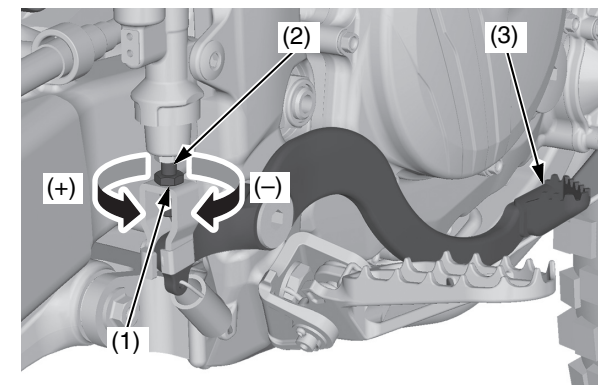


- (1) lock nut
- (2) push rod
- (3) rear brake pedal

(+) raise the pedal height
(–) lower the pedal height

Brakes

Fluid Level Inspection

Front Brake Fluid Level Check

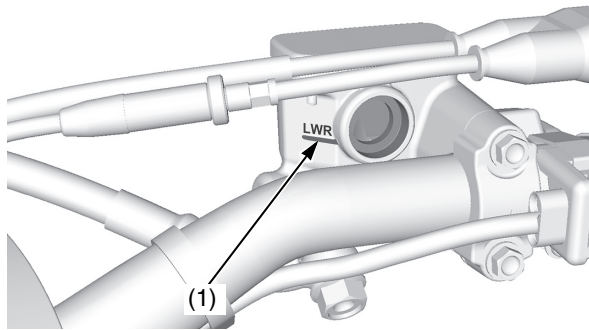

(1) LWR mark

With the motorcycle in an upright position, check the fluid level.

It should be above the LWR mark (1). If the level is at or below the LWR mark, check the brake pads for wear (page 121).

Worn brake pads should be replaced. If the pads are not worn, have your brake system inspected for leaks.


If the pulling distance for the front brake lever feels excessive, there is probably air in the brake system and it must be bled. Refer to an official Honda Shop Manual or see your dealer for brake bleeding.

Honda recommends using DOT 4 brake fluid from a sealed container, or an equivalent.

Other Checks:

Make sure there are no fluid leaks. Check for deterioration or cracks in the hoses and fittings.

Rear Brake Fluid Level Check

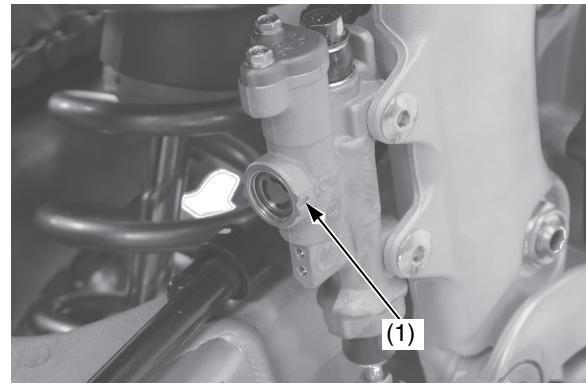

(1) LOWER mark

With the motorcycle in an upright position, check the fluid level.

It should be above the LOWER mark (1). If the level is at or below the LOWER mark, check the brake pads for wear (page 121).

Worn brake pads should be replaced. If the pads are not worn, have your brake system inspected for leaks.

If the travel for the rear brake pedal feels excessive, there is probably air in the brake system and it must be bled. Refer to an official Honda Shop Manual or see your dealer for brake bleeding.

Honda recommends using DOT 4 brake fluid from a sealed container, or an equivalent.

Other Checks:

Make sure there are no fluid leaks. Check for deterioration or cracks in the hoses and fittings.


Brakes

Adding Front Brake Fluid

NOTICE

Spilled brake fluid will severely damage painted surfaces. It is also harmful to some rubber parts. Be careful whenever you remove the reservoir cap; make sure the reservoir is horizontal first.

- Always use fresh DOT 4 brake fluid from a sealed container when servicing the system. Do not mix different types of fluid, they may not be compatible.
 - The recommended brake fluid is DOT 4 brake fluid or an equivalent.
1. Remove the front brake reservoir cap screws (1), reservoir cap (2) and diaphragm (3).
 2. Fill the reservoir with DOT 4 brake fluid to the upper level mark (4). Do not overfill.
 3. Install the diaphragm and reservoir cap.
 4. Tighten the front brake reservoir cap screws to the specified torque:
1.0 N·m (0.1 kgf·m, 0.7 lbf·ft)

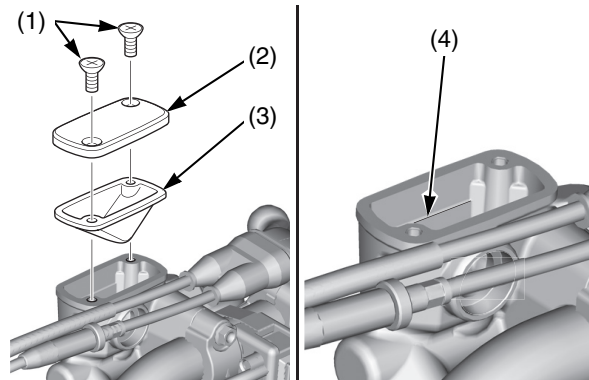


- (1) front brake reservoir cap screws
(2) reservoir cap
(3) diaphragm
(4) upper level mark

Adding Rear Brake Fluid

NOTICE

Spilled brake fluid will severely damage painted surfaces. It is also harmful to some rubber parts. Be careful whenever you remove the reservoir cap; make sure the reservoir is horizontal first.

- Always use fresh DOT 4 brake fluid from a sealed container when servicing the system. Do not mix different types of fluid, they may not be compatible.
 - The recommended brake fluid is DOT 4 brake fluid or an equivalent.
1. Remove the rear brake reservoir cap bolts (1), reservoir cap (2), set plate (3) and diaphragm (4).
 2. Fill the reservoir with DOT 4 brake fluid to the upper level mark (5). Do not overfill.

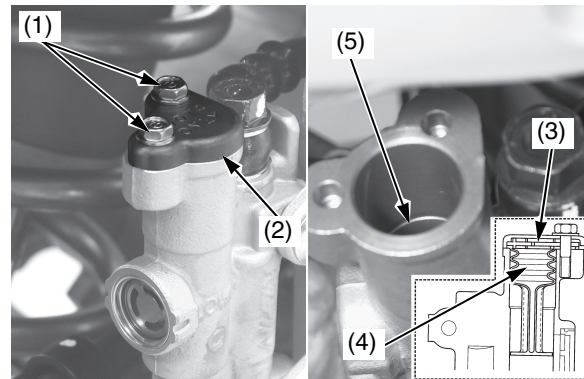

- (1) rear brake reservoir cap bolts
(2) reservoir cap
(3) set plate
(4) diaphragm
(5) upper level mark

3. Install the diaphragm, set plate and reservoir cap.
4. Tighten the rear brake reservoir cap bolts to the specified torque:
1.0 N·m (0.1 kgf·m, 0.7 lbf·ft)


Brakes

Brake Pad Wear

Brake pad wear depends on the severity of usage and track conditions. (Generally, the pads will wear faster with wet and dirty track conditions.) Inspect the brake pads at each regular maintenance interval (pages 29, 30).

Front Brake Pads


Inspect the brake pads (1) through the front wheel to determine the brake pad wear. If either brake pad is worn anywhere to a thickness of 1.0 mm (0.04 in), both brake pads must be replaced.

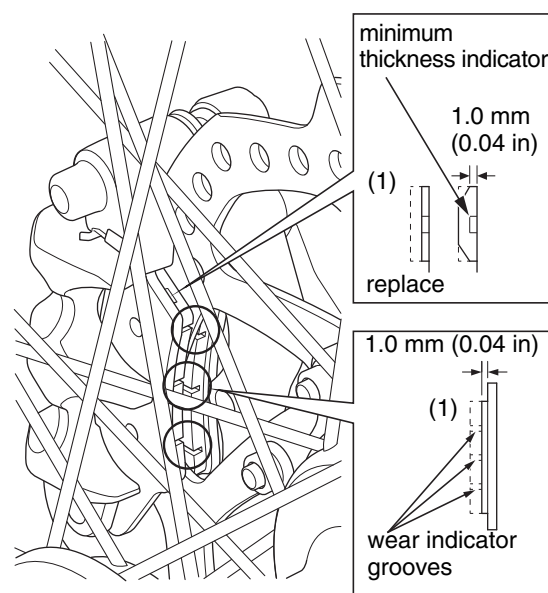

(1) brake pads

Rear Brake Pads

Inspect the brake pads (1) from the rear side of the caliper (2) to determine the brake pad wear. If either brake pad is worn anywhere to a thickness of 1.0 mm (0.04 in), both brake pads must be replaced.

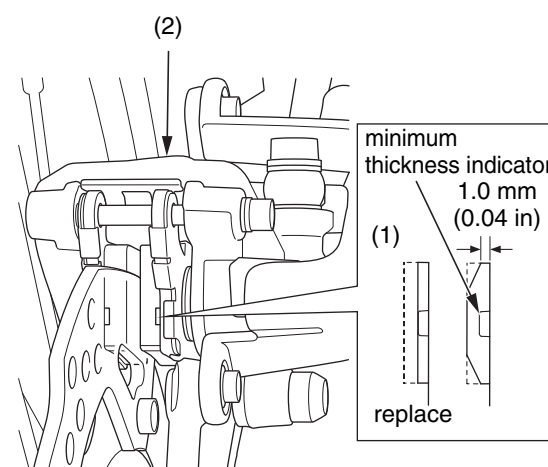

(1) brake pads
(2) rear brake caliper

Other Inspections

Check that the front brake lever and rear brake pedal assemblies are positioned properly (page 118) and the securing bolts are tight.

Make sure there are no fluid leaks. Check for deterioration or cracks in the hoses and fittings.


Wheels

Refer to *Important Safety Precautions* on page 27.

Keeping the wheels true (round) and maintaining correct spoke tension are critical to safe motorcycle operation. During the first few rides, spokes will loosen more rapidly due to the initial seating of the parts. Excessively loose spokes may result in instability at high speeds and the possible loss of control. It's also important that the rim locks are secure to prevent tyre slippage.

Wheel Rims & Spokes

1. Inspect the wheel rims (1) and spokes (2) for damage.
2. Tighten, any loose spokes and rim locks (3) to the specified torque:
Spokes: 3.7 N·m (0.4 kgf·m, 2.7 lbf·ft)
Rim Locks: 12 N·m (1.2 kgf·m, 9 lbf·ft)
3. Check wheel rim runout. If runout is noticeable, see an official Honda Shop Manual for inspection instructions.

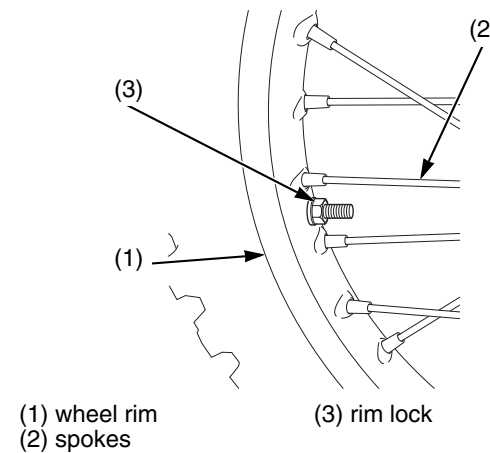

Axles & Wheel Bearings

See an official Honda Shop Manual for inspection information:

1. Check the axle shaft for runout.
2. Check the condition of the wheel bearings.

Tyres & Tubes

Refer to *Important Safety Precautions* on page 27.

To safely operate your CRF, the tyres must be the proper type (off-road) and size, in good condition with adequate tread, and correctly inflated.

WARNING

Using tyres that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.

Follow all instructions in this owner's manual regarding tyre inflation and maintenance.

The following pages give detailed information on how and when to check your air pressure, how to inspect your tyres for wear and damage, and our recommendations on tyre repair and replacement.

Air Pressure

Properly inflated tyres provide the best combination of handling, tread life, and riding comfort. Generally, underinflated tyres wear unevenly, adversely affect handling, and are more likely to fail from being overheated. Underinflated tyres can also cause wheel damage on hard terrain. Overinflated tyres make your CRF ride harshly, are more prone to damage from surface hazards, and wear unevenly.

Make sure the valve stem caps are secure. If necessary, install new caps.

Always check air pressure when your tyres are “cold.” If you check air pressure when your tyres are “warm” — even if your CRF has only been ridden for a few miles — the readings will be higher. If you let air out of warm tyres to match the recommended cold pressures, the tyres will be underinflated.

The correct “cold” tyre pressures are:

Front	100 kPa (1.0 kgf/cm ² , 15 psi)
Rear	100 kPa (1.0 kgf/cm ² , 15 psi)

If you decide to adjust tyre pressures for a particular riding condition, make changes a little at a time.

Inspection

Take time to inspect your tyres and wheels before you ride.

- Inspect carefully for bumps or bulges in the side of the tyre or the tread. Replace any tyre that has a bump or bulge.
- Look closely for cuts, slits, or cracks in the tyres. Replace a tyre if you can see fabric or cord.
- Check for rocks or other objects embedded in the tyre or tread. Remove any objects.
- Check the position of both valve stems. A tilted valve stem indicates the tube is slipping inside the tyre or the tyre is slipping on the rim.

Tube Replacement

If a tube is punctured or damaged, you should replace it as soon as possible. A repaired tube may not have the same reliability as a new one, and it may fail while you are riding.

Use a replacement tube equivalent to the original.

Tyres & Tubes

Tyre Replacement

The tyres that came on your CRF were designed to provide a good combination of handling, braking, durability, and comfort across a broad range of riding conditions.

⚠ WARNING

Installing improper tyres on your motorcycle can affect handling and stability. This can cause a crash in which you can be seriously hurt or killed.

Always use the size and type of tyres recommended in this owner's manual.

(CRF450RX)

Front	90/90-21 54M	
	DUNLOP	AT81F
Rear	120/90-18 65M	
	DUNLOP	AT81
Type	bias-ply, tube	

(CRF450R)


Front	80/100-21 51M	
	DUNLOP	MX3SF
Rear	120/80-19 63M	
	DUNLOP	MX3S
Type	bias-ply, tube	

- Use a replacement tyre equivalent to the original.
- Replace the tube any time you replace a tyre. The old tube will probably be stretched and, if installed in a new tyre, could fail.

Side Stand (CRF450RX)

Refer to *Important Safety Precautions* on page 27.

1. Check the side stand spring (1) for damage and loss of tension.
2. Check the side stand assembly for freedom of movement.

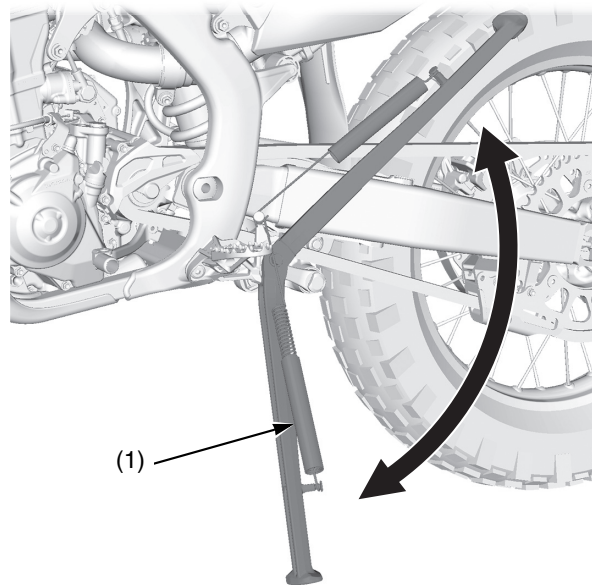

(1) side stand spring

If the side stand is stiff or squeaky, clean the pivot area and lubricate the pivot bolt with molybdenum grease.

Drive Chain

Refer to *Important Safety Precautions* on page 27.


The service life of the chain depends on proper lubrication and adjustment. Poor maintenance can cause premature wear or damage to the drive chain or sprockets.

When the motorcycle is ridden on unusually dusty or muddy tracks, more frequent maintenance will be necessary.

Before servicing your drive chain, turn the engine OFF and check that your transmission is in neutral.

Inspection

1. Turn the engine off, raise the rear wheel off the ground by placing an optional workstand or equivalent support under the engine and shift the transmission into neutral.
2. Check the drive chain slack (1) in the upper drive chain run midway between the drive sprocket (2) and driven sprocket (3). Drive chain slack should allow the following vertical movement by hand:
35 – 45 mm (1.4 – 1.8 in)

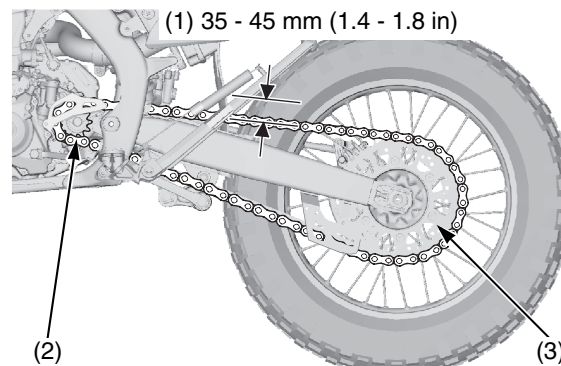

(1) drive chain slack (2) drive sprocket (3) driven sprocket

3. Check drive chain slack at several points along the chain. The slack should remain constant. If it isn't, some links may be kinked and binding. Lubricating the chain will often eliminate binding and kinking.

NOTICE


Excessive chain slack may allow the drive chain to damage the engine cases.

4. Inspect the drive chain for:
 - damaged rollers
 - loose pins
 - dry or rusted links
 - kinked or binding links
 - excessive wear

Replace the drive chain (pages 128, 129) if it has damaged rollers, loose pins, or kinks that cannot be free. Lubricate the drive chain (page 127) if it appears dry or shows signs of rust. Lubricate any kinked or binding links and work them free. Adjust chain slack if needed (page 127).


Drive Chain Sliders

1. Check the chain slider (1) for wear. Replace it if below the service limit.
SERVICE LIMIT:
upper side: 5 mm (0.2 in)
lower side: 2.5 mm (0.10 in)

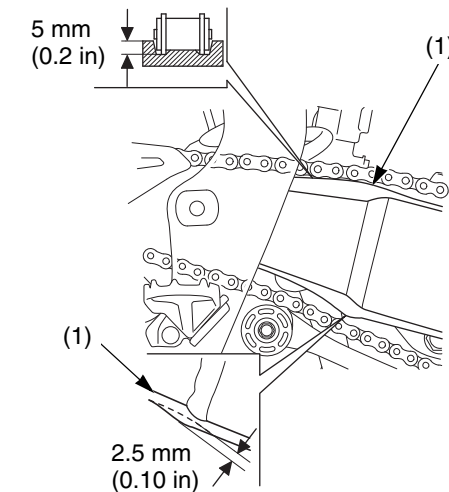

(1) chain slider

2. Check the chain guide slider (2) for wear. Replace the guide slider if it is worn to the bottom of the wear limit (3).

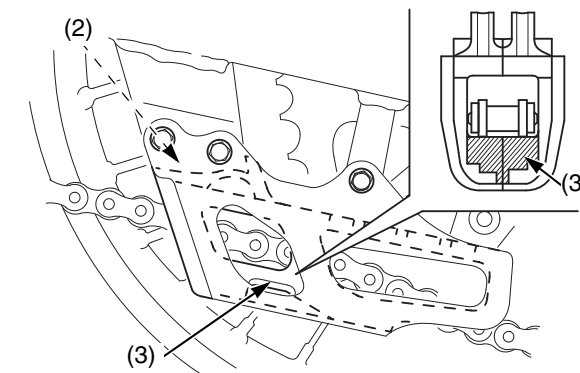

(2) chain guide slider (3) wear limit

Drive Chain

Drive Chain Rollers

Check the upper drive chain roller (1) and lower drive chain roller (2) for wear or damage. Measure the diameter of the drive chain rollers and replace them if below the service limit.

Service Limit:

Upper roller: 31 mm (1.2 in)

Lower roller: 31 mm (1.2 in)

Replace the roller if necessary as follows.


Install the upper drive chain roller (Green) with the “→” mark (3) facing toward the bracket and lower drive chain roller (Black) with the “→” mark facing toward outside.

Clean the threads of the lower drive chain roller bolt and apply locking agent to the threads.

Install new a drive chain roller bolt (4) and nut (5).

Tighten the drive chain roller bolt and nut to the specified torque:


12 N·m (1.2 kgf·m, 9 lbf·ft)

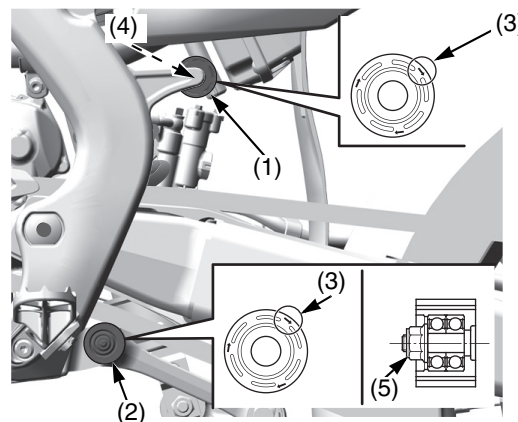

- (1) upper drive chain roller (Green)
- (2) lower drive chain roller (Black)
- (3) “→” mark
- (4) drive chain roller bolt (new)
- (5) drive chain roller nut

Adjustment

1. Loosen the rear axle nut (1).
2. Loosen the chain adjuster lock nuts (2) and turn the adjusting bolts (3) counterclockwise to decrease slack or clockwise to increase slack. Align the index marks (4) of the axle plates (5) with the same reference marks (6) on both sides of the swingarm.

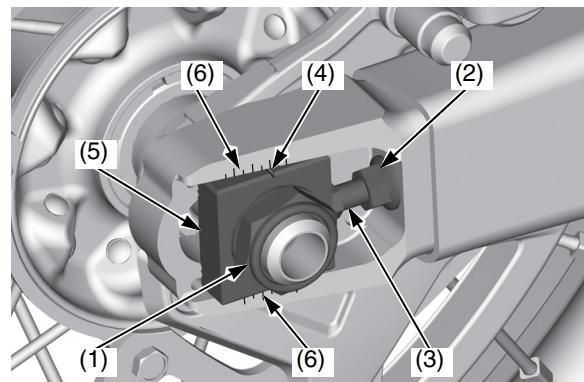

- (1) rear axle nut
- (2) chain adjuster lock nuts
- (3) adjusting bolts
- (4) index marks
- (5) axle plates
- (6) reference marks

3. Tighten the rear axle nut to the specified torque:
128 N·m (13.1 kgf·m, 94 lbf·ft)
4. Recheck chain slack and adjust as necessary.
5. Turn the adjusting bolt counterclockwise until it touches the axle plates lightly. Then tighten the chain adjuster lock nuts to the specified torque while holding the adjusting bolts with a wrench.
27 N·m (2.8 kgf·m, 20 lbf·ft)

Lubrication

(CRF450RX)


Lubricate the drive chain with drive chain lubricant designed specifically for use with O-ring chains. Wipe off the excess chain lubricant.

Commercial chain lubricants not designed for motorcycle drive chains may contain solvents which could damage the O-rings.

(CRF450R)

Commercially prepared drive chain lubricants may be purchased at most motorcycle shops and should be used in preference to motor oil. Pro Honda HP Chain Lube or an equivalent is recommended.

Saturate each chain joint so that the lubricant penetrates the space between adjacent surfaces of the link plates and rollers.

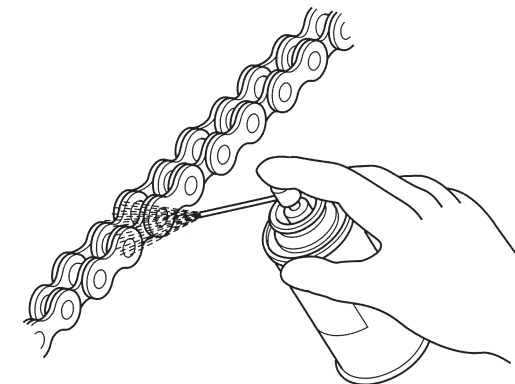

Drive Chain


Removal, Cleaning & Replacement (CRF450RX)

For maximum service life, the drive chain should be cleaned, lubricated, and adjusted before each outing. Your CRF has an endless (riveted master link) type chain. It should only be removed or replaced by your dealer.

The O-rings can be damaged by steam cleaning, high pressure washers, and certain solvents.


1. Clean the side surfaces of the chain with a dry cloth. Use a high flash point solvent such as kerosene or Honda chain cleaner – not petrol. Do not brush the rubber O-rings. Brushing will damage them. Use of a solvent may also damage the O-rings.
2. Replace the drive chain if it has damaged rollers, loose fitting links, damaged O-rings, or otherwise appears unserviceable.
3. Measure the drive chain plate (1). If the height of any of the drive chain plates is less than 13.3 mm (0.52 in), the drive chain must be replaced.

Chain:
Size/link: RK520EXU/114LE

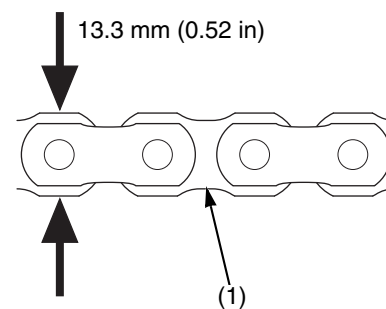

(1) drive chain plate (inner)

4. Inspect the sprocket teeth for wear or damage. We recommend replacing the sprocket whenever a new chain is installed. Both chain and sprockets must be in good condition, or the new replacement chain or sprocket(s) will wear rapidly. Excessively worn sprocket teeth have a hooked, worn appearance. Replace any sprocket which is damaged or excessively worn.

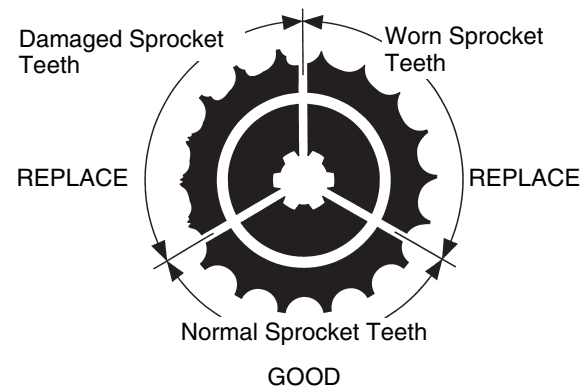

NOTICE

Use of a new chain with worn sprockets will cause rapid chain wear.

Drive Chain


Removal, Cleaning & Replacement (CRF450R)

For maximum service life, the drive chain should be cleaned, lubricated, and adjusted before each outing.

1. Remove the master link retaining clip (1) with pliers.

Do not bend or twist the clip.

2. Remove the master link (2) and link plate (3). Remove the drive chain.

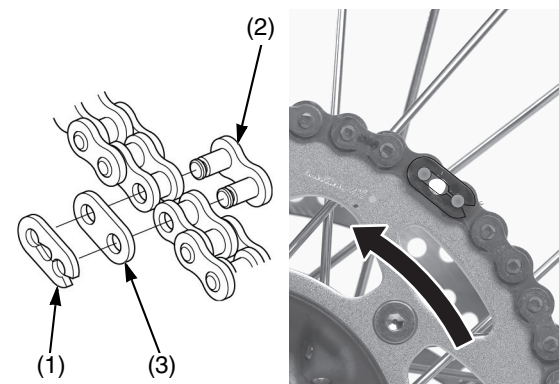


(1) master link retaining clip (3) link plate
(2) master link

3. Clean the drive chain in high flash-point solvent and allow it to dry.
4. Inspect the drive chain for possible wear or damage. Replace the drive chain if it has damaged rollers, loose fitting links, or otherwise appears unserviceable.

Chain:
Size/link: RK520TXZ/114RJ

5. Inspect the sprocket teeth for wear or damage. We recommend replacing the sprocket whenever a new chain is installed. Both chain and sprockets must be in good condition, or the new replacement chain or sprocket(s) will wear rapidly. Excessively worn sprocket teeth have a hooked, worn appearance. Replace any sprocket which is damaged or excessively worn.

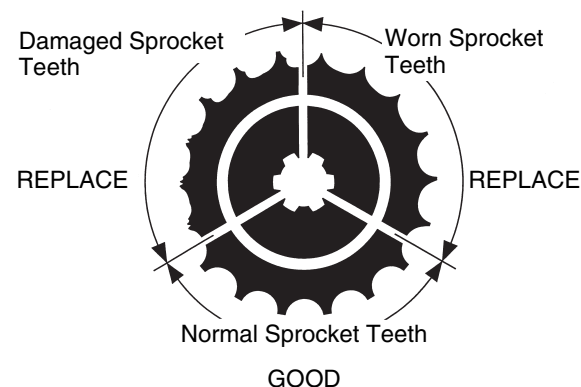

NOTICE


Use of a new chain with worn sprockets will cause rapid chain wear.

6. Install the chain.
7. Measure a section of the drive chain to determine whether the chain is worn beyond its service limit. Put the transmission in gear, and then turn the rear wheel forward until the lower section of the chain is pulled taut. With the chain held taut and any kinked joints straightened, measure the distance between a span of 17 pins, from pin centre to pin centre.

If the measurement exceeds the service limit, replace the chain. After the chain is measured, shift the transmission into neutral again before proceeding with inspection and service.

Service limit: 259.0 mm (10.20 in)

MEASURE A SPAN OF 17 PINS (16 PITCHES)



8. Lubricate the drive chain (page 127).
9. Pass the chain over the sprockets and join the ends of the chain with the master link. For ease of assembly, hold the chain ends against adjacent driven sprocket teeth while inserting the master link. Install the master link retaining clip so that the closed end of the clip will face the direction of forward wheel rotation.
10. Recheck chain slack and adjust as necessary.

More About Drive Chain (CRF450R)

- The master link is the most critical element of drive chain security. Master links are reusable, as long as they remain in excellent condition. We recommend installing a new master link retaining clip when the drive chain is reassembled.
- You may find it easier to install a new chain by connecting it to the old chain with a master link and pulling the old chain to position the new chain on the sprockets.

Exhaust Pipe/Muffler

Refer to *Important Safety Precautions* on page 27.

Exhaust Pipe/Muffler Inspection

Check the mounting bolts and exhaust pipe joint nuts for tightness.


Check the exhaust pipe and mufflers for cracks or deformation.

A damaged exhaust pipe and mufflers may reduce engine performance.

Muffler Removal


1. Remove the seat (page 38).
2. Remove the side covers (1) and air cleaner housing covers (2) by removing the bolts (3).

The procedure is the same for the both right and left side.

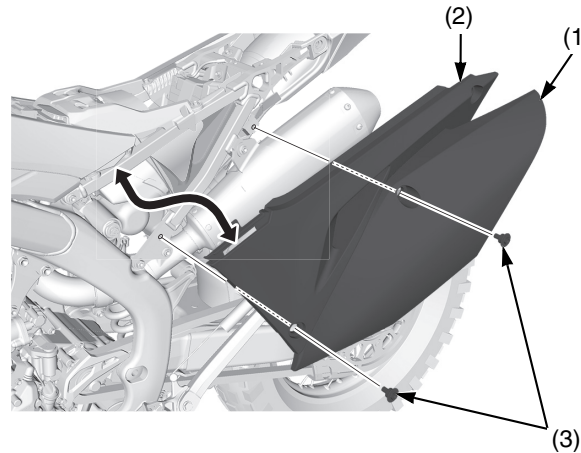


- (1) side covers
(2) air cleaner housing covers
(3) bolts

3. Loosen the right muffler clamp bolt (4).

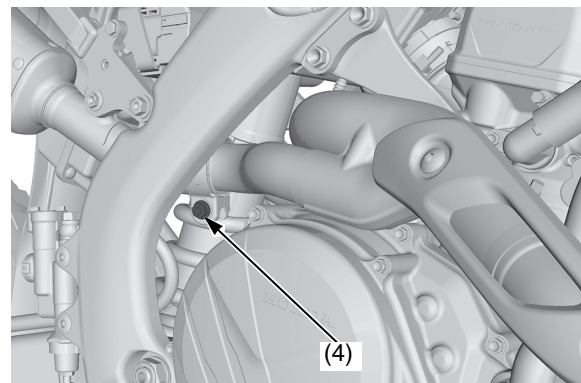

- (4) right muffler clamp bolt


4. Remove the right muffler mounting A bolt (5), B bolt (6), washer (7), and right muffler (8).

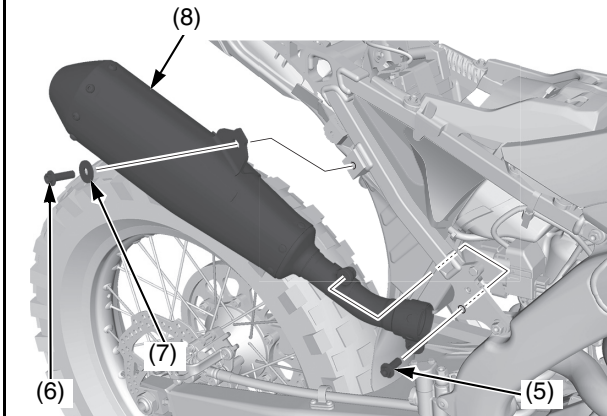

- (5) right muffler mounting A bolt
(6) right muffler mounting B bolt
(7) washer
(8) right muffler


Exhaust Pipe/Muffler

5. Loosen the left muffler clamp bolt (9).

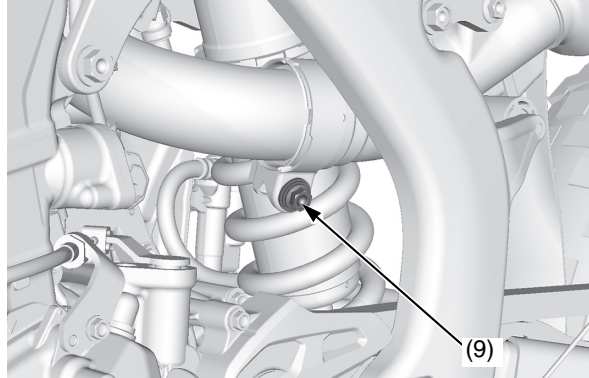

(9) left muffler clamp bolt


6. Remove the left muffler mounting A bolt (10), B bolt (11), washer (12) and left muffler (13).

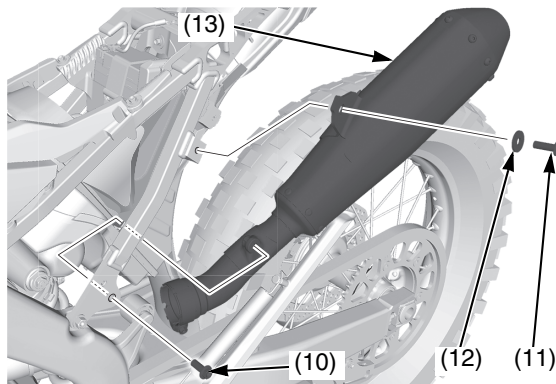

(10) left muffler mounting A bolt
(11) left muffler mounting B bolt
(12) washer
(13) left muffler


Muffler Installation

1. Remove the current gasket (1).
2. Install a new gasket onto the exhaust pipe (2).
3. Align the cutout (3) of the left muffler (4) with the tab (5) of the left muffler clamp (6).
4. Install the left muffler.

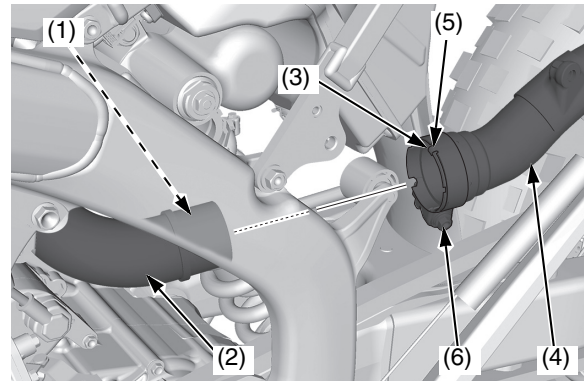


(1) gasket
(2) exhaust pipe
(3) cutout
(4) left muffler
(5) tab
(6) left muffler clamp

5. Install the washer (7), left muffler mounting B bolt (8) and A bolt (9).

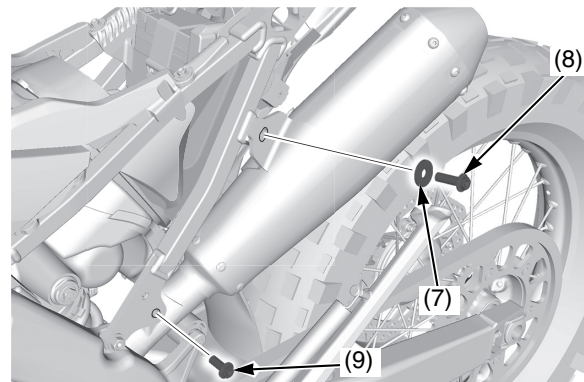


(7) washer
(8) left muffler mounting B bolt
(9) left muffler mounting A bolt

6. Tighten the left muffler clamp bolt (10) to the specified torque:
20 N·m (2.0 kgf·m, 15 lbf·ft)

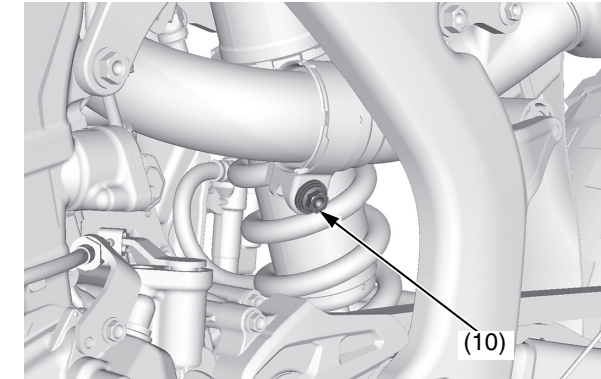

(10) left muffler clamp bolt

7. Remove the current gasket (1).
8. Install a new gasket onto the exhaust pipe (2).
9. Align the cutout (3) of the right muffler (11) with the tab (5) of the right muffler clamp (12).
10. Install the right muffler (12).

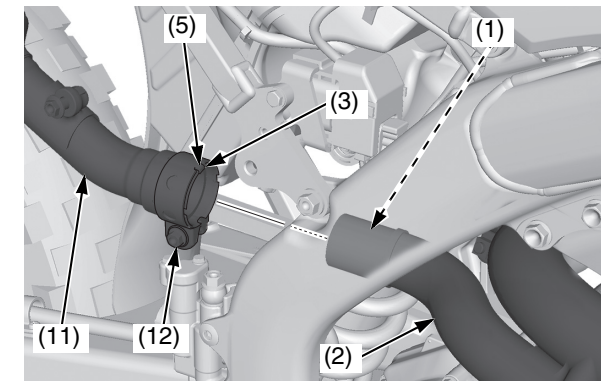


(1) gasket
(2) exhaust pipe
(3) cutout
(5) tab
(11) right muffler
(12) right muffler clamp

(cont'd)


Exhaust Pipe/Muffler

11. Install the washer (13), right muffler mounting B bolt (14) and A bolt (15).

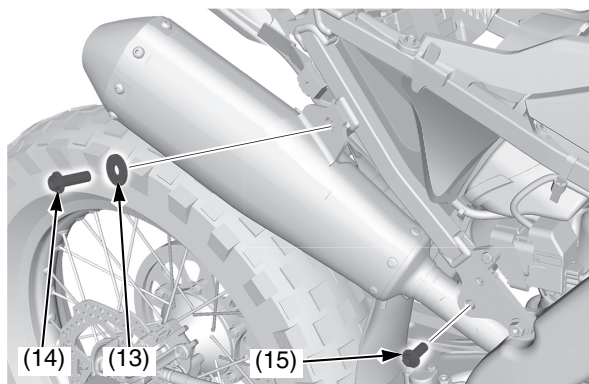


(13) washer
(14) right muffler mounting B bolt
(15) right muffler mounting A bolt

12. Tighten the right muffler clamp bolt (16) to the specified torque:
20 N·m (2.0 kgf·m, 15 lbf·ft)

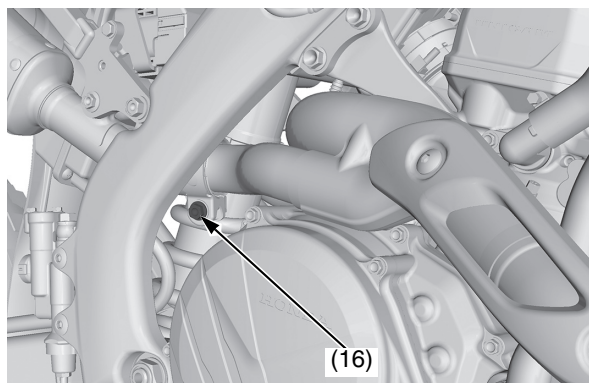


(16) right muffler clamp bolt

13. Tighten the right muffler mounting B bolt (14) and A bolt (15) to the specified torque:
26 N·m (2.7 kgf·m, 19 lbf·ft)

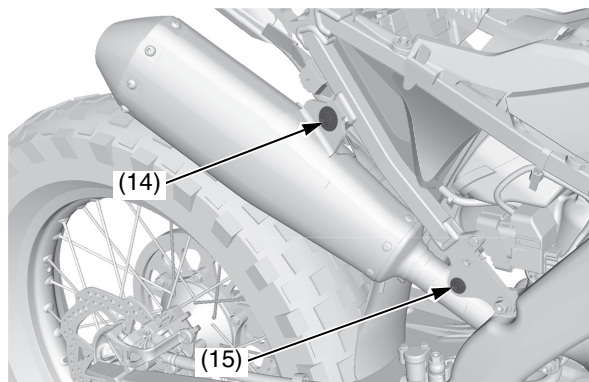

(14) right muffler mounting B bolt
(15) right muffler mounting A bolt


14. Tighten the left muffler mounting B bolt (8) and left muffler mounting A bolt (9) to the specified torque:
26 N·m (2.7 kgf·m, 19 lbf·ft)

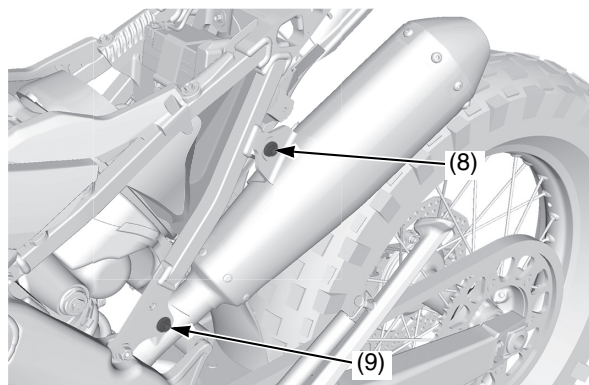

(8) left muffler mounting B bolt
(9) left muffler mounting A bolt

15. Install the air cleaner housing covers (17) and side covers (18), and then tighten the bolts (19) to the specified torque:
10 N·m (1.0 kgf·m, 7 lbf·ft)

The procedure is the same for the both right and left side

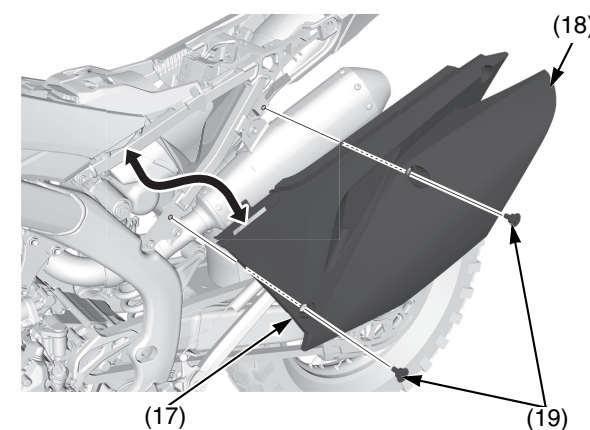


(17) air cleaner housing covers (19) bolts
(18) side covers

16. Install the seat (page 38).

Exhaust Pipe/Muffler

Exhaust Pipe Removal


1. Remove the right and left mufflers (page 130).
2. Remove the exhaust pipe joint nuts (1), exhaust pipe (2) and gasket (3).

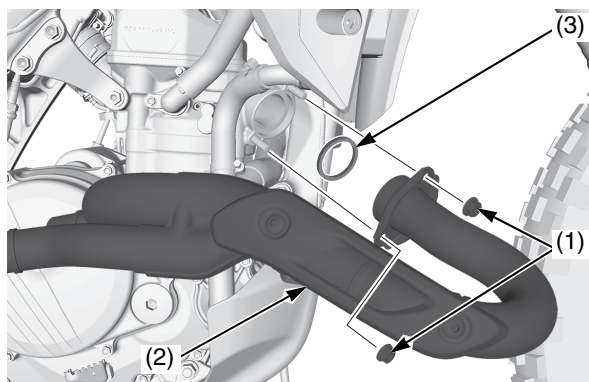

- (1) exhaust pipe joint nuts
(2) exhaust pipe
(3) gasket

Exhaust Pipe Installation

1. Install a new exhaust pipe gasket (1).
2. Install the exhaust pipe (2) and exhaust pipe joint nuts (3) but do not tighten the nuts yet.

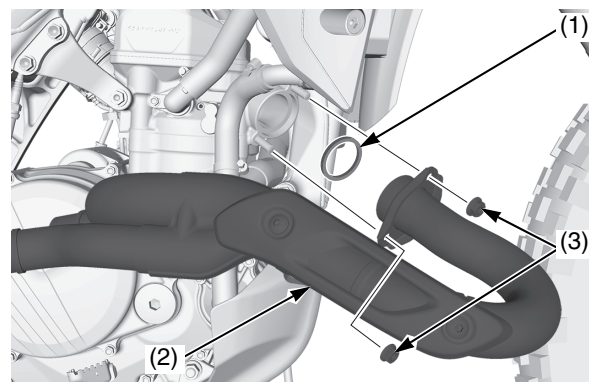

- (1) exhaust pipe gasket (new)
(2) exhaust pipe
(3) exhaust pipe joint nuts


3. Install the left and right mufflers (page 131) but do not tighten the bolts yet.
4. Tighten the exhaust pipe joint nuts to the specified torque:
20 N·m (2.0 kgf·m, 15 lbf·ft)
5. Tighten the left muffler clamp bolt, left muffler mounting A bolt and B bolt (page 131).
6. Tighten the right muffler clamp bolt, right muffler mounting A bolt and B bolt (page 131).

Additional Maintenance Procedures

Refer to *Important Safety Precautions* on page 27.


Steering Head Bearing Inspection

1. With your CRF on an optional workstand or equivalent support (front wheel elevated), turn the handlebar to the right and left to check for roughness in the steering head bearings.

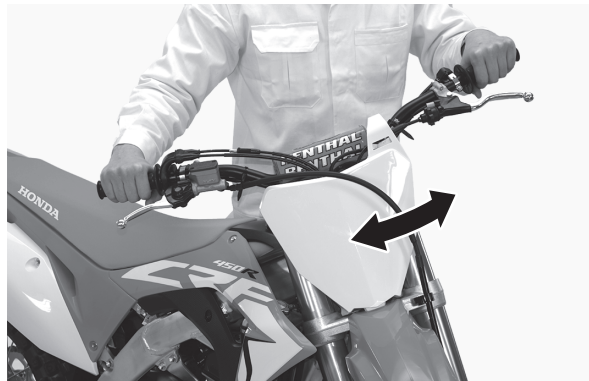


2. Stand in front of your CRF, grab the fork (at the axle), look at the steering head, and push the fork in and out (toward the engine) to check for play in the steering head bearings.

If any roughness or play is felt, but you do not see any movement in the steering head, the fork bushings may be worn. Refer to an official Honda Shop Manual for replacement or adjustment procedures, or see your dealer.

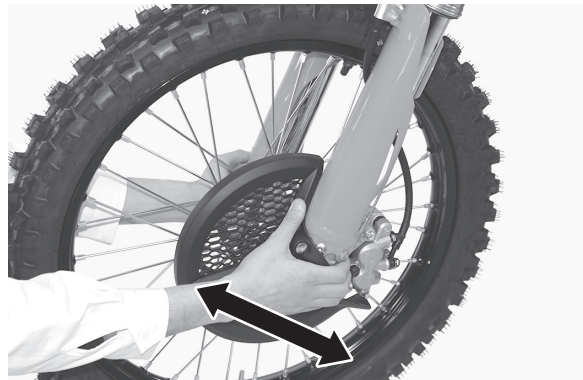

Handlebar Inspection

1. Remove the handlebar protector and check the handlebar (1) for bends or cracks.
2. Check that the handlebar has not moved from its original position where the end of the left handlebar holders (2) is aligned with the paint mark (3).
3. Check the torque of the handlebar upper holder bolts (4):
22 N·m (2.2 kgf·m, 16 lbf·ft)
Tighten the front bolts first.
4. Install the handlebar protector.

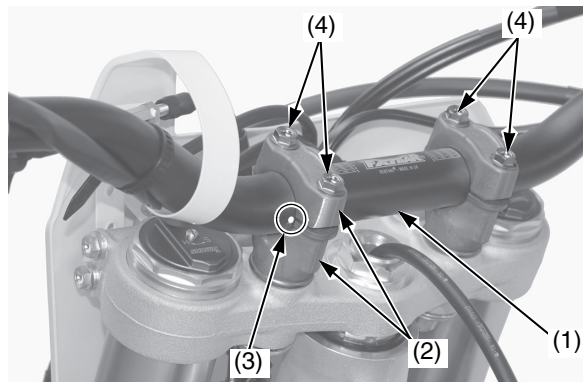

- (1) handlebar
(2) left handlebar holders
(3) paint mark
(4) handlebar upper holder bolts

Control Cables

Periodically, disconnect the clutch cables at their upper ends. Thoroughly lubricate the cable pivot points with a commercially available cable lubricant. If the clutch lever and throttle operation is not smooth, replace the cable.

Be sure the throttle returns freely from fully open to fully closed automatically, in all steering positions.

Additional Maintenance Procedures


Nuts, Bolts, Fasteners

Check and tighten nuts, bolts, and fasteners before every outing.

ENGINE


Item		Torque		
		N·m	kgf·m	lbf·ft
1	Cylinder head cover socket bolts	10	1.0	7
2	Clutch cover bolts	10	1.0	7
3	Water pump cover bolts	10	1.0	7
4	Crankshaft hole cap	15	1.5	11
5	Oil filter cover bolts	10	1.0	7
6	Cylinder head bolts	50	5.1	37
7	Exhaust pipe joint nuts	20	2.0	15
8	Drive sprocket bolt	31	3.2	23
9	Engine oil drain bolt	18	1.8	13
10	Coolant drain bolt	10	1.0	7

RIGHT SIDE

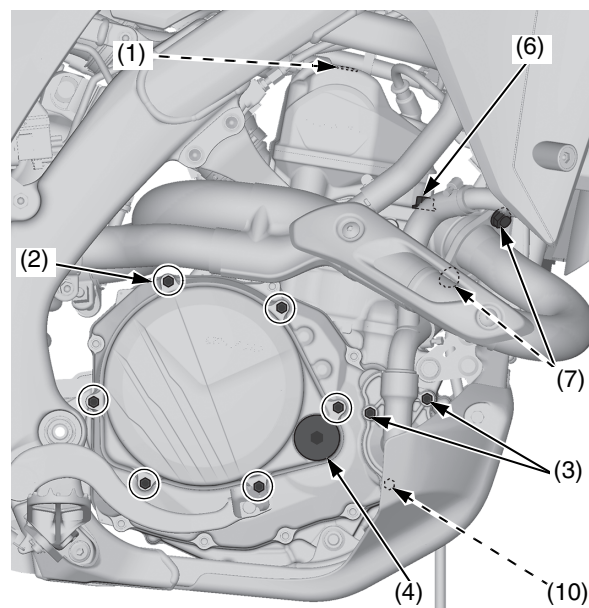

- (1) cylinder head cover socket bolts
- (2) clutch cover bolts
- (3) water pump cover bolts
- (4) crankshaft hole cap
- (6) cylinder head bolts
- (7) exhaust pipe joint nuts
- (10) coolant drain bolt

LEFT SIDE

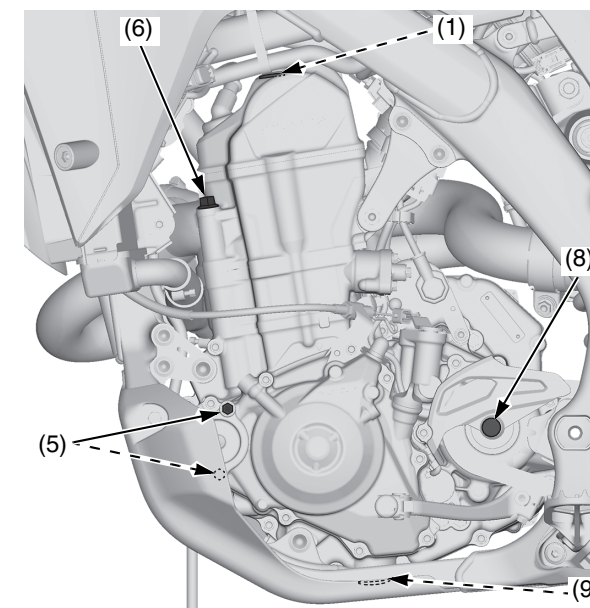

- (1) cylinder head cover socket bolts
- (5) oil filter cover bolts
- (6) cylinder head bolts
- (8) drive sprocket bolt
- (9) engine oil drain bolt

Battery

Refer to *Important Safety Precautions* on page 27.

Your CRF has a lithium-ion (li-ion) battery.
Clean the battery terminals if they become dirty or corroded.



This symbol on the battery means that this product must not be treated as household waste.

NOTICE

An improperly disposed of battery can be harmful to the environment and human health. Always confirm local regulations for battery disposal.

Power of the start button uses current from the battery.
Limited operation also allows the battery to discharge. If you do not ride frequently, we recommend that you charge the battery frequently (see *Battery Charging* on page 137).

If you plan to store your CRF, see *Battery Storage* (this page).

If your battery seems weak and/or is leaking electrolyte (cause slow starting), see your dealer.
If you smell an unusual odor coming from the lithium-ion (li-ion) battery, park your CRF in a safe place outside and away from flammable objects, then push and hold the engine stop button until the engine stops completely.

The battery has a limited life span.
Consult your dealer about when you should replace the battery. Always replace the battery with another lithium-ion (li-ion) battery of the same type.

The lithium-ion (li-ion) battery contains a fuse inside.
If the fuse blows, the battery needs replacement.
The voltage may read above 12V even with a blown battery fuse when the battery is unmounted (page 173).

Battery Storage

Before you remove the battery, be sure to read all the information that follows, as well as the information on the battery label.

⚠ WARNING

The battery contains flammable organic solvent as electrolyte.

You can be burned or seriously injured if the battery is handled improperly.


- Keep the battery away from heat, sparks, and flame.
- Keep the battery out of the reach of children.
- Do not disassemble or modify the battery or battery terminals.
- Do not short-circuit the battery with metal tools or other metal objects.
- Do not subject the battery to impacts.

If you do not remove the battery, we recommend disconnecting the battery cables (negative cable first).

The battery is located under the seat.

Removal

1. Remove the seat (page 38).
2. Remove the battery band (1).
3. Disconnect the negative (–) terminal (2).
4. Remove the positive terminal cover (3).
5. Disconnect the positive (+) terminal (4) and remove the battery (5).

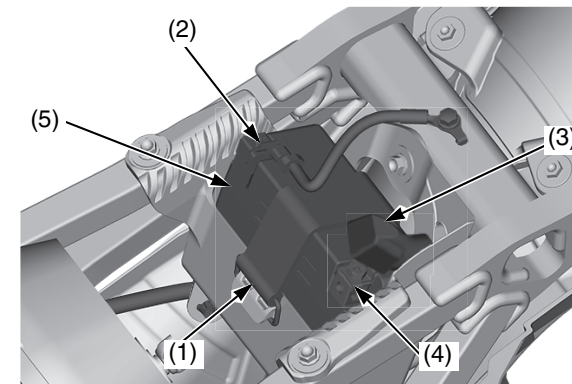


- (1) battery band (4) positive (+) terminal
(2) negative (–) terminal (5) battery
(3) positive terminal cover

6. Unless you have been riding regularly, charge the battery (page 137).
7. Store your battery in an easy-to-reach location off the floor, in an area protected from freezing temperatures and direct sunlight.
8. Clean the battery box after removing the battery for storage. Dry the battery box.
9. Slow charge the battery (page 137) once every 30 days.

Battery

Installation

1. Reinstall the battery (1) in the reverse order of removal. Be sure to connect the positive (+) terminal first, then the negative (–) terminal.
2. Tighten the positive (+) terminal bolt (2) and negative (–) terminal bolt (3) to the specified torque:
2.0 N·m (0.2 kgf·m, 1.5 lbf·ft)
3. Install the battery band (4).

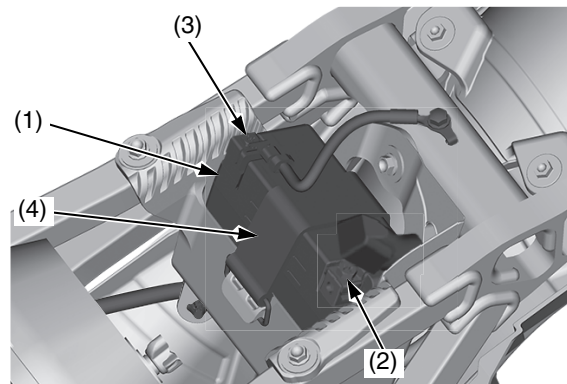

(1) battery (2) positive (+) terminal bolt
(3) negative (–) terminal bolt (4) battery band

Battery Charging

Be sure to read the information that came with your battery charger and follow the instructions on the battery. Improper charging may damage the battery.

We recommend using a charger recommended by your lithium-ion (li-ion) battery manufacturer which can be purchased from your dealer. These units can be left connected for long periods without risking damage to the battery. However, the lithium-ion (li-ion) battery may degrade if stored with a charger connected. Do not intentionally leave the charger connected longer than the time period recommended in the charger's instructions.

Using an existing lead-acid battery charger or battery charger that is not recommended, will damage the electrical circuits within the Li-ion battery.

Appearance Care

Refer to *Important Safety Precautions* on page 27.

Frequent cleaning and polishing will keep your Honda looking newer longer. Frequent cleaning also identifies you as an owner who values his motorcycle. A clean CRF is also easier to inspect and service.


While you're cleaning, be sure to look for damage, wear, and petrol or oil leaks.

General Recommendations

- To clean your CRF you may use:
 - water
 - a mild, neutral detergent and water
 - a mild spray and wipe cleaner/polisher
 - a mild spray and rinse cleaner/degreaser and water
- Avoid products that contain harsh detergents or chemical solvents that could damage the metal, paint, and plastic on your CRF or discolour the seat and decals.
- If your CRF is still warm from recent operation, give the engine and exhaust system time to cool off.
- We recommend the use of a low pressure garden hose to wash your CRF. High pressure washers (like those at coin-operated car washes) can damage certain parts of your CRF. The force of water under extreme pressure can penetrate the dust seals of the suspension pivot points and steering head bearings-driving dirt inside and needed lubrication out.

If you use a high pressure washer, avoid spraying the following areas:

- brake master cylinders
- drive chain
- electrical circuit
- engine stop button
- muffler outlet
- steering head bearings (1)
- suspension pivot points (2)
- throttle body
- under fuel tank
- under seat

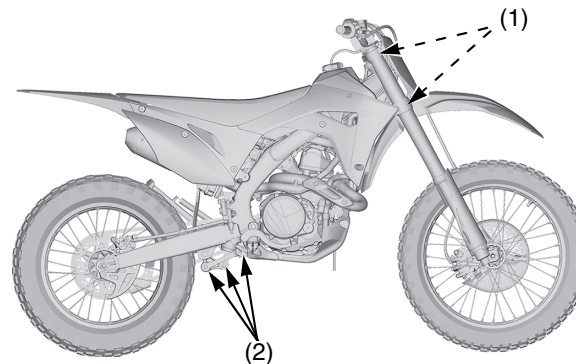

- (1) steering head bearings
(2) suspension pivot points

NOTICE

High pressure water (or air) can damage certain parts of your CRF.

You may use a multi-surface cleaner/degreaser to remove both dirt and petroleum-based grime from paint, alloy, plastic, and rubber surfaces. Wet any heavy deposits with water first. Then spray on multi-surface cleaner/degreaser and rinse with a low pressure garden hose at full pressure. Stubborn deposits may require a quick wipe with a sponge.

Washing Your Motorcycle with a Mild Detergent

Allow the engine, muffler, brakes, and other high-temperature parts to cool before washing.

1. Rinse your CRF thoroughly using a low pressure garden hose to remove loose dirt.
2. Fill a bucket with cool water. Mix in a mild, neutral detergent, such as dish washing liquid or a product made especially for washing motorcycles or automobiles.
3. Wash your CRF with a sponge or a soft towel. As you wash, check for heavy grime. If necessary, use a mild cleaner/degreaser to remove the grime.

NOTICE

Do not use steel wool to clean the frame as it could damage or discolour the frame surface. Muffler stain remover (Scotch Brite Hand Pad #7447-maroon) is for removing stains on the non-coated aluminium frame only.

4. After washing, rinse your CRF thoroughly with plenty of clean water to remove any residue. Detergent residue can corrode alloy parts.
5. Dry your CRF with a chamois or a soft towel. Leaving water on the surface to air dry can cause dulling and water spots. As you dry, inspect for chips and scratches.
6. Lubricate the drive chain to prevent rusting.
7. Start the engine and let it idle for several minutes. The engine heat will help dry moist areas.
8. As a precaution, ride at a slow speed and apply the brakes several times. This will help dry the brakes and restore normal braking performance.

Appearance Care

After Cleaning Lubrication

There are some things you should do just after washing your CRF to help prevent rust and corrosion.

Once your CRF is clean and dry, you should protect any bare steel from rusting by applying a light coating of a rust-inhibitor. Lubricate the drive chain and drive sprocket after removing and thoroughly cleaning in solvent. Be sure the chain is wiped clean and is dry before applying the chain lube.

Follow the suggestions given in the pages of this manual for lubricating items such as the brake and clutch lever pivot points and footpeg pivot pins.

Aluminium Frame Maintenance

Aluminium corrodes when it comes in contact with dust, mud and road salt.

To remove stains, use Scotch Brite Hand Pad #7447 (maroon) or an equivalent.

Wet the pad and polish the surface using strokes parallel to the length of the frame.

Clean the frame using a wet sponge and a mild detergent, then rinse well with clean water. Dry the frame with a soft clean cloth, using strokes parallel to the length of the frame.

NOTICE

Do not use steel wool to clean the frame as it could damage or discolour the frame surface.

Scotch Brite Hand Pad #7447-maroon is for removing stains on the non-coated aluminium frame only.

Titanium Fuel Tank Maintenance (CRF450R)

The fuel tank is made of titanium material.

To remove mud or dust, use a sponge or soft cloth and a stainless steel kitchen detergent, then rinse well with clean water.

After washing, rinse with plenty of water and dry with a clean cloth.

Exhaust Pipe and Muffler Maintenance

The exhaust pipe and muffler are stainless steel but may become stained by mud or dust.

To remove mud or dust, use a wet sponge and a liquid kitchen abrasive, then rinse well with clean water. Dry with chamois or a soft towel.







If necessary, remove heat stains by using a commercially available fine texture compound. Then rinse by the same manner as removing mud or dust.

Clean the Seat

Due to the top coat design, the seat surface tends to catch and trap dirt or dust in its texture.

Using plenty of water, clean the seat with a sponge and mild detergent.

After washing, dry with a soft, clean cloth.

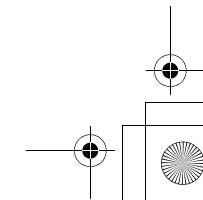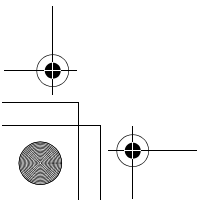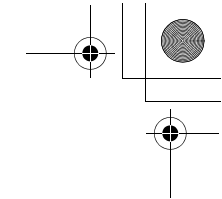

Adjustments for Competition

This section tells you how to fine tune your CRF for maximum competition performance.


Initial suspension adjustments should be performed after a minimum of 2 hours of easy break-in time.

Optional front and rear suspension springs are available in order to tailor your CRF specifically for your weight, riding style and course conditions.

Follow the instructions given in the rear suspension sag setting section of *Rear Suspension Adjustments* to determine if your combined rider and sprung machine weight (rider fully dressed for competition and machine coolant, oil and fuel levels ready for competition) requires an optional stiffer or softer rear spring. The need for either optional rear spring may need to be balanced by installing the optional fork springs of a similar rate.

Engine Mode Select Button	142
Current Mode	142
Mode Selection	142
HRC-Launch Control System	143
Front Suspension Adjustments	145
Front Suspension Air Pressure	145
Front Suspension Damping	146
Fork Springs	146
Fork Oil Adjustment	147
Rear Suspension Adjustments	149
Rear Suspension Spring Pre-Load	149
Rear Suspension Damping	150
Rear Suspension Race Sag	152
Suspension Adjustments for Track Conditions	154
Suspension Adjustment Guidelines	155
Tuning Tips	158
Spark Plug Reading	158
Chassis Adjustments	159
Rear End	159
Fork Height/Angle	159
Wheelbase	159
Gearing	160
Tyre Selection for Track Conditions	161
Personal Fit Adjustments	162
Control Positioning	162
Handlebar Position, Width & Shape	162

Engine Mode Select Button

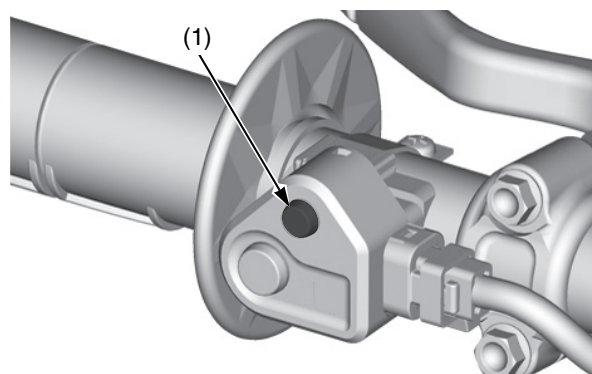

(1) engine mode select button


You can change engine output characteristic depending on track conditions by using the engine mode select button (1).

- PGM-FI mode 1: standard setting
- PGM-FI mode 2: smooth setting (reduce throttle response from the standard setting)
- PGM-FI mode 3: aggressive setting (increase throttle response from the standard setting)


An optional PGM-FI setting tool can change the ignition timing and amount of the fuel injection and save the setting data on the PGM-FI mode 2 or 3 (page 186).

Current Mode

Start the engine and push the engine mode select button (1) with your CRF stopped. The engine mode indicator (2) under the engine mode select button indicates the selected mode by blinking the mode number in blue 3 times.

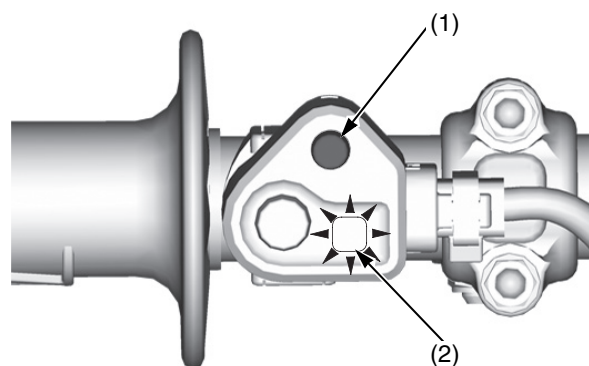

(1) engine mode select button
(2) engine mode indicator (blue)

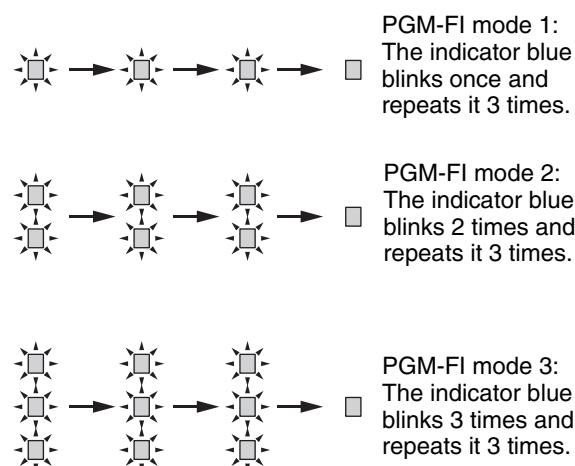


Mode Selection

1. Start the engine.
2. With your CRF stopped and the throttle closed, push and hold the engine mode select button for 1 or more second.

Make sure that the fast idle knob is pushed in (page 21). If the fast idle knob is pulled out, the engine mode will not change.

3. Release the engine mode select button. The engine mode indicator will indicate a selected mode by the number of times the indicator blue blinks.
4. Repeat steps 2 – 3 until the desired mode is indicated.

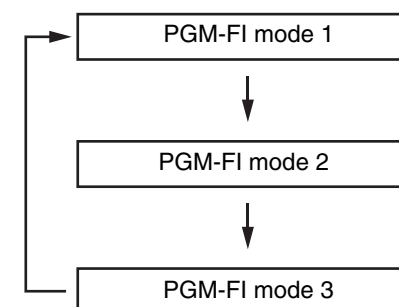


HRC-Launch Control System

The HRC-Launch Control System reduces slip and assists for an effective start by temporarily decreasing the rev limit when starting.

You can select the rev limit level while the system is operating according to your skill and track conditions.


To change the level

1. Start the engine and wait more than 2 seconds.
2. Close the throttle completely, press and hold the start button (1) while pulling the clutch lever in until the launch control system indicator (2) blinks (purple).
 - The system goes into standby, and the launch control system indicator indicates the selected level by blinking (purple).
 - From standby, the control to decrease the rev limit starts.
 - The system may become disabled if you snap the throttle excessively.
 - If the idle speed is low, the system may not go into standby. Set the idle speed to standard min^{-1} (rpm), see page 76.
 - To disable the system, quickly press the start button. The launch control system indicator stops blinking.

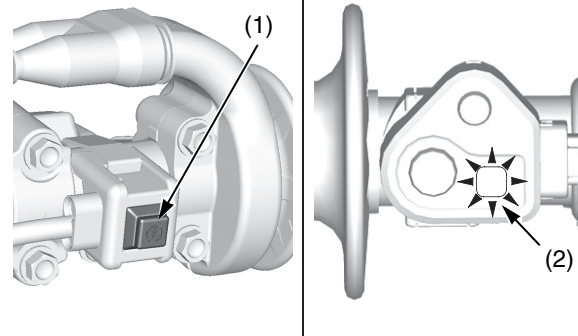

(1) start button
(2) launch control system indicator (purple)

3. Press and hold the start button. The level changes every time you press and hold.
 - The level selected last is saved.
 - The factory setting is level 2.

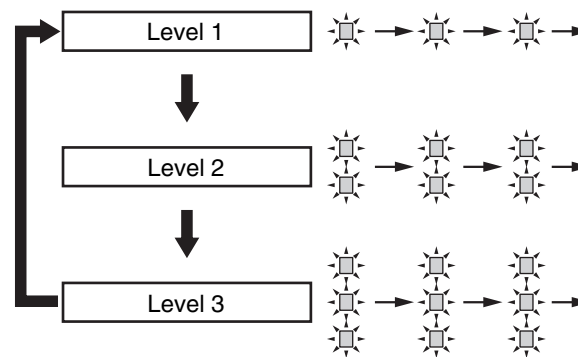

➡ : Pressing and holding the start button while the launch control system is in standby

Level	Rev limit during launch control	Number of launch control system indicator blinks
1	High	1
2	Middle	2
3	Low	3

4. To continue using the system, refer to step 2 in *To operate the system* (next page).
To disable the system, quickly press the start button. The launch control system indicator stops blinking and the system is disabled.

HRC-Launch Control System

To operate the system


1. Perform steps 1 and 2 in *To change the level*.
2. Shift into 1st or 2nd gear.
3. When launching, open the throttle halfway or more. The system operates.
 - The reduced rev limit is controlled and will gradually return to normal in a few seconds. Once the rev limit returns to normal, the system is disabled.
 - The launch control system indicator comes on (purple) while the system is operating.
 - If you open the throttle halfway or more before starting, control system stops before starting and there is no effect.
 - If you close the throttle immediately, the system may not operate.
 - When the launch control system operates, these following conditions will disable launch control:
 - Vehicle is in 3rd gear
 - The throttle completely closed
4. Make sure that the launch control system indicator is off. If it is not off, the system is not disabled. Quickly press the start button to disable the system.

Front Suspension Adjustments

The front suspension can be adjusted for the rider's weight and riding conditions by using one or more of the following methods:

- **Oil volume** — The effects of higher or lower fork oil capacity are only felt during the final 100 mm (3.9 in) of fork travel.
- **Compression damping** — Turning the compression damping adjuster (1) adjusts how quickly the fork compresses.
- **Rebound damping** — Turning the rebound damping adjuster (2) adjusts how quickly the fork extends.
- **Fork springs** — Optional springs are available in softer and stiffer types than the standard rate. (page 185)

The inverted fork on your CRF features sealed damper cartridges with dual (separate air and oil) chambers to prevent aeration. The design also isolates the oil in each fork/damper, which may contain air bubbles and/or metal particles, from the sealed cartridge to provide more consistent damping.

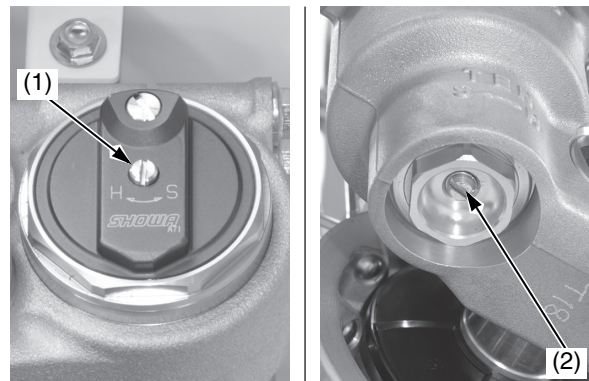

(1) compression damping adjuster
(2) rebound damping adjuster


Front Suspension Air Pressure

Air is an unstable gas which builds up pressure as it is worked (such as in a fork). Air pressure acts as a progressive spring and affects the entire range of fork travel. This means the fork action on your CRF will get stiffer during a race (CRF450RX)/heat (CRF450R). For this reason, release built-up air pressure in the fork legs between races (CRF450RX)/heats (CRF450R). Be sure the fork is fully extended with the front tyre off the ground when you release the pressure.

The standard air pressure is 0 kPa (0 kgf/cm², 0 psi). You may relieve accumulated air pressure in the fork legs by using the pressure release screws. The front wheel should be off the ground before you release the pressure. The air pressure should be adjusted according to the altitude and outside temperature.

1. Place an optional workstand under the engine, so that the front wheel is off the ground. Do not adjust air pressure with the front wheel on the ground as this will give false pressure readings.
2. Remove the pressure release screw (1).
3. Apply recommended fork oil to a new O-ring (2), and then install a new O-rings.

4. Install and tighten the pressure release screw to the specified torque:
1.3 N·m (0.1 kgf·m, 1.0 lbf·ft)

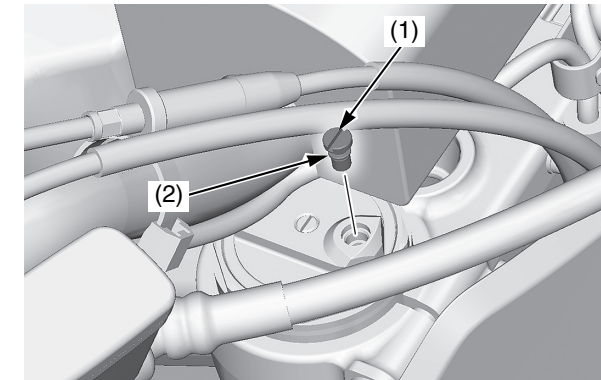

(1) pressure release screw (2) O-ring (new)

Front Suspension Adjustments

Front Suspension Damping

Compression Damping Adjustment

This adjustment affects how quickly the fork compresses. The fork compression damping adjuster has 16 clicks or more. Turning the compression damping adjuster screw (1) one full turn changes the adjuster 4 clicks. To adjust the adjuster to the standard position, proceed as follows:

Turn the adjuster clockwise (harder) until it will no longer turn (lightly seats). Turn the adjuster counterclockwise (softer) until it clicks. This click is position 1.

(CRF450RX)

The standard position is 7 clicks.

(CRF450R)

The standard position is 8 clicks.

Make sure that both fork legs are adjusted to the same position.

Rebound Damping Adjustment

This adjustment affects how quickly the fork extends.

The fork rebound damping adjuster has 16 clicks or more. Turning the rebound damping adjuster screw (2) one full turn changes the adjuster 4 clicks. To adjust the rebound damping to the standard setting, proceed as follows:

Turn the adjuster clockwise (harder) until it will no longer turn (lightly seats). Turn the adjuster counterclockwise (softer) until it clicks. This click is position 1.

(CRF450RX)

The standard position is 15 clicks.

(CRF450R)

The standard position is 12 clicks.

Make sure that both fork legs are adjusted to the same position.


NOTICE

Always start with full hard when adjusting damping.

Do not turn the adjuster screw more than the given positions or the adjuster may be damaged.

Be sure that the compression and rebound adjusters are firmly located in a detent, and not between positions.

Both compression and rebound damping can be increased by turning the adjuster clockwise.

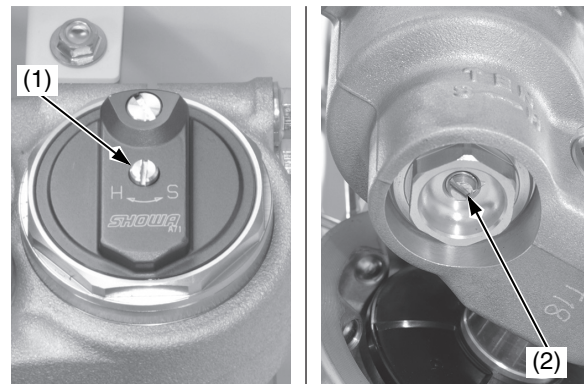

(1) compression damping adjuster screw
(2) rebound damping adjuster screw

Fork Springs

The fork springs in CRF's are about right for riders weighing between 77 kg (170 lb) and 91 kg (200 lb) (less riding gear). So if you're a heavier rider, you have to go up on the oil capacity or get a stiff spring. Do not use less oil than the minimum specified for each spring or there will be a loss of rebound damping control near full extension. If the fork is too stiff on big bumps, turn the compression damping adjuster counterclockwise 1-click and lower the oil capacity in increments of 5 cm³ (0.2 US oz, 0.2 Imp oz) in both fork legs until the desired performance is obtained. Do not, however, lower the oil capacity below the minimum oil capacity.

Minimum oil capacity (CRF450RX):

Standard spring: 317 cm³
(10.7 US oz, 11.2 Imp oz)

Soft spring: 315 cm³
(10.7 US oz, 11.1 Imp oz)

Stiff spring: 304 cm³
(10.3 US oz, 10.7 Imp oz)

Minimum oil capacity (CRF450R):

Standard spring: 307 cm³
(10.4 US oz, 10.8 Imp oz)

Soft spring: 312 cm³
(10.6 US oz, 11.0 Imp oz)

Stiff spring: 301 cm³
(10.2 US oz, 10.6 Imp oz)

When adjusting oil capacity, bear in mind that the air in the fork will increase in pressure while riding; therefore, the higher the oil capacity, the higher the eventual pressure of any air in the fork.

Front Suspension Adjustments


Fork Oil Adjustment

1. Remove the front suspension (page 102).
2. Disassemble the fork outer tube (page 104).
3. Disassemble the fork damper (page 109).

Fork Oil Capacity:


(CRF450RX)

Standard 4.8 N/mm (27.4 lbf/in) Fork Spring

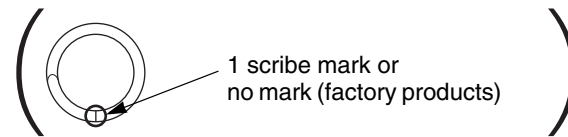

(CRF450R)


Standard 5.0 N/mm (28.6 lbf/in) Fork Spring

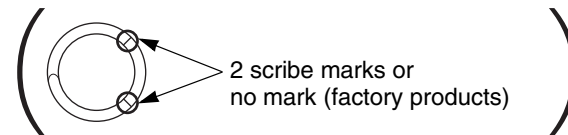


Standard oil capacity	CRF450RX	360 cm ³ (12.2 US oz, 12.7 Imp oz)	
	CRF450R	356 cm ³ (12.0 US oz, 12.5 Imp oz)	
Maximum oil capacity	CRF450RX	402 cm ³ (13.6 US oz, 14.2 Imp oz)	Slightly stiffer as it nears full compression.
	CRF450R	392 cm ³ (13.3 US oz, 13.8 Imp oz)	
Minimum oil capacity	CRF450RX	317 cm ³ (10.7 US oz, 11.2 Imp oz)	Slightly softer as it nears full compression.
	CRF450R	307 cm ³ (10.4 US oz, 10.8 Imp oz)	

Example: Front fork characteristics when a standard spring

(CRF450RX)

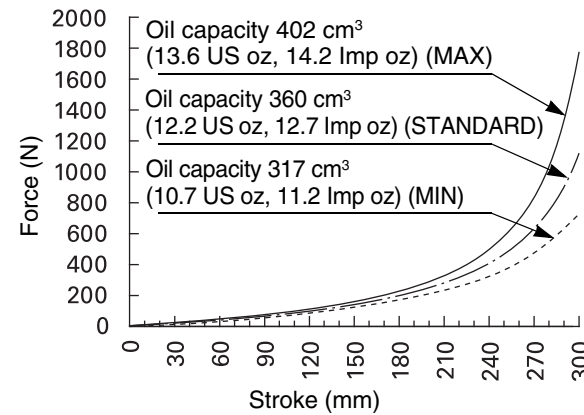


(CRF450R)

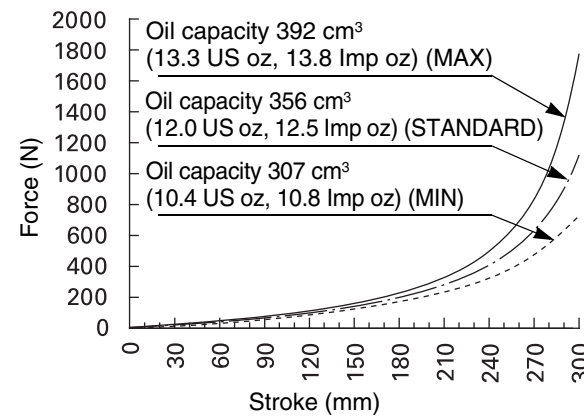


(CRF450RX)

Optional Soft 4.6 N/mm (26.3 lbf/in) Fork Spring

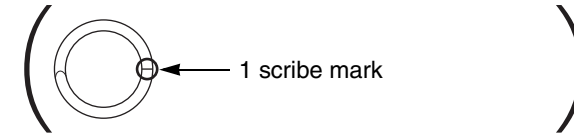

(CRF450R)

Optional Soft 4.8 N/mm (27.4 lbf/in) Fork Spring

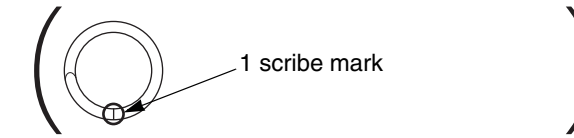


Standard oil capacity	CRF450RX	358 cm ³ (12.1 US oz, 12.6 Imp oz)	
	CRF450R	361 cm ³ (12.2 US oz, 12.7 Imp oz)	
Maximum oil capacity	CRF450RX	400 cm ³ (13.5 US oz, 14.1 Imp oz)	Slightly stiffer as it nears full compression.
	CRF450R	397 cm ³ (13.4 US oz, 14.0 Imp oz)	
Minimum oil capacity	CRF450RX	315 cm ³ (10.7 US oz, 11.1 Imp oz)	Slightly softer as it nears full compression.
	CRF450R	312 cm ³ (10.6 US oz, 11.0 Imp oz)	

(cont'd)

Front Suspension Adjustments


(CRF450RX)

Optional stiff 5.0 N/mm (28.6 lbf/in) Fork Spring

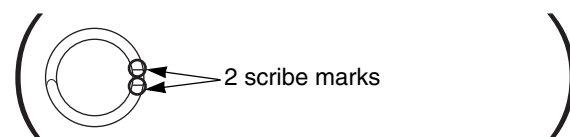

(CRF450R)

Optional stiff 5.2 N/mm (29.7 lbf/in) Fork Spring

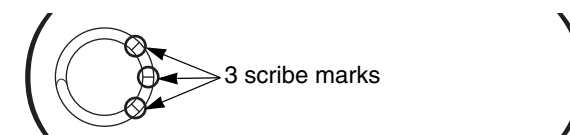

Standard oil capacity	CRF450RX	347 cm ³ (11.7 US oz, 12.2 Imp oz)	
	CRF450R	350 cm ³ (11.8 US oz, 12.3 Imp oz)	
Maximum oil capacity	CRF450RX	389 cm ³ (13.2 US oz, 13.7 Imp oz)	Slightly stiffer as it nears full compression.
	CRF450R	386 cm ³ (13.1 US oz, 13.6 Imp oz)	
Minimum oil capacity	CRF450RX	304 cm ³ (10.3 US oz, 10.7 Imp oz)	Slightly softer as it nears full compression.
	CRF450R	301 cm ³ (10.2 US oz, 10.6 Imp oz)	

4. Assemble the fork damper (page 114).
5. Refilling the fork oil (page 105).
6. Install the front suspension (page 106).

Rear Suspension Adjustments

The rear suspension can be adjusted for the rider's weight and riding conditions by changing the spring pre-load and the rebound and compression damping.

The rear suspension assembly includes a damper unit that contains high pressure nitrogen gas. Do not attempt to disassemble, service, or dispose of the damper; see your dealer. The instructions found in this owner's manual are limited to adjustments of the shock assembly only.


Puncture or exposure to flame may also result in an explosion, causing serious injury. Service or disposal should only be done by your dealer or a qualified mechanic, equipped with the proper tools, safety equipment and an official Honda Shop Manual.

If your CRF is new, put enough part-throttle break-in time (about 1 hour) on it to ensure that the suspension has worked in.

Rear Suspension Spring Pre-Load

Pre-load should be adjusted when the engine is cold because it is necessary to remove the muffler. An optional pin spanner is available for turning the shock spring lock nut and adjusting nut to adjust spring pre-load.

1. Place your CRF on an optional workstand or equivalent support with the rear wheel off the ground.
2. Remove the subframe (page 43).
3. Check that the spring pre-load is adjusted to the standard length. Adjust as necessary by loosening the shock spring lock nut (1) and turning the adjusting nut (2).
Each complete turn of the adjusting nut changes the spring length by 1.5 mm (0.06 in). After adjustment, hold the adjusting nut and tighten the shock spring lock nut to the specified torque:
44 N·m (4.5 kgf·m, 32 lbf·ft)

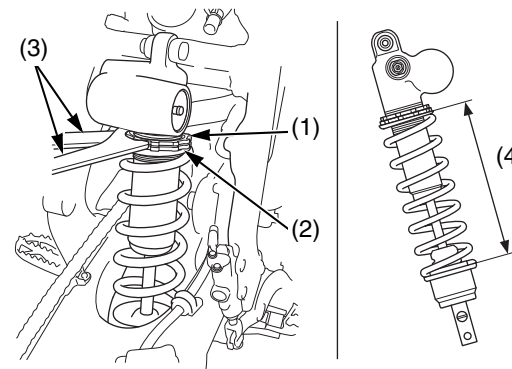

(1) shock spring lock nut (3) pin spanners
(2) adjusting nut (4) spring length

Refer to the following pages for the installation procedure of the removed parts:

- air cleaner case and air cleaner connecting tube: page 45
- subframe: page 44

To increase spring pre-load

Loosen the shock spring lock nut using the optional pin spanners (3) and turn the adjusting nut to shorten the spring length (4). Do not shorten to less than:

(CRF450RX)

Standard (Medium) spring (52 N/mm (296.9 lbf/in)):
225.5 mm (8.88 in)

Optional Soft spring (50 N/mm (285.5 lbf/in)):
225.0 mm (8.86 in)

Optional Stiff spring (54 N/mm (308.3 lbf/in)):
229.5 mm (9.04 in)

(CRF450R)

Standard (Medium) spring (56 N/mm (319.8 lbf/in)):
229.0 mm (9.02 in)

Optional Soft spring (54 N/mm (308.3 lbf/in)):
229.5 mm (9.04 in)

Optional Stiff spring (58 N/mm (331.2 lbf/in)):
231.0 mm (9.09 in)

Rear Suspension Adjustments

To decrease spring pre-load

Loosen the shock spring lock nut using the optional pin spanners (3) and turn the adjusting nut to increase the spring length (4). Do not increase to more than

239.0 mm (9.41 in)

Each turn of the adjusting nut changes spring length and spring pre-load. One turn equals: spring length/spring pre-load:

Standard: 1.5 mm (0.06 in)/78 N (18 lbf)

Pin spanners should be used for turning the shock spring lock nut and adjusting nut. See page 185 for optional pin spanners.

(CRF450RX)

Spring pre-load length (Standard (medium) spring)

Standard: 233.5 mm (9.19 in)

Max. : 239.0 mm (9.41 in)

Min. : 225.5 mm (8.88 in)

(CRF450R)

Spring pre-load length (Standard (medium) spring)

Standard: 238.0 mm (9.37 in)

Max. : 239.0 mm (9.41 in)

Min. : 229.0 mm (9.02 in)


Rear Suspension Damping

Compression Damping

Compression damping may be adjusted in two stages with separate adjusters.

The high speed compression damping adjuster (1) is effective when damping adjustment is desired for high speed operation. The low speed compression damping adjuster (2) should be used when damping adjustment is desired at relatively low speeds.

- When adjusting the compression damping adjusters, make sure to use the proper size tool to avoid damage.
- Both the high and low speed compression damping can be increased by turning the appropriate adjuster clockwise.
- Adjust the high speed compression damping adjuster in 1/4 turn increments.
- Be sure the high speed compression adjuster is firmly located in a detent, and not between positions.

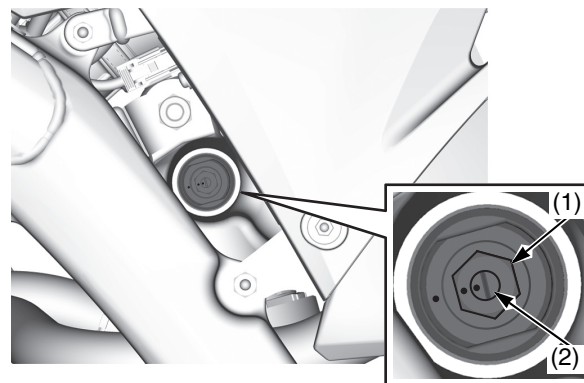

(1) high speed compression damping adjuster
(2) low speed compression damping adjuster

High Speed Damping:

The high speed damping can be adjusted by turning the hexagonal portion of the compression damping adjuster.


The high speed compression damping adjuster has 3 1/2 turns or more.

To adjust to the standard position:

1. Turn the adjuster clockwise (harder) until it will no longer turn (lightly seats).
2. (CRF450RX)
Turn the adjuster counterclockwise (softer) 3 1/2 turns. Further turn it by $\pm 1/4$, align the punch mark (3) on the adjuster and the punch mark (4) on the adjuster body.

(CRF450R)

Turn the adjuster counterclockwise (softer) 3 1/3 turns. Further turn it by $\pm 1/4$, align the punch mark (3) on the adjuster and the punch mark (4) on the adjuster body.

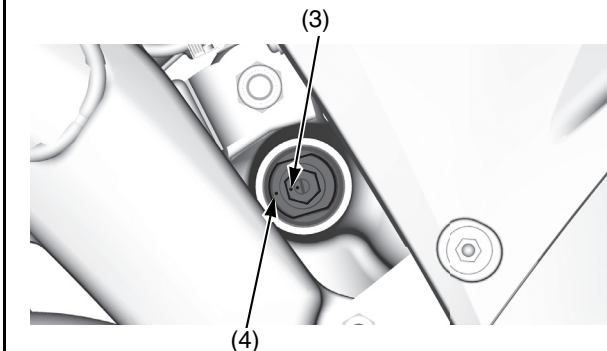

(3) high speed compression damping adjuster punch mark
(4) adjuster body punch mark

Rear Suspension Adjustments

Low Speed Damping:


The low speed damping can be adjusted by turning the centre screw of the compression damping adjuster.

The low speed compression damping adjuster has 13 clicks or more.

Turning the adjuster one full turn changes the adjuster 4 clicks.

To adjust to the standard position:

1. Turn the adjuster clockwise (harder) until it will no longer turn (lightly seat). Turn the adjuster counterclockwise (softer) until it clicks. This click is position 1.
2. Set the adjuster 10 clicks and adjust it until the punch mark (5) on the adjuster and the punch mark (4) on the adjuster body are aligned.

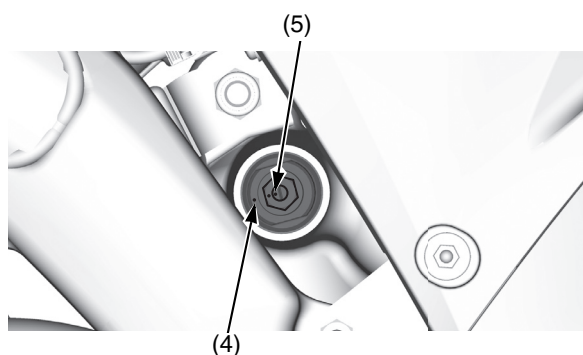


(4) adjuster body punch mark
(5) low speed compression damping adjuster punch mark

Rebound Damping

The rebound damping adjuster (6) is located at the lower end of the rear shock absorber.

It has 17 clicks or more. Turning the adjuster one full turn changes the adjuster 8 clicks.

- Rotate adjuster gently to prevent damage to the rear shock absorber.
- When adjusting the rebound damping adjuster, make sure to use the proper size tool to avoid damage.
- Rebound damping can be increased by turning the adjuster clockwise.
- Be sure that the rebound adjuster is firmly located in a detent, and not between positions.

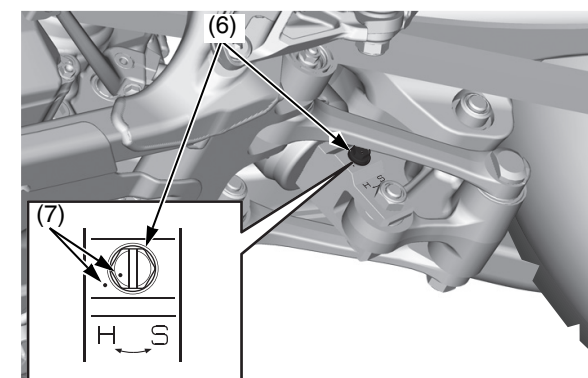

(6) rebound damping adjuster (7) punch marks

To adjust to the standard position:

1. Turn the adjuster clockwise (harder) until it will no longer turn (lightly seat). Turn the adjuster counterclockwise (softer) until it clicks. This click is position 1.
2. Set the adjuster 7 to 10 clicks and adjust it until the punch marks (7) on the adjuster and the rear shock absorber are aligned.

Rear Suspension Adjustments

Rear Suspension Race Sag

Setting the proper race sag (ride height) is very important for competition use.

Race sag refers to the amount of rear wheel travel used by your CRF at rest, ready to ride, with you on the seat. As a general rule of thumb, the race sag dimension should be about one-third of the maximum travel.

On your CRF, ride height is changed by adjusting the rear suspension spring pre-load.

Spring Pre-load & Race Sag Adjustment

The following adjustment procedure establishes the correct starting point for any suspension tuning — the proper rear suspension spring preload adjustment for your specific needs.


Your CRF should be at normal racing weight, including fuel, oil and coolant. You should be wearing all your normal protective apparel. You will need two helpers.

To calculate the proper adjustment, it is necessary to measure between two fixed points — from the centre of the seat mounting bolt to the centre of the chain adjuster lock nut as illustrated here — for two different situations:

unloaded: motorcycle on an optional workstand with rear suspension fully extended, no rider.


loaded with rider: motorcycle on ground, with rider.

1. Support your CRF on an optional workstand with the rear wheel off the ground.
2. Measure the *unloaded* dimension.

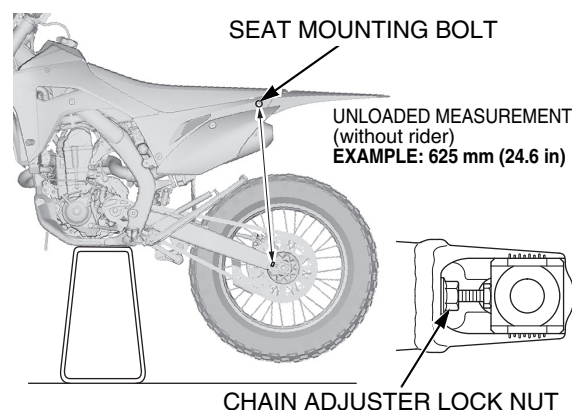

3. Measure the *loaded with rider* dimension. Remove the workstand. With two helpers available, sit as far forward as possible on your CRF's seat, wearing your riding apparel. Ask one helper to steady your CRF perfectly upright so you can put both feet on the pegs. Bounce your weight on the seat a couple of times to help the suspension overcome any situation and settle to a good reference point.

Ask the other helper to measure the *loaded with rider* dimension.

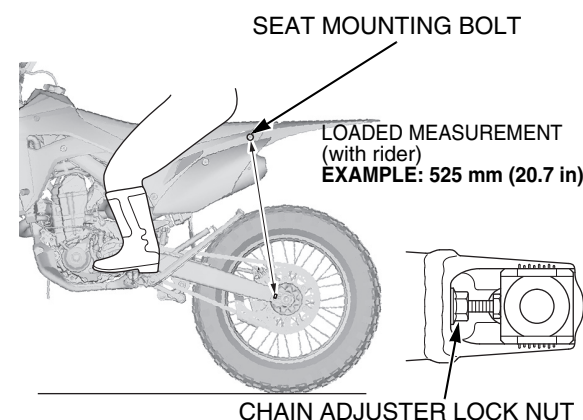

Example:

Unloaded = 625 mm (24.6 in)

– Loaded = 525 mm (20.7 in)

Race Sag = 100 mm (3.9 in)

4. Calculate the *race sag* dimension. To do this, subtract the *loaded with rider* dimension (step 3) from the *unloaded* dimension (step 2).
Standard Race Sag: 105 mm (4.1 in)

Adjust spring pre-load as necessary to obtain the desired handling results.

Decreasing the race sag dimension (example: 95 mm, 3.7 in) improves turning ability for tight terrain at the cost of slightly reduced straight line stability.

Increasing the race sag dimension (example: 115 mm, 4.5 in) may improve stability on faster terrain with less turns, but will reduce turning performance slightly and may upset the balance between the front and rear suspension, producing a harsher ride. This will happen if the adjustment shifts the effective wheel travel toward the more progressive end of its range.

Rear Suspension Adjustments

Spring Rates


If you are lighter or heavier than the average rider and cannot set the proper ride height with altering the correct spring pre-load, consider an optional rear shock spring.

A spring that is too soft for your weight forces you to add excessive spring pre-load to get the right race sag and, as a result, the rear end of the motorcycle is raised. This can cause the rear wheel to unload too much in the air and top out as travel rebounds. The rear end may top out from light braking, or kick sideways over lips and square-edged terrain. It may even top-out when you dismount your CRF.

Because of the great absorption quality of the shock bumper rubber, it may be difficult for you to notice when your CRF's suspension is bottoming. Some riders may think the damping or perhaps the leverage ratio is too harsh. In reality, the problem is most likely insufficient spring pre-load or a spring that is too soft. Either situation prevents utilizing the full travel.

Keep in mind that a properly adjusted suspension system may bottom slightly every few minutes at full speed. Adjusting the suspension to avoid this occasional bottoming may cost more in overall suspension performance than it is worth.

A spring that is too stiff for your weight will not allow the rear tyre to hook up under acceleration and will pass more bumps on to you.

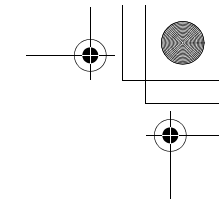

Suspension Adjustments for Track Conditions

Soft Surface

On soft ground, sand, and especially mud, consider increasing compression damping front and rear.






Sand often requires a bit more rebound damping to minimize rear end kick. Although sand bumps are usually larger, there's more distance between them, giving the shock more time to recover.

You may want a little bit stiffer front suspension for sand tracks to help keep the front end up and improve straight-line stability.

In a muddy event, stiffer aftermarket springs front and rear may help, especially if you are heavier than the average rider. Your CRF may be under-sprung because of the added weight of the clinging mud. This additional weight may compress the suspension too much and affect traction.

Hard Surface

For a fast, hard track with no large jumps, you can probably run the same spring as normal, but run softer damping both ways-compression and rebound. If you run softer rebound damping, the wheel will follow the rough ground and small bumps much better, and you will hook up better. With a lot of rebound damping, the wheel returns very slowly and doesn't contact the ground quickly enough after each bump. The result is a loss of traction and slower lap times.

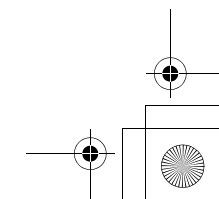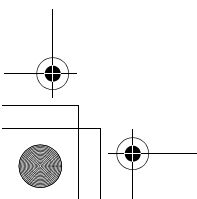

Suspension Adjustment Guidelines

Follow the procedures described below to accurately adjust your CRF, using the methods described on pages 145 – 154. Remember to make all adjustments in one-click or 1/12 turn increments. Test ride after each adjustment.

Front Suspension Adjustment Adjustments for Type of Track

Hard-surfaced track	Begin with the standard setting. If the suspension is too stiff/soft, adjust according to the chart below.
Sand track	Adjust to a stiffer position. Example: – Turn the compression damping adjuster to a stiffer position. – Install the optional stiff spring. (Adjust compression damping to a softer position and rebound damping to a stiffer position at this time.)
Mud track	Adjust to a stiffer position because mud build-up increases your CRF's weight. Example: – Turn the compression damping adjuster to a stiffer setting. – Install the optional stiff spring.

Adjustments for Too Soft/Stiff Damping

	Symptom	Action
Soft suspension	Initial travel too soft: • Steering is too quick. • Front end darts while cornering or riding in a straight line.	– Test stiffer compression damping adjustments in one-click increments. – Test stiffer rebound damping in one-click increments.
	Middle travel too soft: • Front end dives when cornering.	If suspension isn't stiff in initial travel: – Test stiffer compression damping adjustments in one-click increments. If initial travel becomes stiff because of the above adjustment: – Reduce the rebound damping in one-click increments. – Test softer compression damping adjustments in one-click increments. If that doesn't solve the problem, install the optional stiff spring.
	Final travel too soft: • Bottoms on landings. • Bottoms on large bumps, especially downhill bumps.	If initial and middle travel aren't stiff: – Test stiffer compression damping adjustments in one-click increments. If initial and middle travel are stiff: – Install the optional stiff spring. If initial travel is stiff after installing the optional stiff spring: – Test softer compression damping adjustments in one-click increments. If initial travel is still soft after installing the optional stiff spring: – Test stiffer compression damping adjustments in one-click increments. If final travel is still soft after installing the optional stiff spring: – Increase the fork oil capacity in increments of 5 cm ³ (0.2 US oz, 0.2 Imp oz).
	Entire travel too soft: • Front end shakes. • Fork bottoms over any type of terrain.	– Install the optional stiff spring. – Test stiffer compression damping adjustments in one-click increments. – Increase rebound damping in one-click increments.

Suspension Adjustment Guidelines

	Symptom	Action
Stiff suspension	Initial travel too stiff: • Stiff on small bumps while riding at full throttle in a straight line. • Stiff on small cornering bumps. • Front end wanders while riding at full throttle in a straight line.	– Test softer compression damping adjustments in one-click increments. – Reduce the rebound damping adjustments in one-click increments. – Check for dirt in the dust seals. Check the fork oil for any contamination. If the front end dives while cornering after the above adjustment: Reduce the rebound damping in one-click increments. If that doesn't solve the problem, install the optional stiff spring. If the stiff spring makes the suspension too stiff over the full range of travel: test softer compression damping adjustments in one-click increments until the desired compression damping for initial travel is obtained.
	Middle travel too stiff: • Stiff on bumps when cornering. • Front end wanders when cornering. • Stiff suspension on bumps, especially downhill bumps. • While braking, front end dives during initial travel, then feels stiff.	If initial travel isn't stiff: – Test stiffer compression damping adjustments in one-click increments. (This should produce smooth fork action from initial to middle travel.) If initial and middle travel is stiff: – Test softer compression damping adjustments in one-click increments. – Reduce the rebound damping in one-click increments.
	Final travel too stiff: • Doesn't bottom on landings, but feels stiff. • Stiff on large bumps, especially downhill bumps. • Stiff on large bumps when cornering.	If initial and middle travel aren't stiff: – Test stiffer compression damping adjustments in one-click increments. (This should produce smooth fork action from initial to middle travel.) If final travel is still stiff after the above adjustment, or If initial and middle travel becomes stiff: – Install the optional soft spring. – Test softer compression damping adjustments in one-click increments. If the entire travel feels stiff after the above adjustment: – Test softer compression damping adjustments in one-click increments until the desired initial travel compression damping is obtained. – Lower the oil capacity by 5 cm³ (0.2 US oz, 0.2 Imp oz).
	Entire travel too stiff: • Stiff suspension on any type of terrain.	– Test softer compression damping adjustments in one-click increments. – Reduce the rebound damping in one-click increments. – Lower the oil capacity by 5 cm³ (0.2 US oz, 0.2 Imp oz).

Suspension Adjustment Guidelines

Rear Suspension Adjustment Adjustments for Type of Track

Hard-surfaced track	Begin with the standard settings. If the suspension is too stiff/soft, adjust according to the chart below.
Sand track	Lower the rear end (to improve front wheel stability) by increasing Race Sag (reduce spring pre-load). Example: – Turn the compression damping adjuster and, especially, rebound damping adjuster to a stiffer setting. – Increase standard Race Sag (+5 to 10 mm/0.2 to 0.4 in).
Mud track	Adjust to a stiffer position because mud build-up increases your CRF's weight. Example: – Adjust the compression and rebound damping adjusters to stiffer settings. – Install an optional stiff spring. – Reduce standard Race Sag (–5 to –10 mm/–0.2 to –0.4 in).

Symptoms and Adjustment

- Always begin with the standard settings.
- Turn the low speed compression and rebound adjusters in one-click increments, and the high speed compression adjuster in 1/12 turn increments at a time. Adjusting two or more clicks or turns at a time may cause you to pass over the best adjustment. Test ride after each adjustment.
- If, after setting, the suspension feels unusual, find the corresponding symptom in the table and test stiffer or softer compression and/or rebound damping adjustments until the correct settings are obtained as described.

	Symptom	Action
Stiff suspension	Suspension feels stiff on small bumps	1. Test softer low speed compression adjustment. 2. If it still feels stiff, further test softer low and high speed compression adjustments simultaneously.
	Suspension feels stiff on large bumps	1. Test softer high speed compression adjustment. 2. If it still feels stiff, further test softer low and high speed compression adjustments simultaneously.
	Entire travel too stiff	1. Test softer high and low speed compression adjustments and rebound adjustment simultaneously. 2. If it still feels stiff, replace the spring with an optional soft spring and begin with the standard settings to softer settings.
Soft suspension	Entire travel too soft	1. Test stiffer high and low speed compression adjustments simultaneously. 2. If it still feels soft, replace the spring with an optional stiff spring and begin with the standard settings to stiffer setting.
	Rear end sways	1. Test stiffer high and low speed compression adjustments and rebound adjustment to stiffer settings simultaneously.
Suspension bottoms	Suspension bottoms at landing after jumping	1. Test stiffer high speed compression adjustment. 2. If it still bottoms, test stiffer high and low speed compression adjustments, and replace the spring with a stiff spring (optional) if necessary.
	Suspension bottoms after landing	1. Test stiffer low speed compression adjustment. 2. If it still bottoms, test stiffer high and low speed compression adjustments, and replace the spring with a stiff spring (optional) if necessary.
	Suspension bottoms after end of continuous bumps	1. Test softer rebound damping adjustment. 2. If it still bottoms, test stiffer high and low speed compression adjustments and softer rebound damping adjustment, and replace the spring with an optional stiff spring if necessary.

Tuning Tips

An optional PGM-FI setting tool can change the ignition timing and amount of the fuel injection (page 186).

Be sure to observe the PGM-FI setting by checking the spark plug.

Spark Plug Reading

Refer to *Spark Plug* on page 82.

The following procedure is recommended. You may not get an accurate reading if you simply turn off the engine and pull the plug for inspection.

Use a new spark plug. Inspect the plug before installing it.

NOTICE

Using spark plugs with an improper heat range or incorrect reach can cause engine damage.

Ride for 10 – 15 minutes before taking a plug reading. A new plug will not colour immediately.


Before removing the spark plug, clean the spark plug area thoroughly to prevent dirt from entering the cylinder.

To obtain an accurate reading of a new spark plug:

1. Accelerate at full throttle on a straight.
2. Depress and hold the engine stop button and pull the clutch lever in.
3. Coast to a stop.
4. Remove the spark plug.
5. Use a magnifying glass to inspect the spark plug. The porcelain insulator (1) around the centre electrode (2) should appear clean and colourless with a gray ring around the centre electrode where it exits the porcelain. Light gray or white colour streaks on the porcelain insulator and centre electrode indicate lean air-fuel mixture. Wet or black sooty streaks on the porcelain indicate rich air-fuel mixture.

NOTICE

An improperly tightened spark plug can damage the engine. If a plug is too loose, the piston may be damaged. If a plug is too tight, the threads may be damaged.

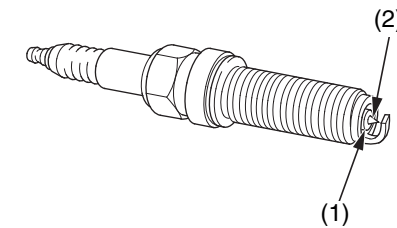

(1) porcelain insulator (2) centre electrode

Spark Plug Colouring Guidelines

Condition	Spark Plug Appearance	Mixture
Normal	Dark brown to light tan colour with dry electrode	correct
Overheating (Lean)	Light gray or white colour	lean
Wet (Rich)	Wet or sooty	rich

Remember that in addition to improper air-fuel mixture:

- A lean condition can be caused by air leaks in the inlet tract or exhaust system, the passage of too much air because of the use of the wrong air cleaner, or use of a less-restrictive aftermarket exhaust system.
- A rich condition can be caused by a plugged or dirty air cleaner, use of a more-restrictive aftermarket exhaust system, or excessive oil on the air cleaner.
Excessive smoking will occur.

Chassis Adjustments

The following suggestions may improve a specific concern. Subtle changes in overall handling may also be noted.

Rear End

If you have a problem with rear wheel traction, raise the rear end of your CRF by increasing the rear suspension spring pre-load. Instead of running 100 mm (3.9 in) of sag, you can run 90 mm (3.5 in) so the rear of the motorcycle will sit a little higher. This should produce more traction because of the change to the swingarm and location of your CRF's centre of gravity.

If you have a problem with the steering head shaking when you use the front brake hard or if your CRF wants to turn too quickly, lower the rear of the motorcycle by reducing the rear suspension spring pre-load. This will increase fork rake and trail and should improve stability in a straight line. The effective suspension travel will be transferred toward the firmer end of wheel travel.


Keep the race sag adjustment (page 152) in the 95 – 115 mm (3.7 – 4.5 in) range.

Fork Height/Angle

The position of the fork in the clamp is not adjustable.

Standard Position

The groove (1) in the outer tube is aligned with the top surface of the upper fork bridge (2).

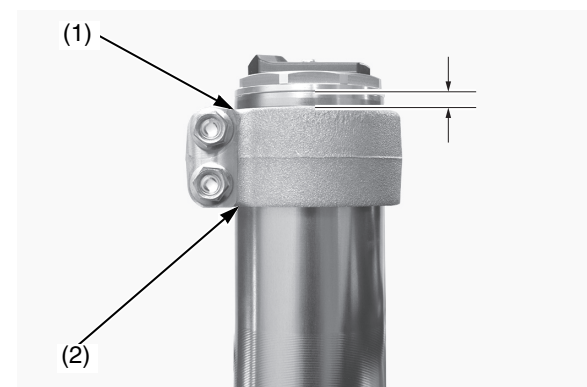

(1) groove
(2) upper fork bridge


Wheelbase

Adjusting your CRF's wheelbase can offer subtle changes in overall handling. You may adjust wheelbase by adding or removing links on the drive chain. If you change the wheelbase, be sure to recheck race sag and adjust, if necessary.

In the past, a general rule was lengthen the wheelbase to add straight line stability, shorten the wheelbase to improve turning. However, we suggest you do not lengthen the wheelbase of your CRF unless you are racing on a track with more fast sections than normal.

As a general recommendation, keep the wheelbase as short as possible. This positions the wheels closer together, improves turning response, increases weighting (traction) on the rear wheel, and lightens weighting on the front wheel.

With your CRF, you will probably find that the standard setting or a shorter wheelbase will offer more overall benefits.

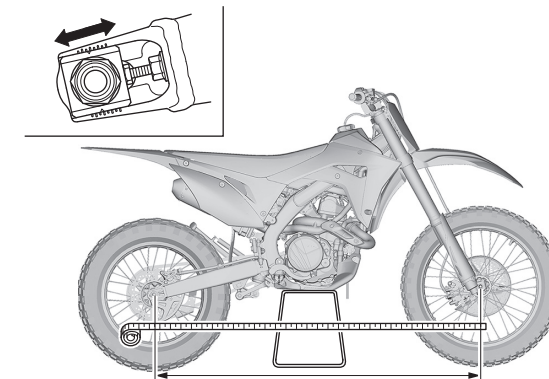

Gearing

You can “adjust” the power delivery of the standard engine to suit track conditions by changing gearing. This allows you to utilize a different portion of the engine’s power range at a given throttle setting. New gearing may provide the change you are looking for without the need to consider further modifications.

The portion of your engine’s power range you use can be adjusted by changing the final drive ratio with different sized driven sprockets. Gearing changes allow you to more closely match the type of terrain and the available traction.

Normally, a change of one tooth on the driven sprocket will be sufficient.

There is a choice of both higher and lower final drive ratios with two optional driven sprockets. Like the optional springs, these sprockets are listed in the Optional Parts List section of this manual (page 185).

Unless you have the required mechanical know-how, tools, and an official Honda Shop Manual, sprocket changing should be done by your dealer.

Higher Gearing (less driven sprocket teeth)

- increases top speed in each gear (provided the engine will pull the higher gearing)
- reduces frequency of shifting (wider gear ratios)
- reduces engine min^{-1} (rpm) at a given throttle setting or ground speed (which may allow better rear wheel traction on slippery or loose terrain)

However:

- the engine may not pull the higher gearing
- the spacing between gears may be too wide
- engine min^{-1} (rpm) may be too low

Lower Gearing (more driven sprocket teeth)

- decreases top speed in each gear
- increases frequency of shifting (narrower gear ratios)
- increases engine min^{-1} (rpm) at a given throttle setting or ground speed (which may provide more power-to-the-ground on good traction surfaces)

However:

- spacing between gears may be too narrow
- engine min^{-1} (rpm) may be too high

Some tracks may be watered heavily prior to the first race (CRF450RX)/heat (CRF450R), then lightly or not at all during the day.

This results in a track surface that is slippery during the first few races (CRF450RX)/heats (CRF450R), then changes from good to great and back to good and possibly ends the day with a slick rock-hard consistency.

Ideally, your gearing should be adjusted to suit all these conditions.

- Wet and slippery or sandy conditions: use a higher gear (less teeth) to keep engine min^{-1} (rpm) down, and avoid unwanted wheelspin. The engine may bog in certain corners so you’ll need to slip the clutch to compensate; downshifting may be too drastic a change in speed.
- Average conditions: use the standard sprocket.
- Hard (but not slippery) track conditions: use lower gearing (more teeth) to keep the engine min^{-1} (rpm) high where the engine produces the most power. This may require an extra upshift on certain sections or perhaps you can just rev it out a bit longer.

For tight tracks, consider lower gearing to avoid having to slip the clutch frequently. Repeated fanning or pulling of the clutch lever in a turn to raise engine min^{-1} (rpm) may eventually damage the clutch system.

A gearing change may help for riding in sand, where you want to keep the front end light so it can float from the peak of one sand whoop to the next. Generally, with higher gearing, it is easier to maintain that perfect attitude (maximum rear wheel traction and a light front end) because you remain in the powerband longer in each gear. The higher gearing allows you to steer more efficiently with throttle control and body English.

If you are riding a track with sections where you choose to over-rev the engine temporarily rather than shifting up, higher gearing might help.

Sometimes you have to sacrifice performance on one section of the track to gain a better overall time. Your goal is the fastest overall lap time, even if the cost is some sections where the gearing feels wrong.

If you decide to try a gearing change, have someone check your times with a stopwatch (before and after the change) to get an accurate appraisal of the change. “Seat-of-the-pants” feelings can’t be trusted. Eliminating wheelspin with a gearing change can make you feel like you’re going slower when, in reality, you’ve decreased your time by increasing your speed with better traction.

These gearing recommendations should be evaluated by considering your ability, your riding style, and the track.

Tyre Selection for Track Conditions

Choosing the correct tyre tread pattern and rubber compound can affect your placing in competition. The tyres on your CRF offer a “happy medium” for the variety of soil conditions the majority of riders are likely to encounter.

Experienced competitors often switch to tyres developed for specific terrain conditions. If you do switch, stay with the factory recommended sizes. Other tyres may affect handling or acceleration.

Be aware that tyre sizes (width and aspect ratio) do vary from manufacturer to manufacturer or even among tyres made by the same manufacturer. Variations in tyres, especially the sidewall profile, can change the attitude of your CRF and its handling. Tyre variations that raise or lower the rear of your CRF have a more significant effect on handling than variations in front tyres which, generally, don't vary as much. Often, you can see or feel the change in tyre size. Another way to check is to measure the rolling circumference of the old and new tyres. A higher profile tyre will have a larger rolling circumference.

If you do switch to tyres designed for special terrain use, remember they will be less acceptable in other circumstances. For example, an aggressive mud tyre will give excellent grip on wet, loamy terrain, but less impressive grip on a hard surface.

If you choose a tyre with a sticky compound for added traction, remember that it may transfer additional loads to the transmission because it grips so well, especially when riding in situations that normally place unusual demands on the transmission.

Complete consumer information can be obtained from the various tyre manufacturer representatives and dealers.

Some general recommendations for specific terrain follow:

Hard, Slick Soil

Use tyres with many relatively short knobs that are close together in order to obtain the largest possible contact patch on the surface. The rubber compound needs to be softer for hard ground in order to hook up, but not so soft that the knobs roll over easily and affect holding a straight line. These tyres tend to wear more quickly than standard tyres because of the combination of soft rubber and hard terrain.

Muddy Soil

Use a more open tread pattern to avoid clogging. For these conditions, the relatively long knobs will probably be made from a harder rubber compound to reduce any tendency to bend back under acceleration or wear quickly.

Loose, Sandy Soil

Use a tyre that is similar in construction to those needed for tacky soil and mud, but with a few more knobs.


Personal Fit Adjustments

The following suggestions may make your ride both more comfortable and more responsive to your control input.

Control Positioning

- Position the control levers so that you can use them comfortably when seated and standing.
- Adjust the mounting bolt (1) torque of the clutch and front brake lever assemblies so that they can rotate on the handlebar in a fall. If an assembly does not rotate, it may bend or break a control lever. Make sure that the bolts are torqued securely enough to prevent slippage during normal operation.


Apply Honda Thread Lock or an equivalent to the threads of these bolts prior to adjustment to help ensure the correct torque is retained. Tighten the top bolts first.

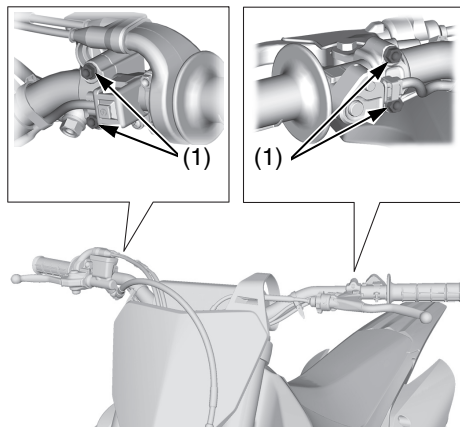

(1) control lever mounting bolts

As an alternative, consider wrapping the handlebar area under the control assemblies with Teflon tape. Then tighten the assemblies to their normal torque. Upon impact, the fully-tightened assemblies should rotate on the Teflon tape.


- Position the shift lever and rear brake pedal so they are close to your boot for rapid access, but not so close that either is depressed when sitting or standing comfortably on your CRF.

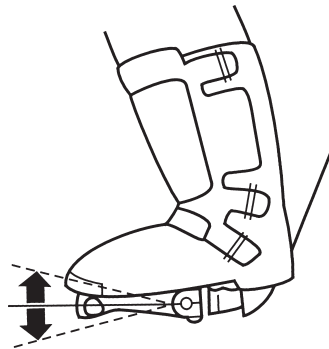

Handlebar Position, Width & Shape

- Position the handlebar so that both gripping the bar and operating the controls are comfortable while both seated and standing, while riding straight ahead and turning.

Handlebar standard position

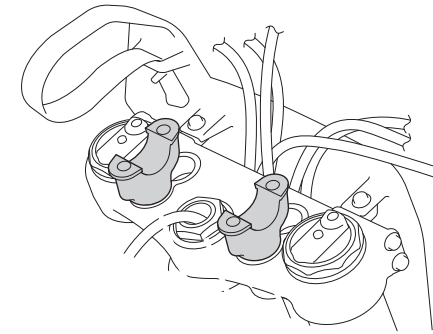

- The handlebar position may be moved backward 10 mm (0.4 in) by rotating the handlebar lower holders 180 degrees.
- The handlebar position may be moved forward 26 mm (1 in) by changing the position where the handlebar under holder bolts is inserted into the fork bridge holes.


Personal Fit Adjustments

Position chart







Handlebar position	Handlebar lower holders position	Handlebar lower holders
Forward 1 in (26 mm)	Front holes of fork bridge	No change
Forward 0.6 in (16 mm)	Front holes of fork bridge	Rotating 180 degrees
Standard	Rear holes of fork bridge	No change
Backward 0.4 in (10 mm)	Rear holes of fork bridge	Rotating 180 degrees



Refer to an official Honda Shop Manual for installation instructions. Be sure to check control cable and wiring harness routing after the adjustment.

- Handlebar width can be trimmed with a hacksaw to better suit your particular shoulder width and riding preference. Think this through carefully and cut off just a small amount at a time from both sides equally. It is obviously much easier to make the handlebar narrower than it is to add material.

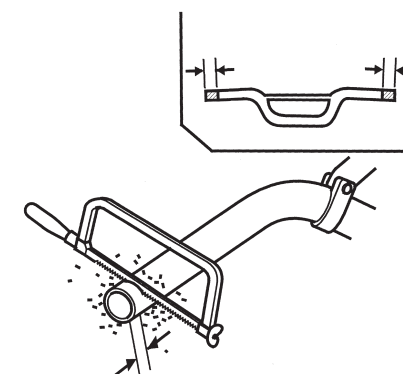

- Chamfer the edges to remove burrs and other irregularities or roughness after sawing the handlebar.
- An alternate handlebar shape, through varying rise or rearward sweep dimensions, will provide further adjustment to riding position and may better suit your particular body size or riding style. Each of the ergonomic dimensions of the machine was determined to suit the greatest possible number of riders based on an average size rider.

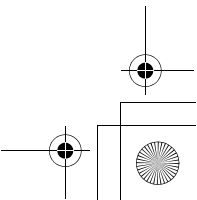
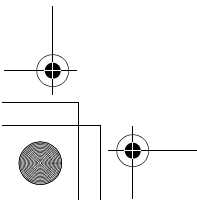


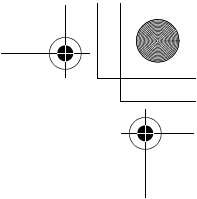


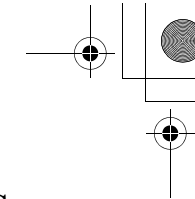

Tips

Here's helpful advice on how to transport and store your CRF, as well as three troubleshooting flow charts.


Transporting Your Motorcycle	166
Storing Your Honda	167
Preparation for Storage	167
Removal from Storage	167
You & the Environment	168
Troubleshooting	169

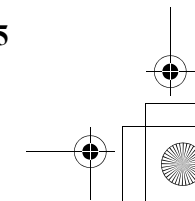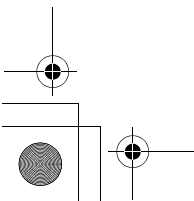

Transporting Your Motorcycle

If you use a truck or motorcycle trailer to transport your Honda, we recommend that you follow these guidelines:

- Use a loading ramp.
- Relieve the fuel pressure (pages 47, 57) and drain the fuel from the fuel tank into an approved petrol container.
- Secure the motorcycle in an upright position, using motorcycle tie-down straps. Avoid using rope, which can loosen and allow the motorcycle to fall over.

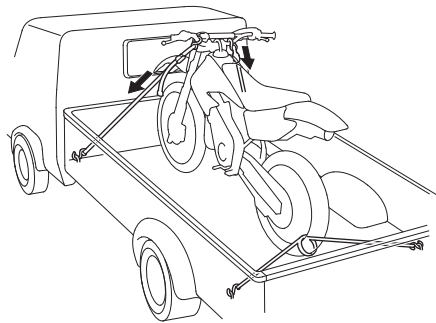

To secure your CRF, brace the front wheel against the front of the truck bed or trailer rail.

Attach the lower ends of two straps to the tie-down hooks on truck bed or trailer rail. Attach the upper ends of the straps to the handlebar (one on the right side, the other on the left), close to the fork.

Check that the tie-down straps do not contact any control cables or electrical wiring.

Tighten both straps until the front suspension is compressed about half-way. Too much pressure is unnecessary and could damage the fork seals.

Use another tie-down strap to keep the rear of the motorcycle from moving.

We recommend that you do not transport your CRF on its side. This can damage the motorcycle, and leaking petrol could be a hazard.


Storing Your Honda

If you won't be riding for an extended period, such as during the winter, thoroughly inspect your CRF and correct any problem before storing it. That way, needed repairs won't be forgotten and it will be easier to get your CRF running again.


To reduce or prevent deterioration that can occur during storage, also follow the following procedures.

Preparation for Storage

1. Completely clean all parts of your CRF. If your CRF has been exposed to sea air or salt water, wash it down with fresh water and wipe dry.
2. Remove the engine guard A bolts/washers (1), B bolt/washer (2) and engine guard (3).
3. Change the engine oil and filter (page 67).

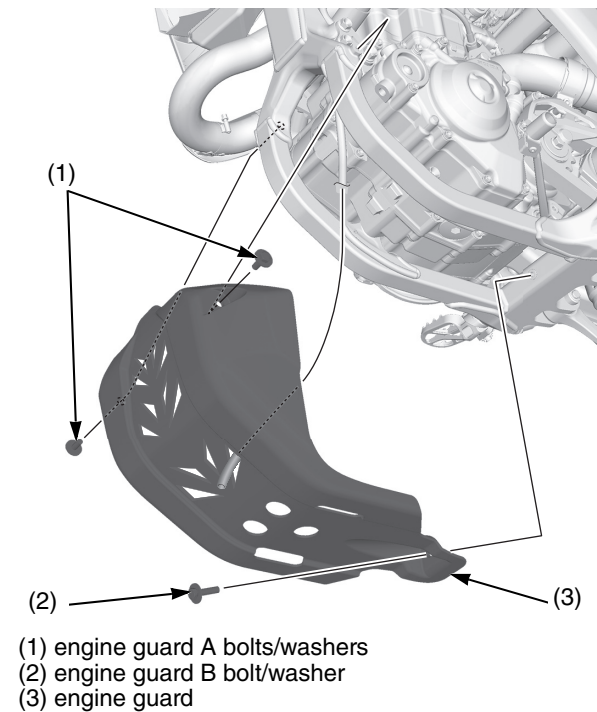

4. Remove the radiator cap and coolant drain bolt (4) and sealing washer (5) at the water pump cover (6) to drain coolant. After the coolant has been completely drained, reinstall the drain bolt with a new sealing washer and radiator cap. Tighten the drain bolt to the specified torque: 10 N·m (1.0 kgf·m, 7 lbf·ft)

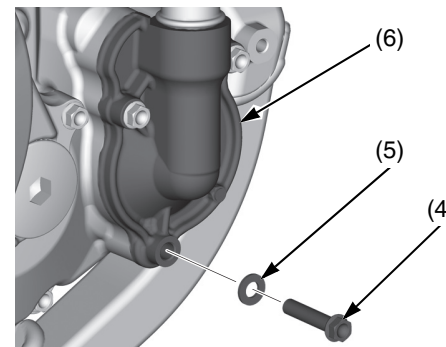

5. Install the engine guard (3), then tighten the engine guard A bolts/washers (1) and B bolt/washer (2) to the specified torque: 10 N·m (1.0 kgf·m, 7 lbf·ft)
6. Lubricate the drive chain.
7. Relieve the fuel pressure (pages 47, 57) and drain the fuel from the fuel tank into an approved petrol container.
8. Remove the battery. Store in an area protected from freezing temperatures and direct sunlight. Slow charge the battery (page 137) once a month.
9. Inflate the tyres to their recommended pressures.
10. Place your CRF on an optional workstand or equivalent to raise both tyres off the ground.
11. Stuff a rag into the muffler outlet. Then tie a plastic bag over the end of the muffler to prevent moisture from entering.

12. Store your CRF in an unheated area, free of dampness, away from sunlight, with a minimum of daily temperature variation.
13. Cover your CRF with a porous material. Avoid using plastic or similar non-breathing, coated materials that restrict air flow and allow heat and moisture to accumulate.

Removal from Storage

1. Uncover and clean your CRF. Change the engine oil if more than 4 months have passed since the start of storage.
2. Uncover the end of the muffler and remove the rag from the muffler outlet.
3. Fill the fuel tank with the recommended fuel (pages 46, 56).
4. Charge the battery (page 137) as required. Install the battery.
5. Pour a fresh recommended coolant mixture slowly into the radiator fill hole up to the filler neck (page 69).
Capacity:
(CRF450RX)
1.15 ℓ (1.22 US qt, 1.01 Imp qt)
after disassembly
1.07 ℓ (1.13 US qt, 0.94 Imp qt)
after draining
(CRF450R)
1.13 ℓ (1.19 US qt, 0.99 Imp qt)
after disassembly
1.07 ℓ (1.13 US qt, 0.94 Imp qt)
after draining

Lean your CRF slightly right and left several times to bleed trapped air in the cooling system. If the coolant level lowers, add coolant and repeat the above procedure. Install the radiator cap securely.
6. Increase the fuel pressure (pages 55, 65).
7. Perform all maintenance checks (page 17).

You & the Environment

Owning and riding a motorcycle can be enjoyable, but you must do your part to protect nature. When you show respect for the land, wildlife, and other people, you also help preserve the sport of off-road riding.

Following are tips on how you can be an environmentally responsible motorcycle owner.

- **Choose Sensible Cleaners.** Use a biodegradable detergent when you wash your CRF. Avoid aerosol spray cleaners that contain chlorofluorocarbons (CFCs) which damage the atmosphere's protective ozone layer. Don't throw cleaning solvents away; see the following guidelines for proper disposal.
- **Recycle Wastes.** It's illegal and thoughtless to put used engine oil in the trash, down a drain, or on the ground. Used oil, petrol, coolant, and cleaning solvents contain poisons that can hurt refuse workers and contaminate our drinking water, lakes, rivers, and oceans. Before changing your oil, make sure you have the proper containers. Put oil and other toxic wastes in separate sealed containers and take them to a recycling centre. Call your local of public works or environmental services to find a recycling centre in your area and get instructions on how to dispose of non recyclable wastes.

NOTICE

Improper disposal of drained fluids is harmful to the environment.

Troubleshooting

The items that are serviceable using this Manual are followed by the page number reference the parenthesis. The items that require use of an official Honda Shop Manual are followed by an asterisk (*).

ENGINE DOES NOT START OR IS HARD TO START

Operate the start button with the throttle grip in fully closed position (page 21).

CHECK

1. Check the starter motor*

DOES NOT TURN

POSSIBLE CAUSES

- Loose or disconnected battery terminals (P.137)
- Blown main fuse (P.172)
- Weak battery (P.137, 173)
- Faulty starter relay switch or starter motor*
- Faulty start button*
- Faulty clutch switch
- Faulty CKP sensor*

TURN

2. Check the starter/ignition relay*

INCORRECT

- Faulty starter/ignition relay

CORRECT

3. Check the spark plug condition (P.82)

INCORRECT

- Incorrect spark plug heat range
- Incorrect spark plug gap
- Dirty air cleaner element

CORRECT

4. Try spark test*

WEAK OR NO SPARK

- Faulty spark plug (P.82)
- Fouled spark plug (P.82)
- Faulty ECM*
- Broken or shorted spark plug wire
- Faulty alternator*
- Faulty ignition coil*
- Faulty engine stop button*
- Loose or disconnected ignition system wires
- Faulty CKP sensor*
- Faulty regulator/rectifier*

GOOD SPARK

5. Check the PGM-FI system (P.11)

INCORRECT

- Faulty PGM-FI system (P.13)

CORRECT

6. Check the fuel pump operation and inspect the fuel flow*

INCORRECT

- Faulty fuel pump*
- Clogged fuel pump filter

CORRECT

7. Check the fuel injector operating sound

INCORRECT

- Faulty PGM-FI system (P.13)
- Faulty fuel injector

CORRECT

8. Test cylinder compression*

LOW

- Valve clearance too small
- Valve stuck open
- Worn cylinder and piston ring*
- Damaged cylinder head gasket
- Improper valve timing*
- Seized valve

CORRECT

9. Start by following normal starting procedure

ENGINE STARTS BUT SOON STOPS

- Insulator leaking
- Improper ignition timing (Faulty ECM or CKP sensor)*
- Fast idle knob stuck open or damaged
- Fuel contaminated

ENGINE LACKS POWER

CHECK

1. Check the wheel spins smoothness

INCORRECT

- Brake dragging
- Worn or damaged wheel bearings
- Bent axle shaft
- Drive chain too tight

CORRECT

2. Check the tyre pressure (P.123)

INCORRECT

- Faulty valve core
- Punctured tyre

CORRECT

3. Check the engine speed changes accordingly when clutch is engaged*

NO GOOD

- Clutch slipping
- Improperly adjusted clutch lever freeplay (P.77)
- Worn clutch discs/plates (P.80)
- Warped clutch discs/plates (P.80)
- Weak clutch springs*
- Sticking clutch lifter
- Additive in engine oil

GOOD

4. Check the engine speed increase

NO GOOD

- Dirty air cleaner element
- Clogged muffler
- Fast idle knob stuck open or damaged
- Restricted fuel fill cap breather tube
- Restricted fuel flow

GOOD

5. Check for engine knocking when accelerate or run the engine at high speed

YES

- Worn piston and cylinder*
- Use of poor quality fuel
- Excessive carbon build-up in combustion chamber
- Ignition timing too advanced (Faulty ECM)*
- Lean fuel mixture

NO

6. Check the ignition timing*

INCORRECT

- Faulty ECM*
- Faulty CKP sensor*

CORRECT

7. Test cylinder compression*

LOW

- Valve clearance too small
- Valve stuck open
- Worn cylinder and piston ring*
- Damaged cylinder head gasket
- Improper valve timing*
- Faulty decompressor system*

CORRECT

8. Check the PGM-FI system (P.11)

INCORRECT

- Faulty PGM-FI system (P.13)

CORRECT

9. Check the fuel pump operation and inspect the fuel flow*

INCORRECT

- Faulty fuel pump unit*
- Clogged fuel pump filter

CORRECT

10. Check the spark plug condition (P.82)

INCORRECT

- Incorrect spark plug
- Incorrect spark plug gap
- Dirty air cleaner element

CORRECT

11. Check the engine oil level and condition (P.67)

INCORRECT

- Engine oil level too high
- Engine oil level too low
- Contaminated engine oil

CORRECT

12. Remove the cylinder head cover and inspect lubrication

INCORRECT

- Faulty oil pump*
- Faulty pressure relief valve*
- Clogged oil passage*
- Clogged oil strainer screen*

(cont'd)

Troubleshooting

POOR PERFORMANCE AT LOW AND IDLE SPEED

CHECK

1. Check the spark plug condition (P.82)
 - INCORRECT → Incorrect spark plug heat range
 - Incorrect spark plug gap
 - Plug not serviced frequently enough
 - CORRECT →
2. Check the ignition timing*
 - INCORRECT → Faulty ECM*
 - Faulty CKP sensor*
 - CORRECT →
3. Check the PGM-FI system (P.11)
 - INCORRECT → Faulty PGM-FI system (P.13)
 - CORRECT →
4. Check the fuel pump operation and inspect the fuel flow*
 - INCORRECT → Faulty fuel pump unit*
 - Clogged fuel pump filter
 - CORRECT →
5. Check the insulator for leaks
 - INCORRECT → Loose insulator
 - Damaged insulator
 - CORRECT →
6. Check the valve clearance (P.83)
 - INCORRECT → Faulty valve clearance
 - Faulty valve*
 - Faulty valve seat*
 - Faulty camshaft*
 - CORRECT →
7. Try spark test*
 - WEAK OR INTERMITTENT SPARK → Faulty, carbon or wet fouled spark plug (P.82)
 - Faulty ECM*
 - Faulty alternator*
 - Faulty ignition coil*
 - Broken or shorted spark plug wire
 - Faulty CKP sensor*
 - Loose or disconnected ignition system wires
 - Faulty engine stop button*
 - Faulty regulator/rectifier*

POOR PERFORMANCE AT HIGH SPEED

CHECK

1. Check the ignition timing*
 - INCORRECT → Faulty ECM*
 - Faulty CKP sensor*
 - CORRECT →
2. Check the air cleaner (P.71)
 - DIRTY → Not cleaned frequently enough
 - AIR CLEANER NOT DIRTY →
3. Check the PGM-FI system (P.11)
 - INCORRECT → Faulty PGM-FI system (P.13)
 - CORRECT →
4. Check the fuel pump operation and inspect the fuel flow*
 - INCORRECT → Faulty fuel pump unit*
 - Clogged fuel pump filter
 - CORRECT →
5. Check the valve timing
 - INCORRECT → Camshaft not installed properly (P.88)
 - CORRECT →
6. Check the valve clearance (P.83)
 - INCORRECT → Faulty valve clearance
 - Faulty valve*
 - Faulty valve seat*
 - Faulty camshaft*
 - CORRECT →
7. Check the valve springs*
 - WEAR → Faulty valve springs*
 - GOOD →
8. Try spark test*
 - WEAK OR INTERMITTENT SPARK → Faulty, carbon or wet fouled spark plug (P.82)
 - Faulty ECM*
 - Faulty alternator*
 - Faulty ignition coil*
 - Broken or shorted spark plug wire
 - Faulty CKP sensor*
 - Loose or disconnected ignition system wires
 - Faulty engine stop button*
 - Faulty regulator/rectifier*
 - GOOD SPARK →
9. Remove and inspect the cam lobe height*
 - WORN → Faulty camshaft*
 - CORRECT →

POOR HANDLING

Steering is heavy


- Steering stem adjusting nut too tight*
- Damaged steering head bearings

Either wheel is wobbling

- Excessive wheel bearing play
- Bent rim
- Improperly installed wheel hub
- Excessively worn swingarm pivot bearings
- Bent frame

The motorcycle pulls to one side






- Front and rear wheels not aligned
- Bent fork
- Bent swingarm
- Bent axle shaft
- Bent frame

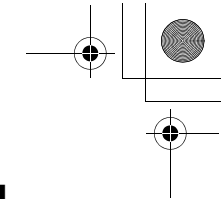

Taking Care of the Unexpected

This section gives practical advice to help you solve problems.

If a Fuse Blows 172
If Your Battery Is Low (or Dead) 173

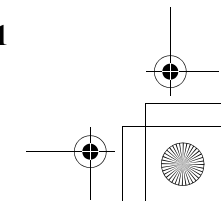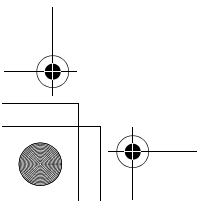

If a Fuse Blows

All of the electrical circuits on your CRF have a fuse to protect them from damage caused by excess current flow (short circuit or overload).


If something electrical on your CRF stops working, the first thing you should check for is a blown fuse. Check the fuse before looking elsewhere for another possible cause of the problem. Replace a blown fuse and check component operation.

- The main fuse (and spare) are located on the starter magnetic switch behind the right side cover.

Recommended Main Fuse: 10A

1. To prevent an accidental short circuit, stop the engine.
2. Remove the seat (page 38).
3. Disconnect the negative (–) terminal (page 136).
4. Remove the right side cover and right air cleaner housing cover (page 130).

5. Remove the start magnetic switch stay bolt (1) and plastic wire band (2).
6. Pull out the start magnetic switch (3).
7. Remove the start magnetic switch cover (4).
8. Pull out the main fuse (5). If it is blown (6), install the spare main fuse (7).

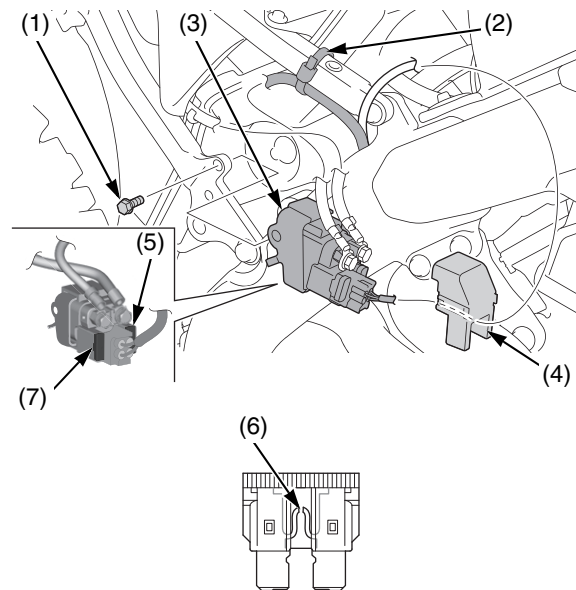

- (1) start magnetic switch stay bolt
- (2) wire band
- (3) start magnetic switch
- (4) start magnetic switch cover
- (5) main fuse
- (6) blown fuse
- (7) spare main fuse

9. Install the start magnetic switch cover (4).
10. Install the start magnetic switch (3).
Install and tighten the start magnetic switch stay bolt (1) to the specified torque:
12 N·m (1.2 kgf·m, 9 lbf·ft)
11. Install the plastic wire band (2).
12. Connect the negative (–) terminal (page 137).

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.

If you replace a blown fuse with a spare fuse that has a lower rating, replace the fuse with the correct rating as soon as you can. Also remember to replace the spare fuse that was installed.

If the replacement fuse of the same rating burns out in a short time, there is probably a serious electrical problem on your CRF.

Leave the blown fuse in that circuit and have your CRF checked by your dealer.

13. Install the right side cover, right air cleaner housing cover and bolts.
14. Install the seat (page 38).

If Your Battery Is Low (or Dead)

If an overvoltage, overcurrent, or short circuit is applied, the battery fuse may blow.







Do not jump-start as this can damage your CRF's electrical system and battery.


Bump starting is not recommended.

Check the battery voltage using a digital multi meter with the cable connected.

Below 1V: The battery has failed; replace the battery.

Between 1V and 8V: The battery may have failed; charge the battery and then recheck. If you can't charge the battery or it appears unable to hold a charge, see your dealer.

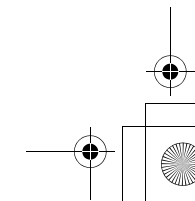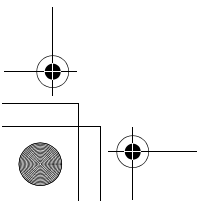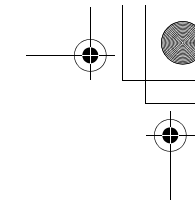

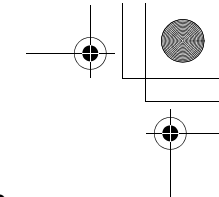

Technical Information

This section contains dimensions, capacities, and other technical data.


Vehicle Identification.....	176
Serial Numbers	176
Specifications	177
Torque Specifications	179
Nuts, Bolts, Fasteners	179
Petrol Containing Alcohol	182
Competition Logbook	183
Optional Parts List	185
Spare Parts & Equipment.....	186
Spare Parts	186
General Tools.....	186
Honda Special Tools.....	186
Chemical Products	186
Other Products	186
Wiring Diagram	187

Vehicle Identification

Serial Numbers


The VIN and engine serial number are required when you register your CRF. They may also be required when ordering replacement parts.

The VIN (vehicle identification number) (1) is stamped on the right side of the steering head.

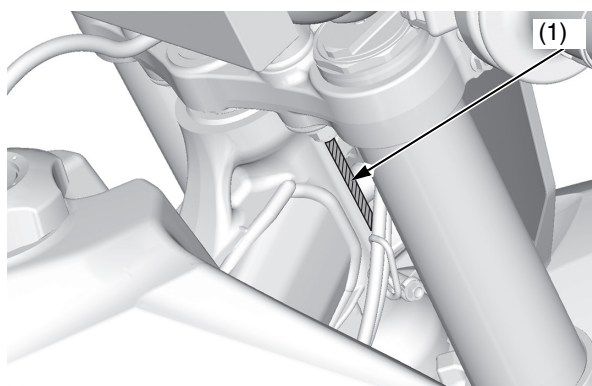

(1) VIN

The engine number (2) is stamped on the right crankcase.

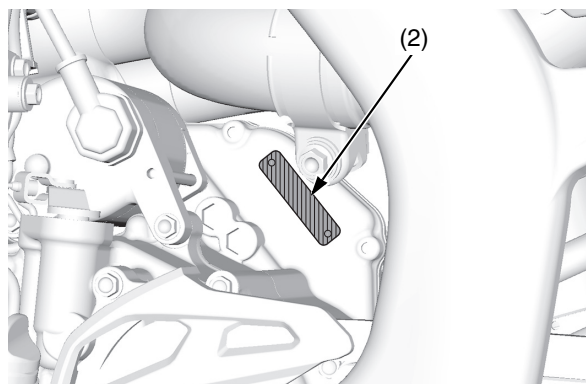

(2) engine number

Specifications

Item	Metric	English
Dimension		
Overall length	CRF450RX: 2,175 mm CRF450R: 2,183 mm	CRF450RX: 85.6 in CRF450R: 85.9 in
Overall width	827 mm	32.6 in
Overall height	CRF450RX: 1,259 mm CRF450R: 1,260 mm	49.6 in
Wheelbase	CRF450RX: 1,477 mm CRF450R: 1,482 mm	CRF450RX: 58.1 in CRF450R: 58.3 in
Seat height	CRF450RX: 959 mm CRF450R: 960 mm	37.8 in
Footpeg height	CRF450RX: 417 mm CRF450R: 418 mm	CRF450RX: 16.4 in CRF450R: 16.5 in
Ground clearance	328 mm	12.9 in
Frame		
Type	Twin tube	
F. suspension	Telescopic fork, travel 268 mm (10.55 in) stroke 305 mm (12.01 in)	
R. suspension	Pro-link, CRF450RX: travel 312 mm (12.28 in) CRF450R: travel 314 mm (12.36 in)	
Tyre size, front	CRF450RX: 90/90-21 54M CRF450R: 80/100-21 51M	
	DUNLOP	CRF450RX: AT81F CRF450R: MX3SF
Tyre size, rear	CRF450RX: 120/90-18 65M CRF450R: 120/80-19 63M	
	DUNLOP	CRF450RX: AT81 CRF450R: MX3S

Tyre type	bias-ply, tube	
Tyre pressure, front (cold)	100 kPa (1.0 kgf/cm ² , 15 psi)	
Tyre pressure, rear (cold)	100 kPa (1.0 kgf/cm ² , 15 psi)	
F. brake, swept area	Single disc brake 361.0 cm ² (56.0 in ²)	
R. brake, swept area	Single disc brake 390.3 cm ² (60.5 in ²)	
Fuel	unleaded petrol, research octane number of 95 or higher	
Fuel tank capacity	CRF450RX: 8.5 ℓ CRF450R: 6.3 ℓ	CRF450RX: 2.25 US gal, 1.87 Imp gal CRF450R: 1.66 US gal, 1.39 Imp gal
Caster angle	CRF450RX: 27°26' CRF450R: 27°22'	
Trail length	116 mm	4.6 in
Fork oil capacity (except damper)	CRF450RX: 360 cm ³ CRF450R: 356 cm ³	CRF450RX: 12.2 US oz, 12.7 Imp oz CRF450R: 12.0 US oz, 12.5 Imp oz
Fork oil capacity (damper)	243 cm ³	8.2 US oz 8.6 Imp oz

Item	Metric	English
Engine		
Type	Liquid cooled, 4-stroke	
Cylinder arrangement	Single 10° inclined from vertical	
Bore and stroke	96.000 x 62.138 mm	3.7795 x 2.4464 in
Displacement	449.77 cm ³	27.436 cu-in
Compression ratio	13.5 : 1	
Valve clearance (cold)	Intake:0.13 ± 0.03 mm (0.005 ± 0.001 in) Exhaust:0.28 ± 0.03 mm (0.011 ± 0.001 in)	
Engine oil capacity after draining	1.00 ℓ	1.06 US qt 0.88 Imp qt
after draining and oil filter change	1.04 ℓ	1.10 US qt 0.92 Imp qt
after disassembly	1.35 ℓ	1.43 US qt 1.19 Imp qt
Throttle body		
Identification number	GQ2DA	
Idle speed	2,000 ± 100 min ⁻¹ (rpm)	
Cooling system		
Cooling capacity after draining	1.07 ℓ	1.13 US qt, 0.94 Imp qt
after disassembly	CRF450RX: 1.15 ℓ CRF450R: 1.13 ℓ	CRF450RX: 1.22 US qt, 1.01 Imp qt CRF450R: 1.19 US qt, 0.99 Imp qt

(cont'd)

Specifications


Item	Metric	English
Drive train		
Clutch type	Wet, multi-plate type	
Transmission	5-speed, constant mesh	
Primary reduction	2.357	
Gear ratio I	2.133	
Gear ratio II	1.706	
Gear ratio III	1.421	
Gear ratio IV	1.211	
Gear ratio V	1.043	
Final reduction	CRF450RX: 3.846 CRF450R: 3.769	
Gear shift pattern	Left foot-operated return system 1-N-2-3-4-5	
Electrical		
Battery	HY85S lithium-ion (li-ion) 12 V-2.0 Ah (20 HR)	
Ignition	ECM	
Starting system	Electric	
Spark plug Standard	NGK SILMAR9A-9S	
For extended high speed riding	NGK SILMAR10A-9S	
Spark plug gap	0.8 – 0.9 mm (0.031 – 0.035 in)	
Fuse		
Main fuse	10 A	

Torque Specifications


Nuts, Bolts, Fasteners

Check and tighten nuts, bolts, and fasteners before every outing.

LEFT SIDE

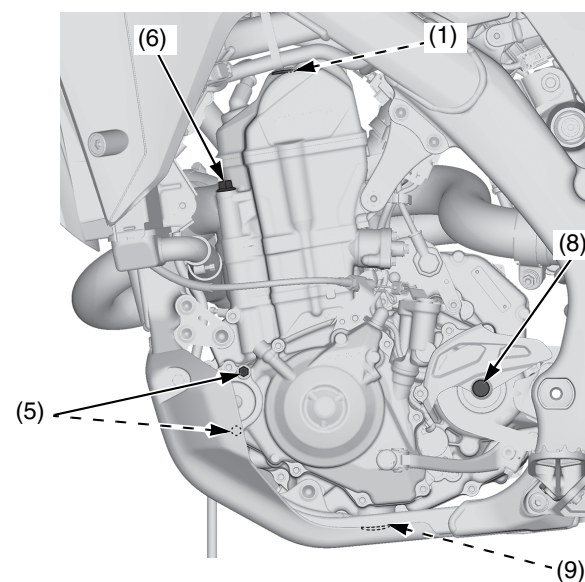

RIGHT SIDE

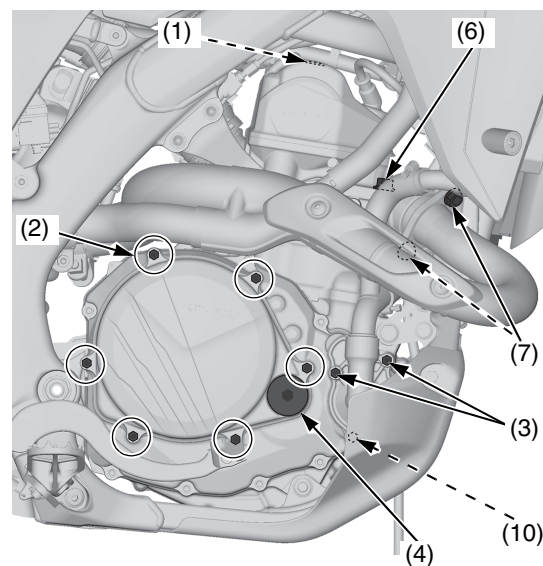

ENGINE


Item	Torque			Remarks
	N·m	kgf·m	lbf·ft	
1 Cylinder head cover socket bolts	10	1.0	7	
2 Clutch cover bolts	10	1.0	7	
3 Water pump cover bolts	10	1.0	7	
4 Crankshaft hole cap	15	1.5	11	NOTE 1
5 Oil filter cover bolts	10	1.0	7	
6 Cylinder head bolts	50	5.1	37	NOTE 2
7 Exhaust pipe joint nuts	20	2.0	15	
8 Drive sprocket bolt	31	3.2	23	
9 Engine oil drain bolt	18	1.8	13	NOTE 2
10 Coolant drain bolt	10	1.0	7	

NOTES: 1. Apply grease to the threads.
2. Apply engine oil to the threads and seating surface.


(cont'd)

Torque Specifications

LEFT SIDE

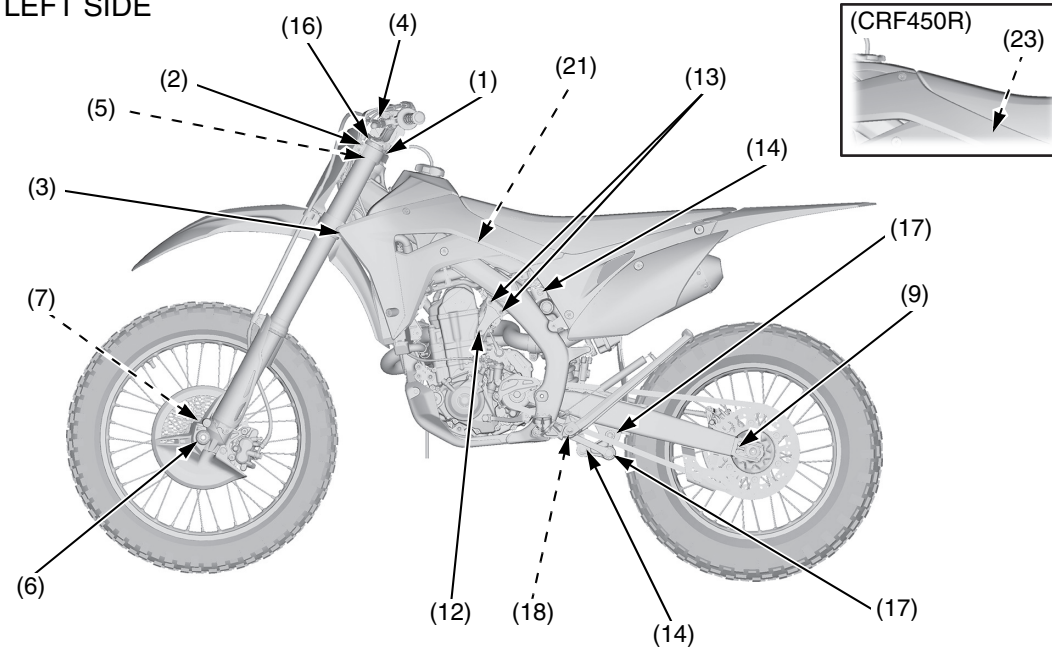

RIGHT SIDE

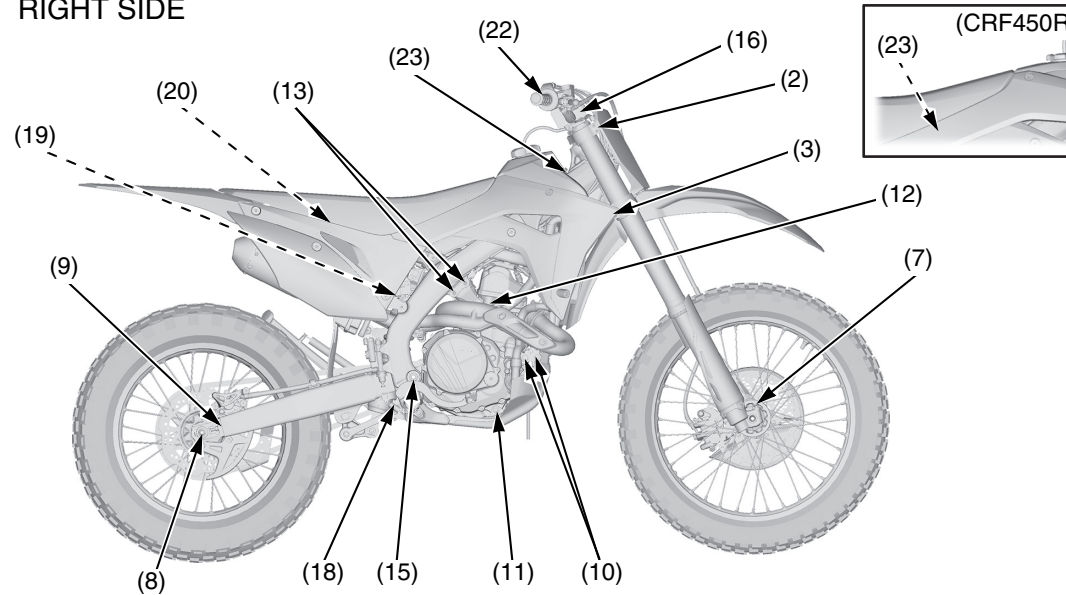


FRAME

Item	Torque			Remarks
	N·m	kgf·m	lbf·ft	
1 Steering stem nut	108	11.0	80	
2 Fork bridge upper pinch bolts	22	2.2	16	
3 Fork bridge lower pinch bolts	20	2.0	15	
4 Handlebar upper holder bolts	22	2.2	16	
5 Handlebar lower holder nuts	44	4.5	32	NOTE 1
6 Front axle nut	88	9.0	65	
7 Axle pinch bolts	20	2.0	15	
8 Rear axle nut	128	13.1	94	NOTE 1
9 Chain adjuster lock nuts	27	2.8	20	NOTE 2
10 Front engine hanger nuts	54	5.5	40	
Front engine hanger plate nuts	26	2.7	19	
11 Lower engine hanger nut	54	5.5	40	
12 Cylinder head hanger bolts	54	5.5	40	
13 Cylinder head hanger plate bolts	32	3.3	24	
14 Rear suspension (upper)	44	4.5	32	NOTE 1
(lower)	44	4.5	32	NOTE 1
15 Swingarm pivot nut	88	9.0	65	NOTE 1
16 Fork				
(fork damper assembly)	76	7.7	56	
(fork bolt assembly)	30	3.1	22	
17 Rear shock arm nuts				
(swingarm side)	52	5.3	38	NOTE 1, 5
(shock link side)	52	5.3	38	NOTE 1, 5
18 Rear shock link bolts	37	3.8	27	NOTE 1, 5
19 Rear shock spring lock nut	44	4.5	32	
20 Battery terminal bolts	2.0	0.2	1.5	
21 Fuel pump mounting bolts (CRF450RX)	11	1.1	8	
Fuel pump mounting nuts/cap nut (CRF450R)				
22 Front brake master cylinder holder bolts	9.9	1.0	7.3	
23 Fuel tank bolt (CRF450RX)	10	1.0	7	
Fuel tank bolts (CRF450R)				


NOTES: 1. U-nut
2. UBS nut
5. Apply molybdenum oil to the threads and flange surface.

Torque Specifications

LEFT SIDE

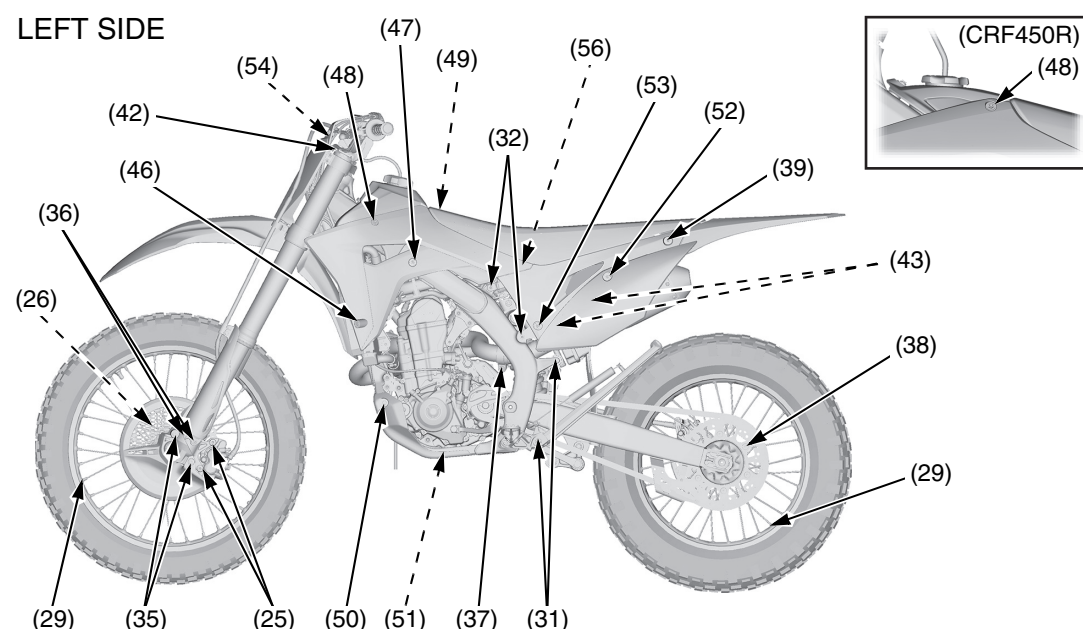

RIGHT SIDE

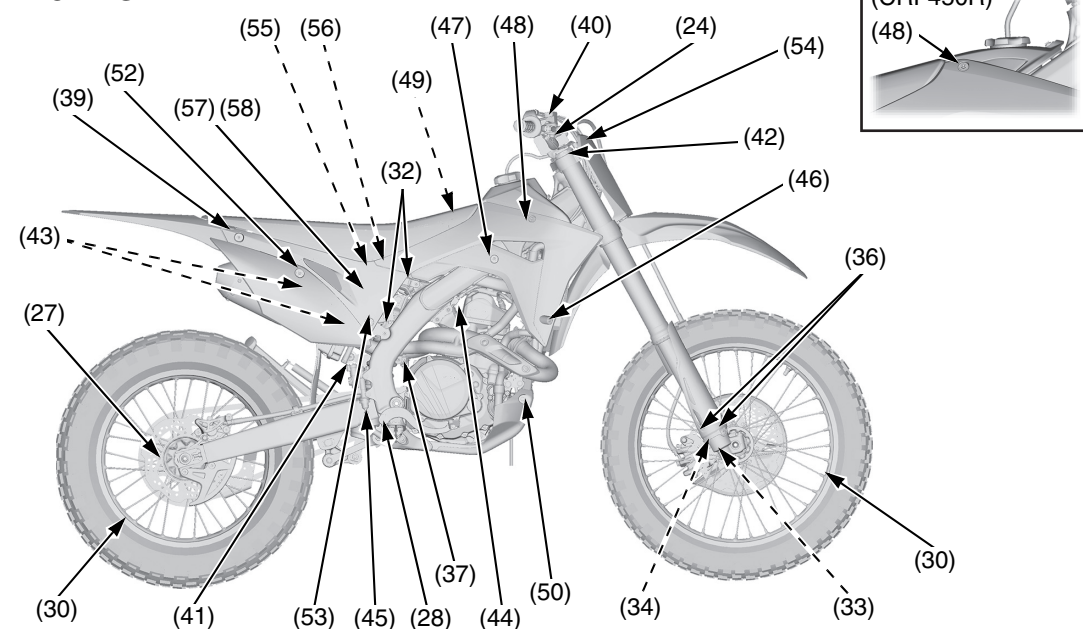

FRAME

	Item	Torque			Remarks
		N·m	kgf·m	lbf·ft	
24	Brake hose oil bolts	34	3.5	25	
25	Front brake caliper mounting bolts	30	3.1	22	
26	Front brake disc nuts	16	1.6	12	NOTE 1
27	Rear brake disc nuts	16	1.6	12	NOTE 1
28	Brake pedal pivot bolt	36	3.7	27	NOTE 4
29	Spokes (front)	3.7	0.4	2.7	
	(rear)	3.7	0.4	2.7	
30	Rim locks	12	1.2	9	
31	Drive chain roller (upper)	12	1.2	9	NOTE 4
	(lower)	12	1.2	9	NOTE 1
32	Subframe bolts (upper)	32	3.3	24	
	(lower)	49	5.0	36	
33	Fork centre bolt	69	7.0	51	
34	Fork centre bolt lock nut	28	2.9	21	
35	Disc cover bolts	13	1.3	10	
36	Fork protector socket bolts	7.0	0.7	5.2	NOTE 4
37	Left/right muffler clamp bolt	20	2.0	15	
38	Driven sprocket nuts	32	3.3	24	NOTE 1
39	Seat mounting bolts	26	2.7	19	
40	Front brake reservoir cap screws	1.0	0.1	0.7	
41	Rear brake reservoir cap bolts	1.0	0.1	0.7	
42	Fork air pressure release screw	1.3	0.1	1.0	
43	Right/left muffler mounting bolt A	26	2.7	19	
	Right/left muffler mounting bolt B	26	2.7	19	
44	Throttle cable adjuster lock nuts	4.0	0.4	3.0	
45	Rear master cylinder push rod lock nut	5.9	0.6	4.4	
46	Shroud A bolts	10	1.0	7	
47	Shroud B bolts	10	1.0	7	
48	Shroud C bolts	5.2	0.5	3.8	
49	Shroud D bolts	5.2	0.5	3.8	
50	Engine guard A bolts/washers	10	1.0	7	
	Engine guard B bolt/washer	10	1.0	7	
52	Side cover bolts	10	1.0	7	
53	Air cleaner housing cover bolts	10	1.0	7	
54	Number plate bolts	10	1.0	7	
55	Air cleaner retaining bolt	2.4	0.2	1.8	
56	Seat support base mounting bolts	10	1.0	7	
57	Battery cable terminal bolt	7	0.7	5.2	
58	Start magnetic switch stay bolt	12	1.2	9	

NOTES: 1. U-nut
4. Alock bolt: replace with a new one.

Petrol Containing Alcohol

If you decide to use a petrol containing alcohol (gasohol), be sure its octane rating is at least as high as that recommended above.

There are two types of gasohol: One contains ethanol, and the other contains methanol. Do not use gasohol that contains more than 10% ethanol. Do not use gasohol that contains methanol (methyl or wood alcohol) unless it also contains cosolvents and corrosion inhibitors for methanol. Never use petrol containing more than 5% methanol, even if it has cosolvents and corrosion inhibitors.

Engine performance problems resulting from the use of fuels that contain alcohol are not covered under the warranty. Honda cannot endorse the use of fuels containing methanol since evidence of their suitability is not yet complete.

Before buying fuel from an unfamiliar station, try to find out if the fuel contains alcohol. If it does, confirm the type and percentage of alcohol used. If you notice any undesirable operating symptoms while using a petrol that contains alcohol, or one that you think contains alcohol, switch to a petrol that you know does not contain alcohol.

Competition Logbook

Any serious competition effort relies heavily on the knowledge gained and compiled from previous racing events. The best way to organize the many bits of information is to record them in a logbook.

Your logbook can include such information as suspension adjustments, gearing, and tyre selection. This detailed information, along with your comments, can prove valuable when you compete at the same track or on similar terrain.

Your logbook can also tell you when maintenance was performed and when it will be necessary again. Your logbook also lets you record any repairs and lets you keep track of the running time on the engine and suspension components.

If you choose to sell your CRF, the accurate maintenance records in your logbook might be the deciding deal-maker for a potential buyer.

Consider using different colour pens or pencils to record important information on specific subjects. For example, record results in black, suspension/chassis settings in blue, and gearing selections in green. Colour codes will help you identify the information you want with a glance.

Tuning & Adjustment Records

Keep track of the settings and adjustments that worked best at a particular location. These items include:

- PGM-FI mode
- HRC-launch control system
- basic track conditions, altitude, and temperature
- suspension settings
- chassis adjustments tested and selected
- gearing
- tyre selection
- air pressure

Competition Records

- your placings
- thoughts to improve performance next time: both yours and your CRF's
- strategy notes

Maintenance Records

- regular interval maintenance
- repairs
- running time on engine
- running time on suspension components

Timekeeping

This Manual lists maintenance intervals for every-so-many races (CRF450RX)/heats (CRF450R) or every-so-many hours of running.

Because all races (CRF450RX)/heats (CRF450R) are not the same, the most effective way to schedule maintenance is by the hours you have run your CRF.

An official “guesstimate” is close enough for our timekeeping purposes. You may choose to record your time the same way aircraft operators do (but without the benefit of an electrical hourmeter). All running time is broken down into hours and tenths of an hour (each 6 minutes represents one tenth of an hour).

Racing Records

Information worth recording for this section of your logbook may include:

- Your placing in each race (CRF450RX)/heat (CRF450R) and overall finishing position.
- Thoughts on what you could do to improve your performance next time.
- Notes on any patterns noted in choice of starting gate positions or in riding portions of the course as the day progressed that may prove helpful in future events.
- Any places on the course where you chose the wrong line and were passed too easily.
- Notes on strategy used by your competition or by riders in another event that are worth remembering.

Maintenance Records

Regular maintenance items you'll want to record in your logbook should include:

- Dates and results of cylinder, piston and ring examinations
- Patterns for frequency of need for decarbonization with a particular oil
- When you last performed shock linkage and swingarm pivot bearing maintenance
- Engine and suspension oil changes
- Chain, sprocket, chain roller and slider replacements
- Coolant changes and related component replacements
- Spark plug, brake pad and control cable replacements

In addition, you should record any irregularities noted in component wear so you'll remember to keep a close eye on these areas in the future.









184 Technical Information



Optional Parts List

These parts and tools may be ordered from your authorized dealer.

FRAME	Remarks
Driven sprocket	< >: Drive chain links
Standard	CRF450RX: 50 Teeth, Aluminium CRF450R: 49 Teeth, Aluminium <114>
Optional	CRF450RX: 49 Teeth, Aluminium CRF450R: 48 Teeth, Aluminium CRF450RX: 51 Teeth, Aluminium CRF450R: 50 Teeth, Aluminium
Drive chain size/link	CRF450RX: RK520EXU/120LJFZ CRF450R: RK520TXZ/120RJ

TOOLS	Remarks
Pin spanner A 	To adjust spring preload. (two spanners required)
Workstand 	For maintenance
Air gauge	For checking tyre air pressure

FRAME	Remarks
Fork spring	
Standard (Medium)	CRF450RX: 4.8 N/mm (27.4 lbf/in)  1 scribe mark or no mark (factory products) CRF450R: 5.0 N/mm (28.6 lbf/in)  2 scribe marks or no mark (factory products)
Optional Soft	CRF450RX: 4.6 N/mm (26.3 lbf/in)  1 scribe mark CRF450R: 4.8 N/mm (27.4 lbf/in)  1 scribe mark
Stiff	CRF450RX: 5.0 N/mm (28.6 lbf/in)  2 scribe marks CRF450R: 5.2 N/mm (29.7 lbf/in)  3 scribe marks

FRAME	Remarks
Shock spring	
Standard (Medium)	CRF450RX: 52 N/mm (296.9 lbf/in) CRF450R: 56 N/mm (319.8 lbf/in)  CRF450RX: Red paint or no mark (factory products) CRF450R: Blue paint or no mark (factory products)
Optional Soft	CRF450RX: 50 N/mm (285.5 lbf/in) CRF450R: 54 N/mm (308.3 lbf/in)  CRF450RX: Pink paint CRF450R: White paint
Stiff	CRF450RX: 54 N/mm (308.3 lbf/in) CRF450R: 58 N/mm (331.2 lbf/in)  CRF450RX: White paint CRF450R: Yellow paint

The standard fork spring and shock spring mounted on the motorcycle when it leaves the factory are not marked. Before replacing the springs, be sure to mark them so they can be distinguished other optional springs.

Spare Parts & Equipment

There are numerous spare parts you can take to an event to help ensure you get in a full day of riding. In addition to the usual nuts and bolts, consider the following:

Spare Parts

spark plugs
air cleaner (clean & oiled, sealed in a plastic bag)
chain & masterlinks
chain guide slider
chain guide
chain rollers
inner tubes (front & rear)
fenders
footpegs
fuel feed hose
fuel pump filter
number plate & side covers
handlebar
grips
levers (brake & clutch)
clutch lever handlebar mount
clutch cable
throttle assembly
throttle cable
shift lever
brake pedal
spokes (front & rear, each side)
sprockets (larger & smaller than standard)
assorted nuts, bolts, washers, screws, cotter pins

Additional Spares

fuel pump
front brake master cylinder
rear brake assembly
wheels & tyres (front & rear, mounted)
clutch discs and plates
engine oil
seat
ignition components
radiator hoses
radiator shrouds (L & R)
brake hoses (front & rear)

General Tools

sockets (3/8 in drive)
screwdrivers: blade & Phillips No. 1, 2, 3
wrench, large adjustable
wrenches: open end & box
wrenches: hex (Allen)
wrench, spoke
torque wrench (metric scale, click-stop style)
pliers: standard, needle-nose, channel-lock set
hammer, plastic head
syringe with adjustable stop
air pressure gauge
tyre irons
tyre pump or air tank
feeler gauge set
Vernier caliper (metric)
pressure/vacuum testing equipment

Honda Special Tools

Any special tools for your CRF purchased from your dealer.

• Tensioner stopper	070MG-0010100
• Lock Nut Wrench	07WMA-KZ30100
• Spoke Wrench	07JMA-MR60100
• Spoke Wrench	070MA-KZ30100
• Piston Base	07958-2500001
• Fork Rod Holder	07AMB-KZ3A100

You can purchase the PGM-FI setting tools [1] and [2] from your CRF dealer.

[1] Serial-USB unit assy	38880-N1C-770
[2] Data Setting Tool Application CD-ROM	38772-NX7-040


Chemical Products

Honda “4-STROKE MOTORCYCLE OIL” or equivalent
(Engine Oil)
SAE 80 or 90 gear oil
Pro Honda HP Fork Oil, A15-00
DOT 4 Brake Fluid
Drive chain lubricant.
Honda Foam Air Filter Oil
Honda Dielectric Grease
Hand Grip Cement
Honda Thread Lock
Molybdenum disulfide grease (containing more than 3% molybdenum disulfide additive)
Honda White Lithium Grease
Multi-Purpose Grease
Rust-inhibiting Oil
Cable Lubricant
High quality ethylene glycol antifreeze containing corrosion protection inhibitors
Urea based multi-purpose grease designed for high temperature, high pressure performance (example: EXCELITE EP2 manufactured by KYODO YUSHI, Japan or equivalent)

Other Products

pliers-safety wire
safety wire
mechanic’s wire
duct tape
plastic wire bands
hose clamps
drop light
electrical tape
Scotch-Brite Hand Pad #7447 (maroon)
Teflon tape

Wiring Diagram

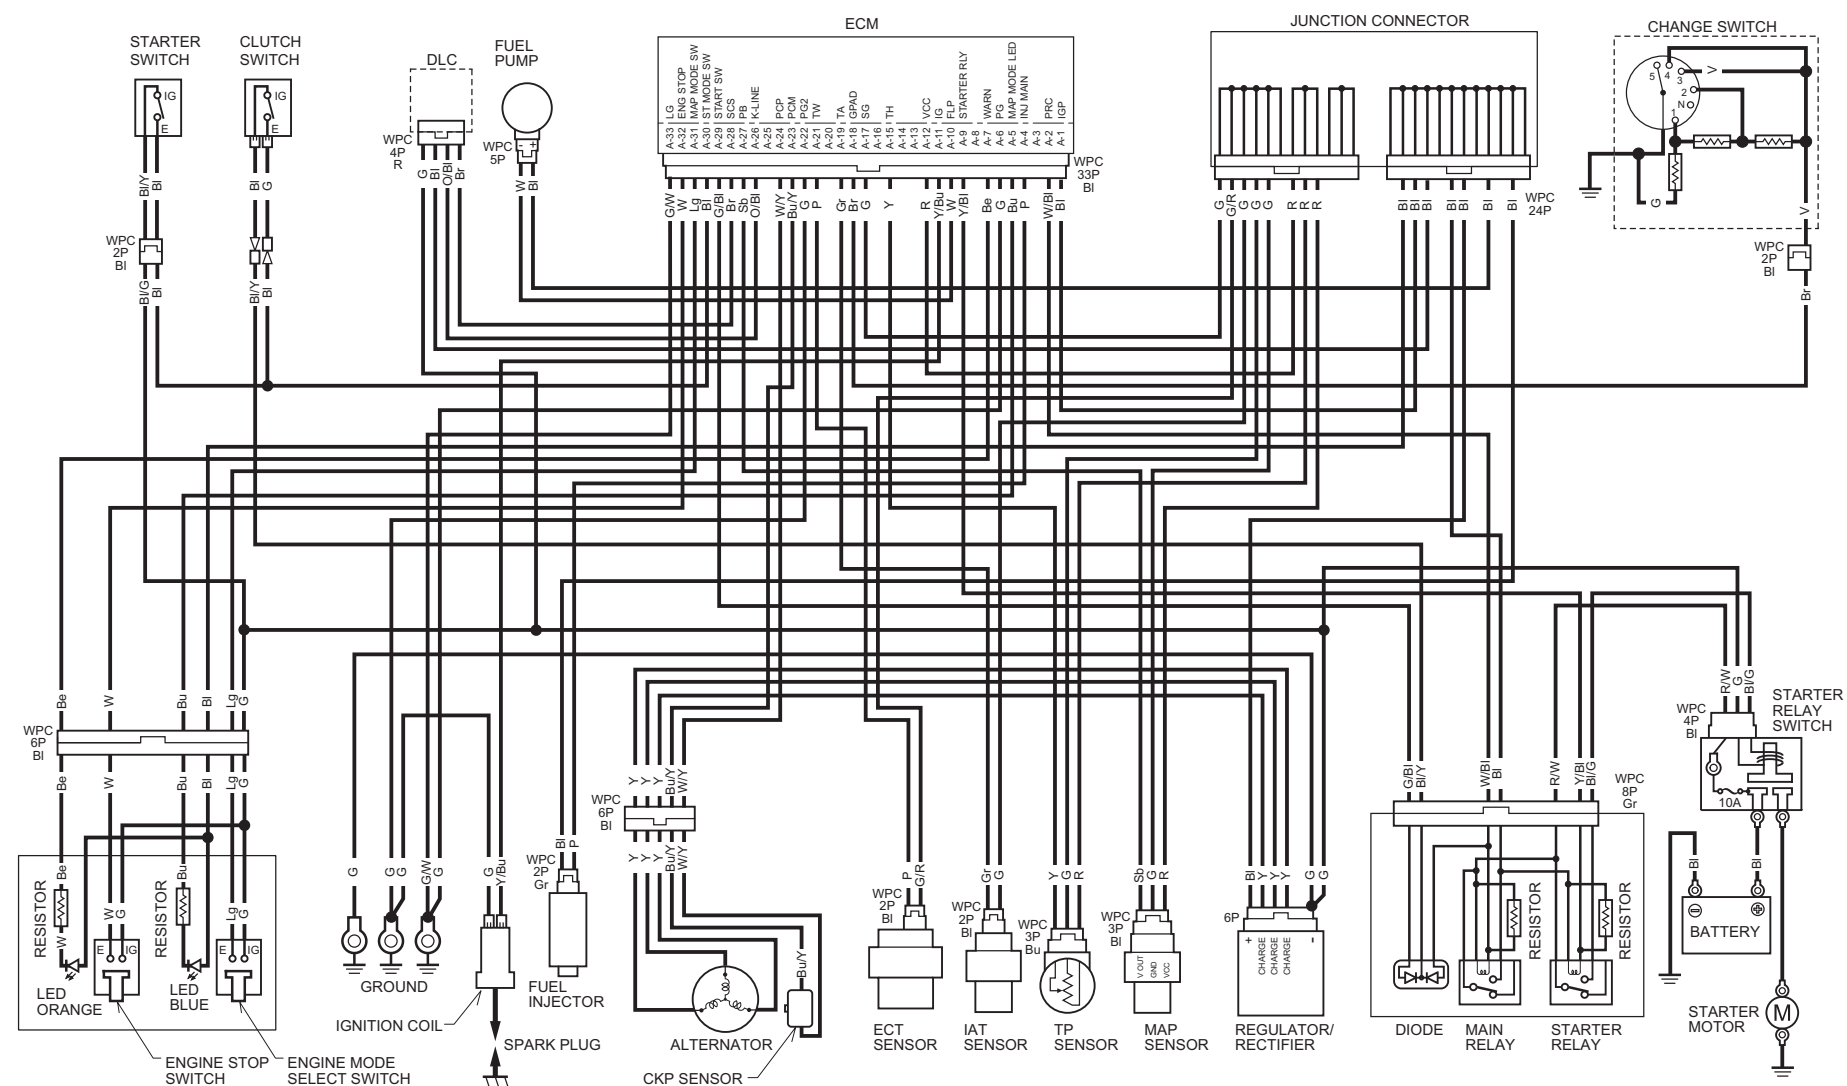

STARTER SWITCH			CLUTCH SWITCH			ENGINE STOP SWITCH			ENGINE MODE SELECT SWITCH		
	E	IG		E	IG		E	IG		E	IG
PUSH	○	○	FREE	○	○	PUSH	○	○	PUSH	○	○
FREE			PUSH			FREE			FREE		
COLOUR	BI	BI/Y	COLOUR	G	BI	COLOUR	W	G	COLOUR	Lg	G

BI	Black	O	Orange
Be	Beige	P	Pink
Br	Brown	R	Red
Bu	Blue	Sb	Sky blue
G	Green	W	White
Gr	Gray	Y	Yellow
Lg	Light Green	V	Violet

COLOUR COMB : GROUND/MARKING

Index

A

accessories 3
adjustments,
 chassis 159
 control freeplay 74, 77, 118
 for competition 141
 gearing 160
 personal fit 162
 suspension, front 145
 suspension, rear 149
 suspension, track conditions 154
 tyre selection, track conditions 161
after competition maintenance 36
air cleaner 71
air pressure,
 front suspension 145
 tyres 123
apparel, protective 2
appearance care 138

B

basic operation 19
battery 136
before riding 15
between Races (CRF450RX)/
Heats (CRF450R) & Practice Maintenance 35
brakes,
 fluid level 119
 lever, front adjustment 118
 pad wear 121
 pedal height 118
break-in guidelines 24

C

capacity, fuel 46, 56
care, appearance 138
chain drive 126
chassis adjustments 159
cleaner, air 71
cleaning, appearance care 138
clutch system, adjustment 77
competition logbook 183
controls 9
coolant 69
cylinder system 94

D

damping adjustments,
 front 145, 146
 rear 150
diagram, wiring 187
drive chain 126

E

engine,
 does not start 169
 flooded 22
 idle speed 76
 lacks power 169
 mode indicator 14
 mode select button 142
 number 176
 oil 66
 pinging 46, 56
 stop button 22
 stopping 22
environment, protecting 168

F

filter,
 air 71
 fuel pump 50, 60
 oil 67
flooded engine, starting 22
fork,
 front suspension adjustment 145
 front suspension inspection 101
 oil recommendation 104
front brake lever adjustment 118
front suspension adjustments 145
fuel 46, 56
fuel,
 line inspection 46, 56
 line replacement 47, 57
 refuelling 46, 56
 system 46, 56
 tank capacity 46, 56

Index

G

gap, spark plug.....	82
gasohol	182
gearing	160
guidelines, suspension adjustment.....	155

H

handlebar inspection.....	134
HRC-launch control system	143

I

identification, vehicle	176
idle knob, fast	21
idle speed, engine.....	76
indicator, circuit inspection	12
DTC index	13
engine mode.....	14, 142
launch control system	143
MIL blink	11
inspection, pre-ride.....	17
instruments	9

L

labels (ED type)	4
labels, safety (U type).....	8
launch control system indicator	14
logbook, competition	183

M

maintenance, after competition	36
before & after competition	35
between Races (CRF450RX)/ Heats (CRF450R) & Practice Maintenance	35
component locations	37
general competition	31
importance	26
safety	27
schedule.....	28
mode indicator	14, 142
modifications	3

O

oil, engine	66
fork	104
operating instructions	19
operation component locations	10
optional, parts list	185
sprockets	160

P

pads, brake.....	121
parts, optional	185
personal fit adjustments	162
petrol.....	46, 56
petrol containing alcohol.....	182
pinging, engine	46, 56
plug, spark	82
pre-load, rear suspension.....	149
pre-ride inspection.....	17
protective apparel	2

R

rear suspension adjustments	149
riding, apparel.....	2
basic operation	19
before	15
important safety information	2
important safety precautions.....	2

S

safety, a few words about.....	Safety Messages
important information	2
important precautions	2
labels (U type).....	8
maintenance	27
riding precautions	20
schedule, maintenance	28
seat.....	38
serial numbers.....	176
side stand (CRF450RX).....	125
spare parts.....	186
spark knock	46, 56
spark plug, maintenance	82
reading.....	158
specifications	177
spring pre-load, rear suspension	149
starting, engine.....	21
troubleshooting.....	169
steering stem inspection.....	134
stopping engine	22
storage.....	167
subframe.....	43

(cont'd)

Index

suspension adjustment,	
for track conditions	154
front	145
guidelines.....	155
rear	149
suspension,	
front	101
rear	117

T


throttle,	
freeplay.....	74
inspection.....	75
tools	186
torque specifications,	
engine.....	179
frame	180, 181
transporting.....	166
troubleshooting	169
tubes, replacing	123
tuning tips.....	158
tyres,	
air pressure.....	123
flat.....	123
for track conditions.....	161
selection.....	124

V

valve clearance.....	83
vehicle identification no. (VIN).....	176

W

washing your motorcycle	138
wheels	122
wiring diagram.....	187

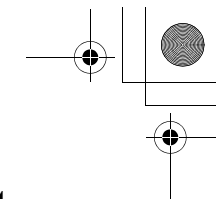

Manufacturer, Authorised Representative and Importer for EU Market

Manufacturer	Authorised Representative and Importer for EU Market
Honda Motor Co., Ltd. 2-1-1, Minami-Aoyama, Minato-ku, Tokyo, 107-8556, Japan	Honda Motor Europe Ltd. Cain Road, Bracknell, RG12 1HL (United Kingdom)

